



Asus ROG GL551J RAM Replacement

Use this guide to replace the RAM on your Asus...

Written By: Jason Nguyen



INTRODUCTION

Use this guide to replace the RAM on your Asus ROG GL551J. Make sure that any new RAM has a DDR3 connection type to correctly fit into this device.

TOOLS:

[Mako Driver Kit - 64 Precision Bits](#) (1)

PARTS:

[Asus ROG GL551J compatible RAM](#) (1)

Step 1 — Battery



- Lay the device on a flat surface with the battery facing up.
- ⓘ Be sure to wear ESD or Rubber gloves to protect the computer components.

Step 2



- Push the latch found below the battery to the unlock position.

Step 3



- Pull the battery out.

Step 4 — RAM



- Remove the two screws securing the access panel to the laptop.

Step 5



- Slide access panel out and remove.

Step 6



- Place thumbs on the locking tabs of both sides of the RAM stick and push outwards to unlock.

Step 7



- RAM should pop up at about 45 degrees. Pull outwards with fingers on the side of the RAM to remove.

Congratulations, you now know how to replace the RAM sticks for your Asus ROG GL551J laptop, and this process can also apply to other similar laptops that you may acquire in the future.