



# Panasonic Lumix DMC-ZS40 Battery Replacement

This guide will explain how to replace the battery for the Panasonic Lumix DMC-ZS40.

Written By: Dean Favetta



## INTRODUCTION

Follow this guide if you need assistance to replace your Panasonic Lumix DMC-ZS40 battery. The battery may need to be replaced if your camera is consistently dying before its full lifespan is used up, or if it doesn't turn on at all.

## Step 1 — Battery




- Find the battery/memory card door on the bottom right of the camera.
- Use your finger or screw driver to slide the grey latch from the locked position to the open position. This will swing open the door.

## Step 2



- Push up on the right-hand-side tab to release the battery.

### Step 3

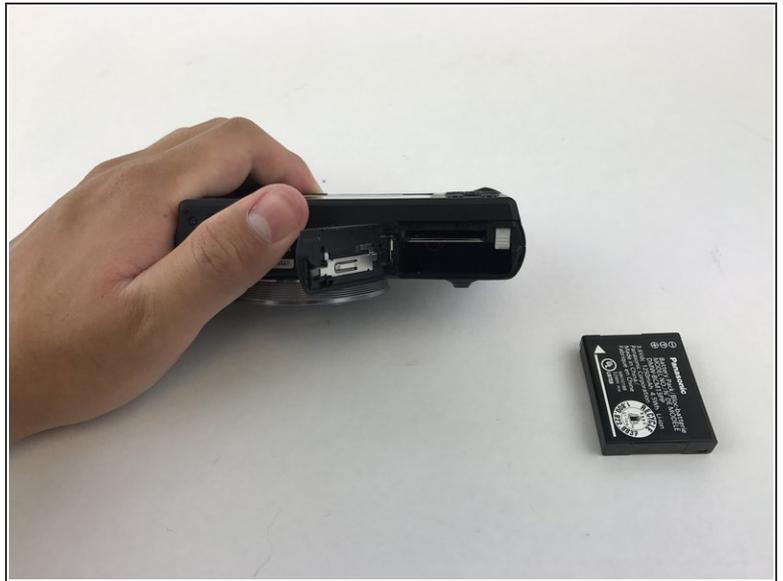

- Remove battery from camera.

Follow these instructions in reverse order to replace the battery and reassemble.