



Replacement Ram

Replacing Ram Components due to broken or malfunction hardware.

Written By: Eric Martinez





TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Ram



 
 
- Turn the laptop upside down. Locate a removable cover, that is screwed shut near the front right of the laptop which is upside down.

Step 2




- After removing the screw, using your finger slowly lift out and remove the cover.

Step 3

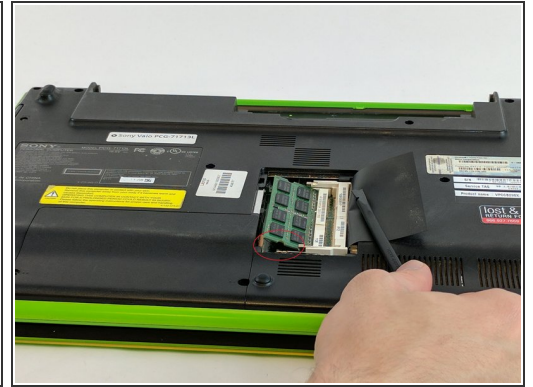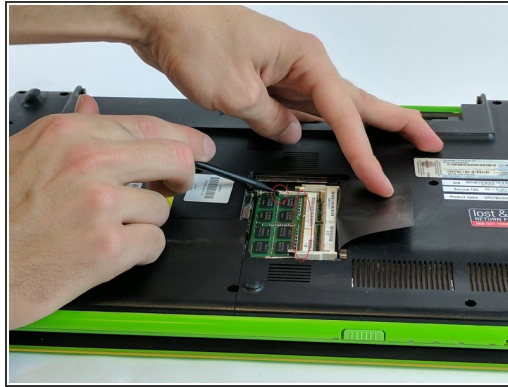

- Lift the flap
- Locate two connectors on both ends of the short end. This will release the ram, if properly done the long end should slightly lift.
- The ram is to be removed at a 45 degree angle.

 Step 4

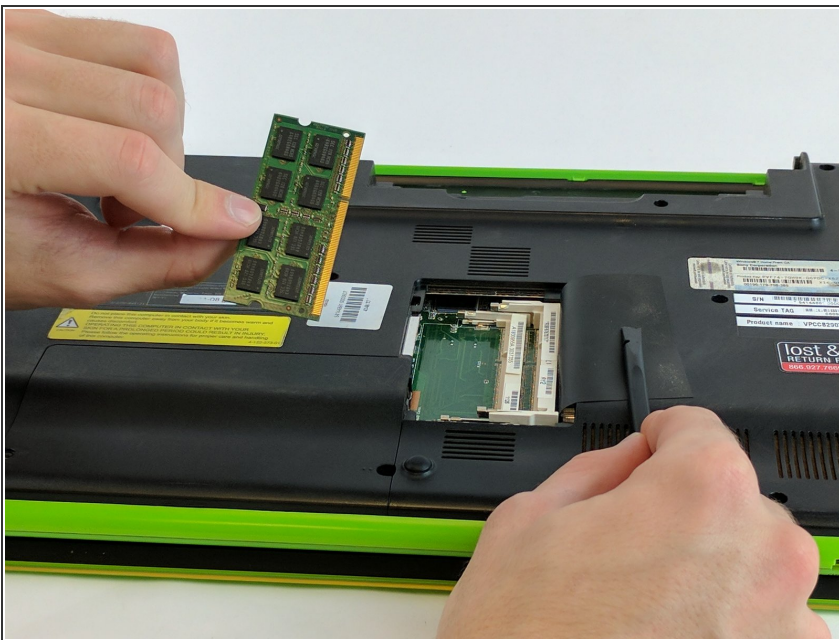

- Pull out cleanly and you have now successfully removed the ram.

To reassemble your device, follow these instructions in reverse order.