


# **HP Split x2 Battery Replacement**

Easy step by step process to replace the battery.

Written By: Alvaro Esperanca

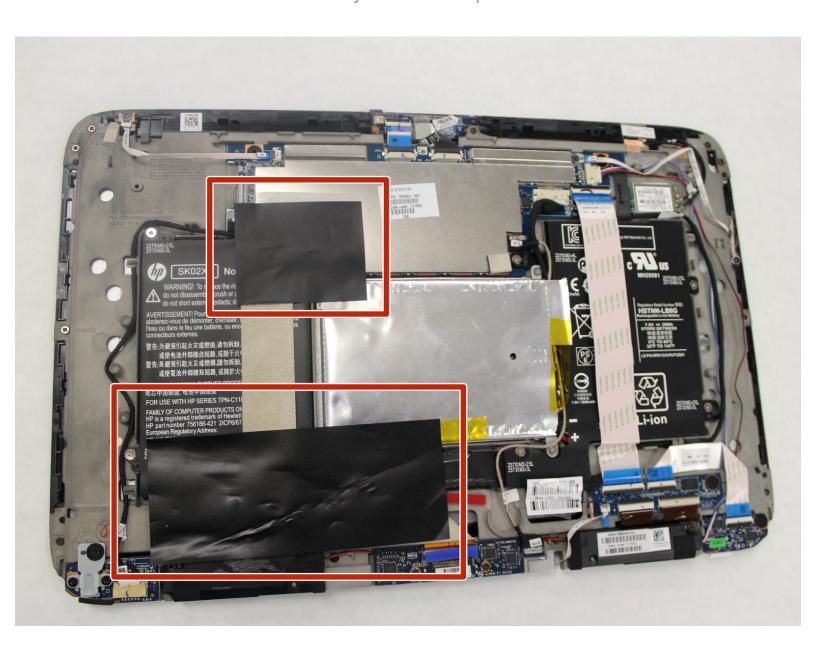

## **INTRODUCTION**

This is a step by step guide on replacing an old or damaged battery of an HP Split x2 with a new battery unit.



# TOOLS:

- Tweezers (1)
- iFixit Opening Tools (1)
- 64 Bit Driver Kit (1)

### Step 1 — Rear Cover



- Opening the device voids the manufacturer warranty.
- Power down the HP Split x2 before beginning the repair
- Separate the tablet from the keyboard by pushing the slider to the left and lifting the tablet from the keyboard.

### Step 2







- Remove the four white caps on the bottom edge of the tablet.
- Use a tweezer to grasp white caps.
- (i) The white caps are easily lost. Store them in a secure place.




 Use a Phillips #000 screwdriver to remove the four 3mm screws.

## Step 4






- Use a plastic opening tool to pry the tabs on the top, left and right sides of the tablet.
- (i) Only the top and sides have tabs. Remove all tabs before lifting screen.

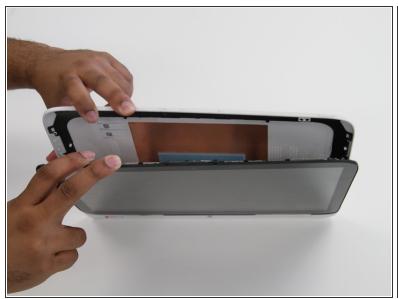



- Separate the cover and the screen.
- Gently lift the screen out of the cover.

# Step 6 — Battery

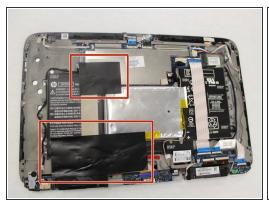







Remove black stickers




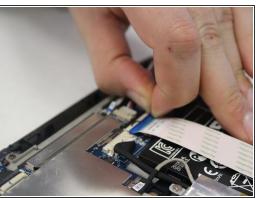

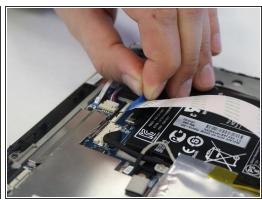


- Pull on the blue ribbon to disconnect the cable
  - (i) Disconnect both ends of the cable

## Step 8

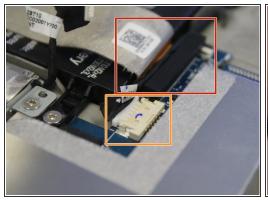





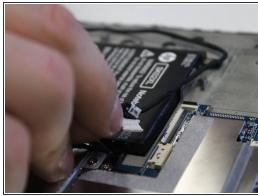

- Flip up the retaining flap with either a spudger or your fingertips.
- Disconnect the ribbon cable by gently pulling on it.
- Disconnect the sliding connector with the pointed tip of the spudger and gently remove the cable.




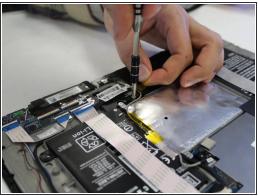

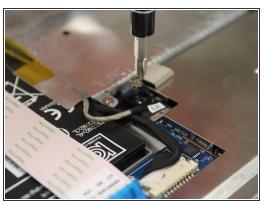

Remove all eight 3mm Phillips screws using a J1 screw head.

## Step 10

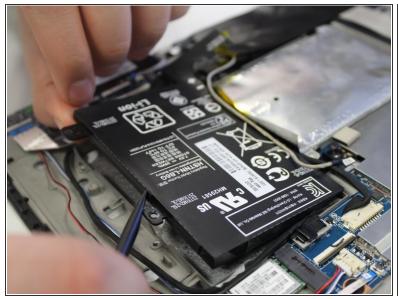



- Gently lift up the battery as a whole
  - (i) Make sure the battery is free to move on both ends.
  - (i) Battery has two cells connected by a bridge making it a unit.

To reassemble your device, follow these instructions in reverse order.