



Samsung Galaxy Tab S2 9.7 AT&T Headphone Jack Replacement

A broken headphone jack means that audio from...

Written By: Joy Harris



INTRODUCTION

A broken headphone jack means that audio from your headphones is poor or nonexistent.

TOOLS:

[iOpener](#) (1)

[Magnetic Project Mat](#) (1)

[Suction Handle](#) (1)

[iFixit Opening Tool](#) (1)

[Heat Gun](#) (1)

[Precision Tweezers Set](#) (1)


[Phillips #000 Screwdriver](#) (1)

Step 1 — Screen




- Apply the heat gun around the edges of the tablet to melt the adhesive glue.
- ① Do not allow the gun to remain still for more than two seconds, so that you do not melt the plastic around the screen.
- ① If you do not have access to a heat gun, you may also use an iOpener or a hair dryer. Refer to the [iOpener guide](#) for extra help.

Step 2

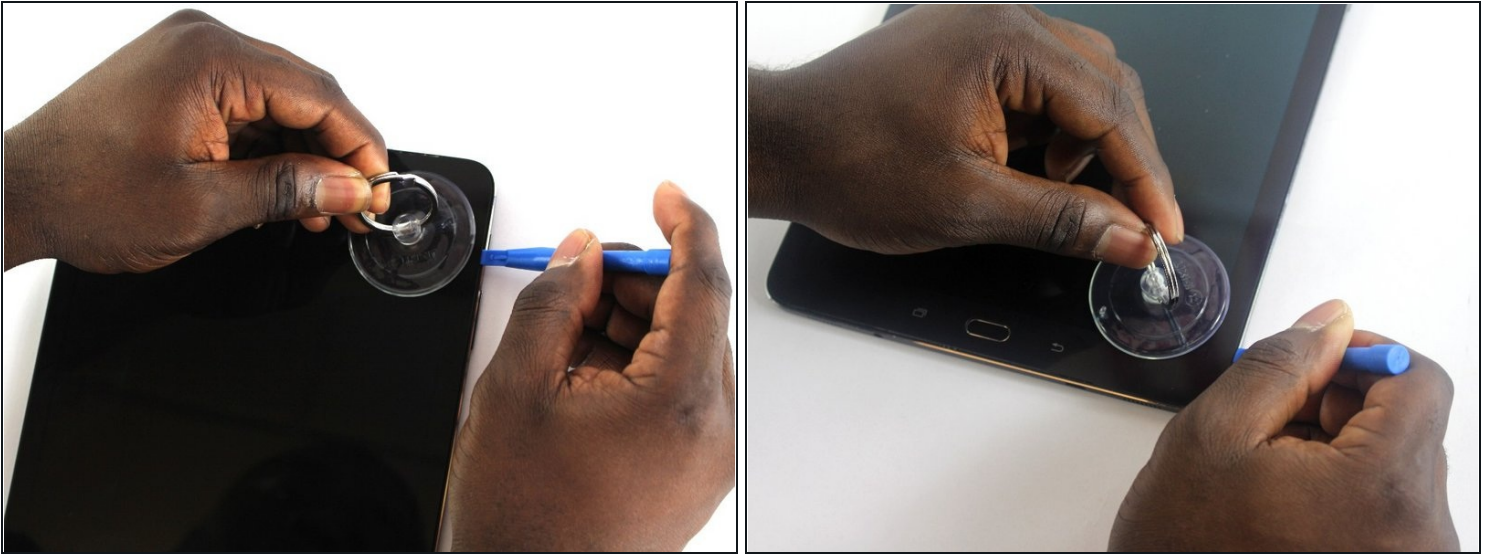

- Apply the suction to the bottom or top right corner.
- Use the plastic opening tool at several points around the screen while the suction is being applied to pop the screen out.


Step 3

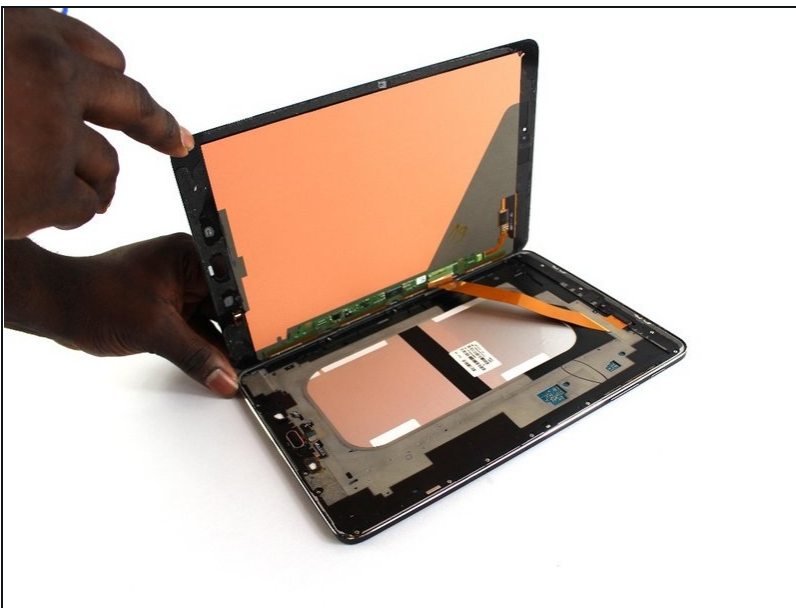

- Once the screen is detached, open the tablet like a book.


⚠ Gently open the tablet, and do not pull the pieces apart since you can risk damaging the orange ribbon cable.

Step 4

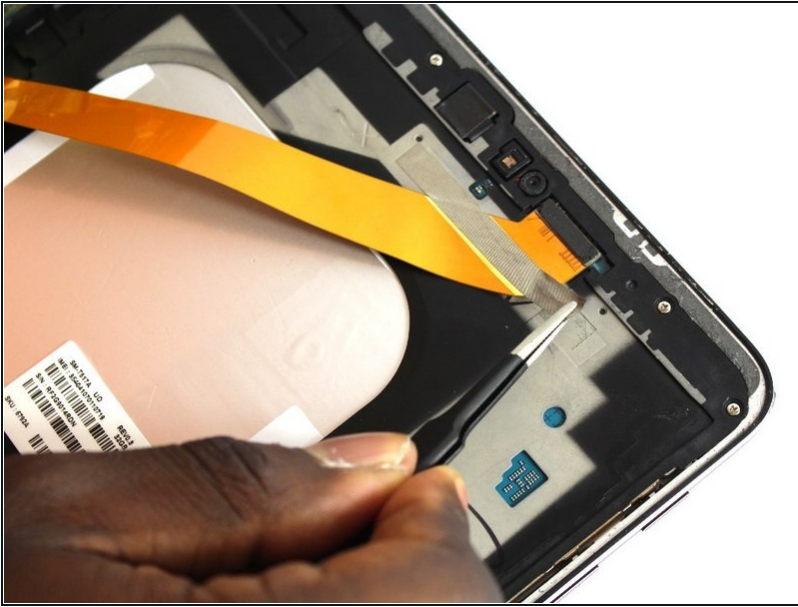


- Using the precision [tweezers](#), remove the silver tape that is holding the orange ribbon cable connecting the two pieces.

Step 5

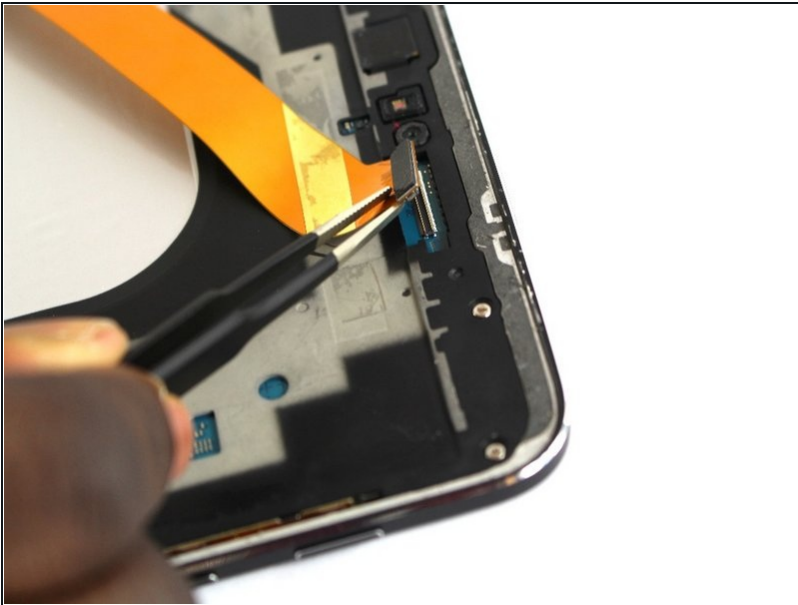

- Using the precision tweezers, remove the small press-fit connector from the body of the tablet.

Step 6 — Screws

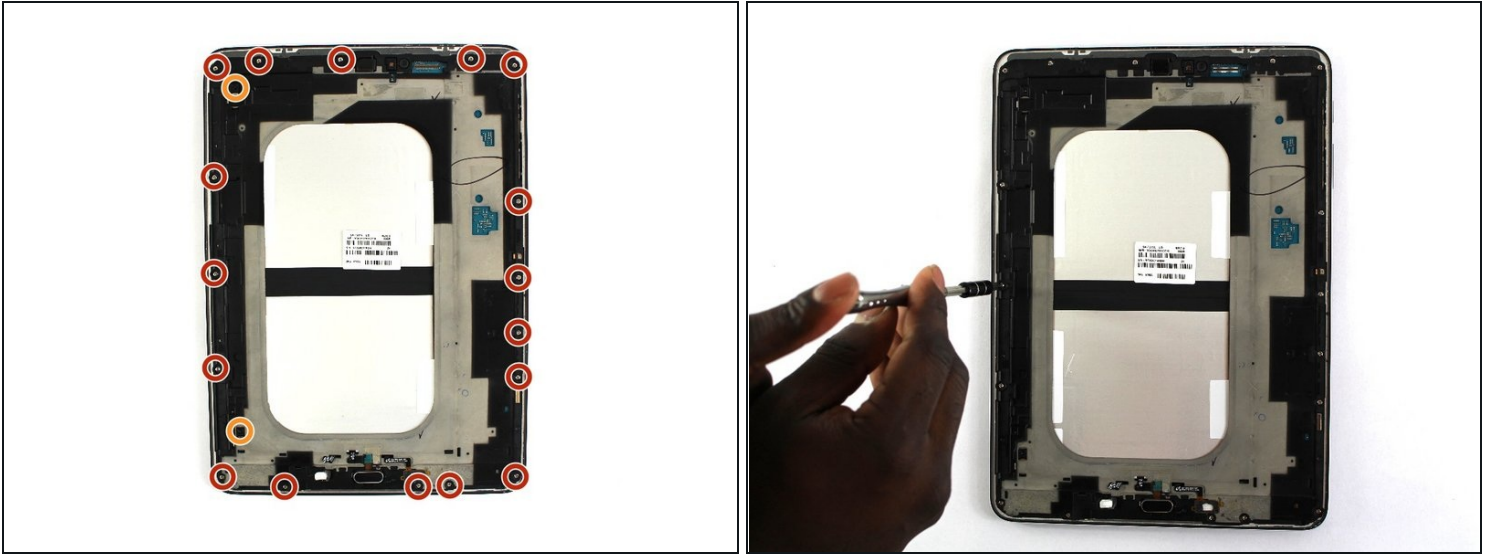

- Using the Philips #000 screwdriver, remove the seventeen 2.74 mm screws around the edges.
- Remove the two 2.74 mm black screws in the middle of the tablet with the Philips #000 screwdriver.
- ① Put the screws on a magnetic project mat or in a container so that you do not lose them.

Step 7




- Take the plastic opening tool around the tablet to remove the motherboard from the device.

Step 8 — Headphone Jack




- Locate the headphone jack towards the bottom right-hand side.
- Using the plastic opening tool, lift up the press-fit connector.

Step 9

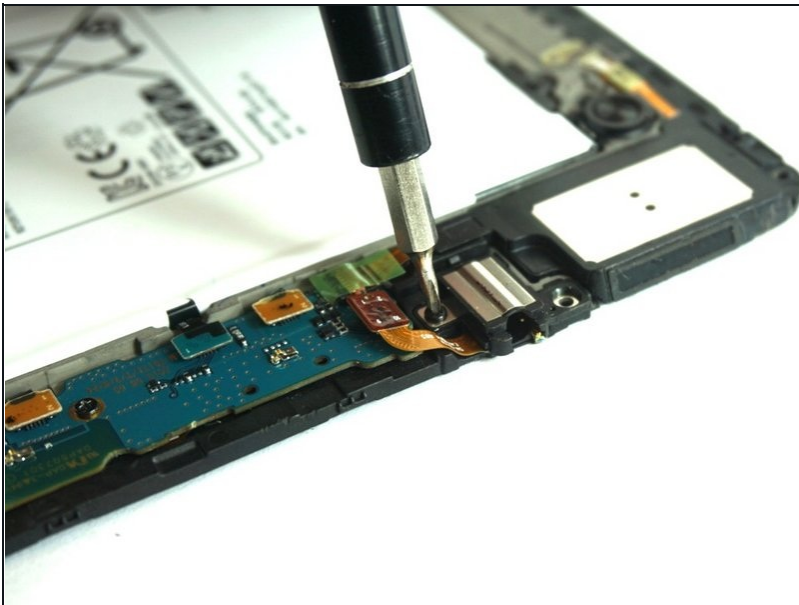

- Using the Phillips #000 Screwdriver, remove the 2.74 mm black screw next to the headphone jack.

Step 10

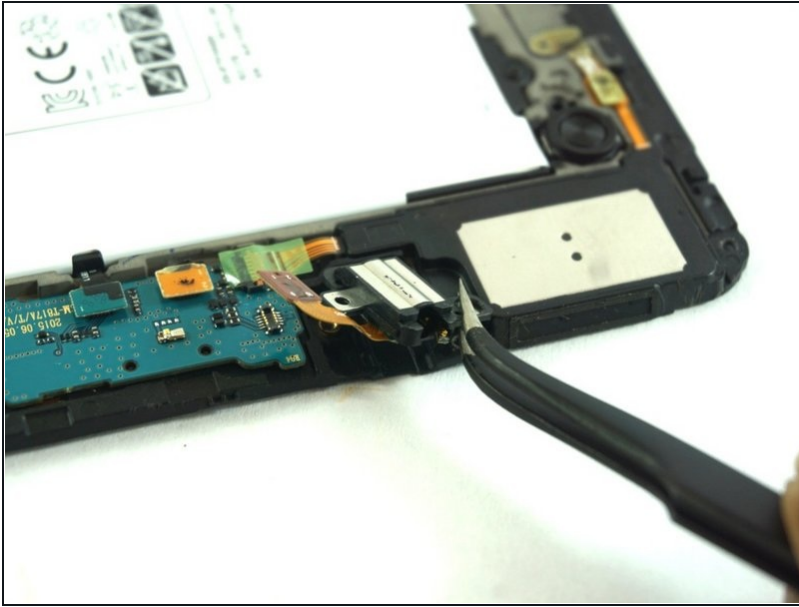

- Using the precision [tweezers](#), remove the headphone jack.

To reassemble your device, follow these instructions in reverse order.