



# Acer Aspire 5536 Display Replacement

A brief tutorial on how to install a replacement LCD screen.

Written By: TechStem






## TOOLS:


- [Essential Electronics Toolkit](#) (1)
-

## Step 1 — Display

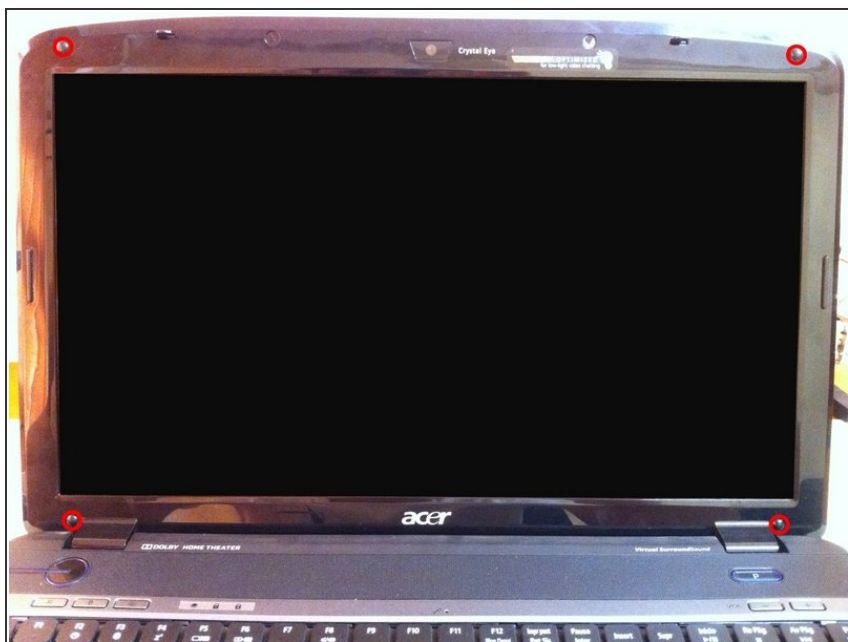

- Remove the 4 rubber supports from the screen. Then remove the screws underneath.


## Step 2

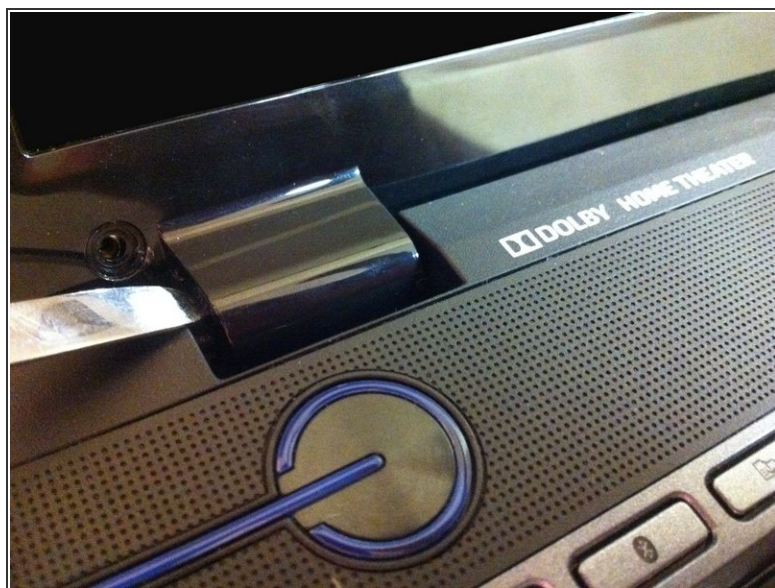

- With a spudger, release the clips that hold the plastic frame to the back cover.
- Be careful while handling the bottom part, specially with the hinges, as there are cables inside.



## Step 3

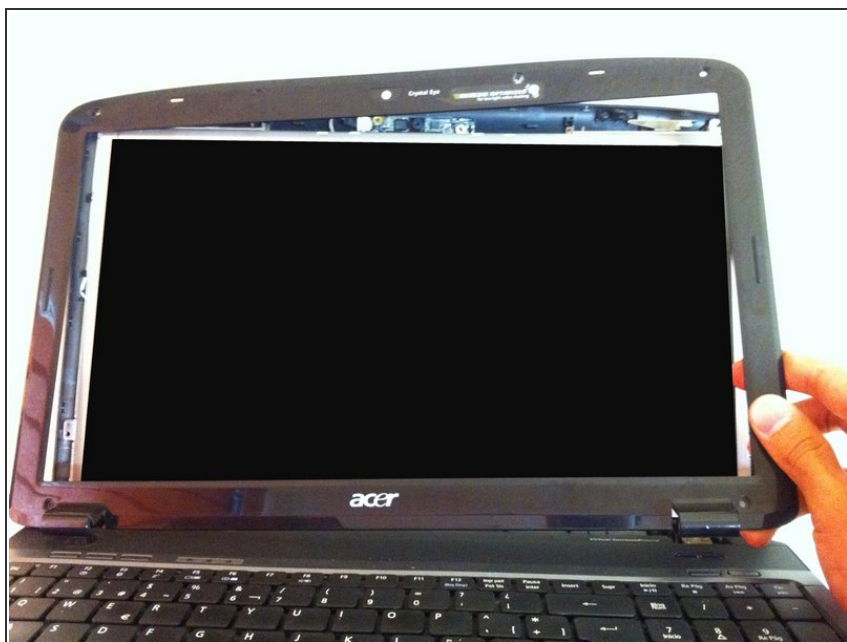



- When all the clips are out, the entire plastic frame should come out easily.

## Step 4




- Carefully disconnect the camera cable.

## Step 5

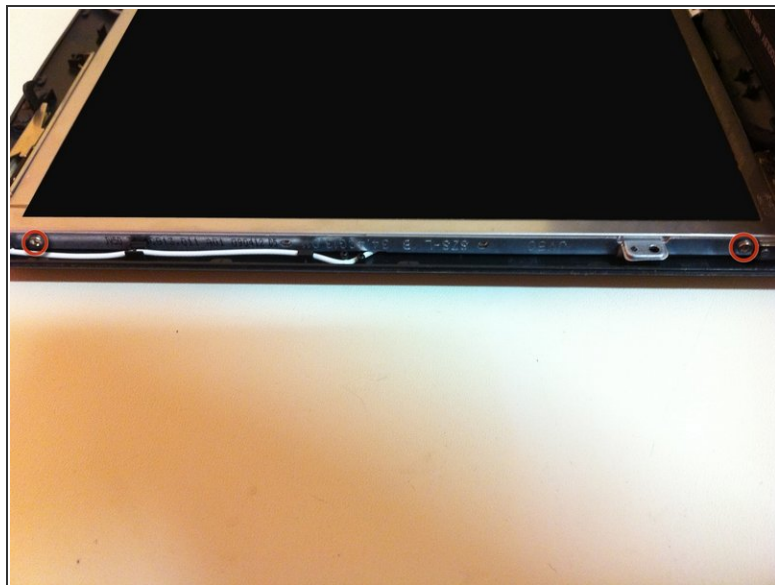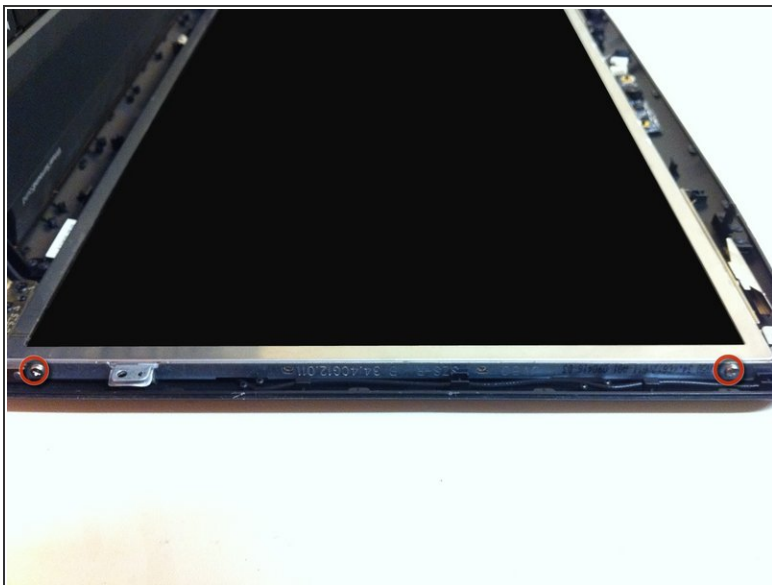




- Remove the 4 screws located in the sides of the LCD screen.

## Step 6

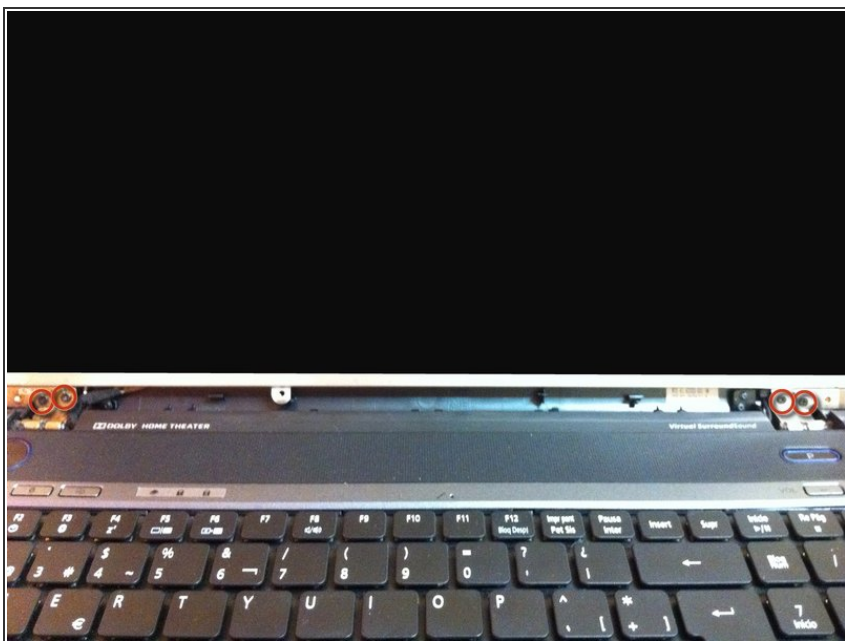


- Remove the other 4 screws that secure the metal LCD frame to the hinges.

## Step 7

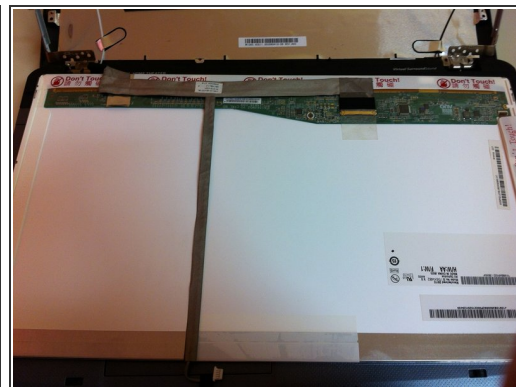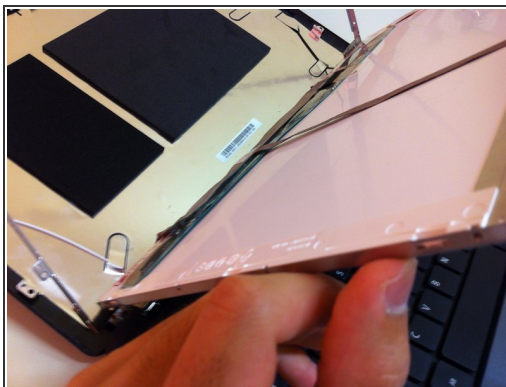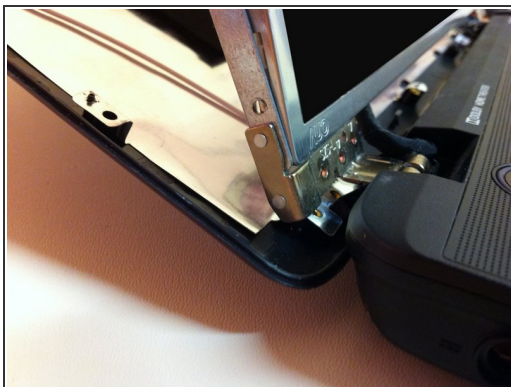

- Take the LCD screen out of the metal frame and flip it towards the keyboard.

## Step 8


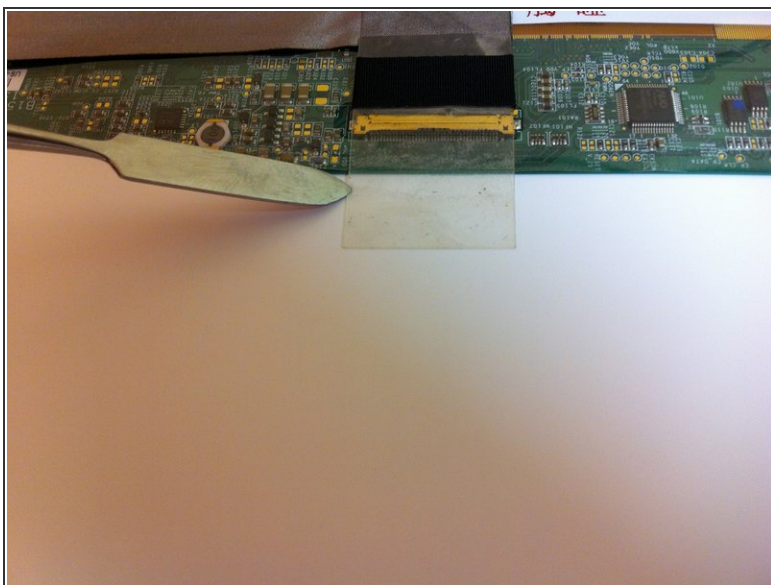


- Remove the tape that holds the display cable.

⚠ Be careful not to take the entire tape away, as this may cause severe damage to the cable.





## Step 9

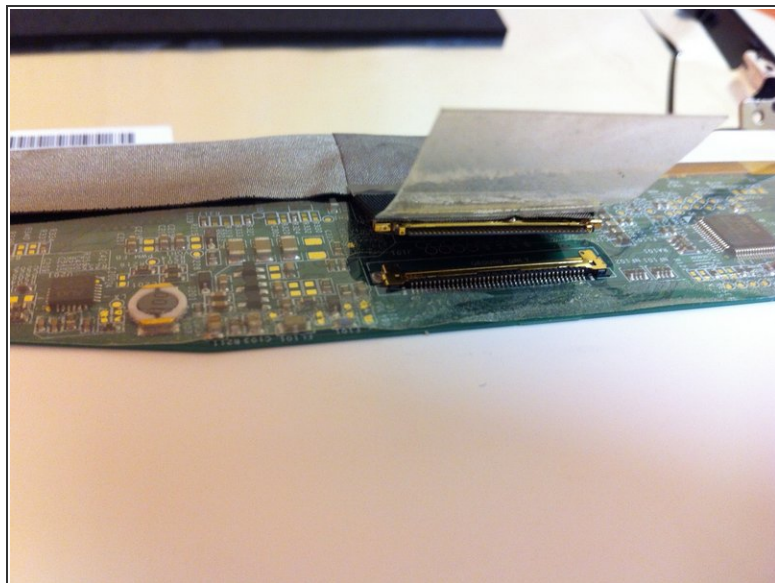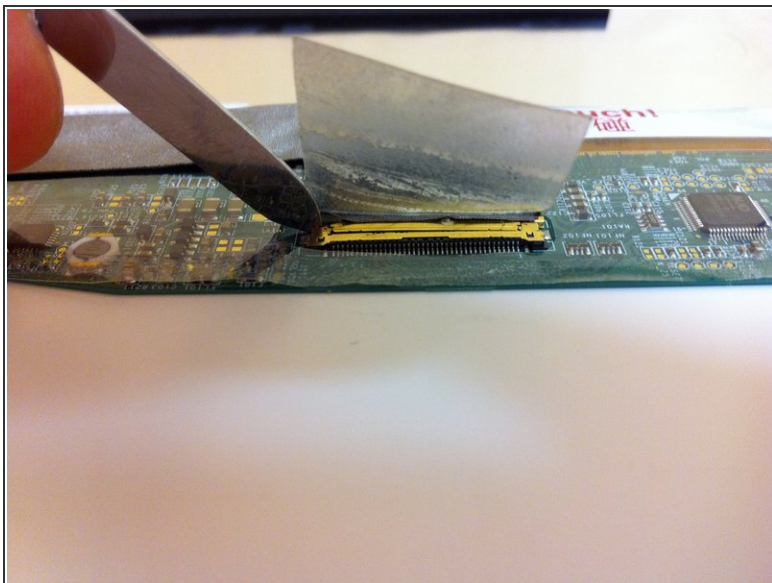

- Carefully disconnect the cable with a spudger.

## Step 10

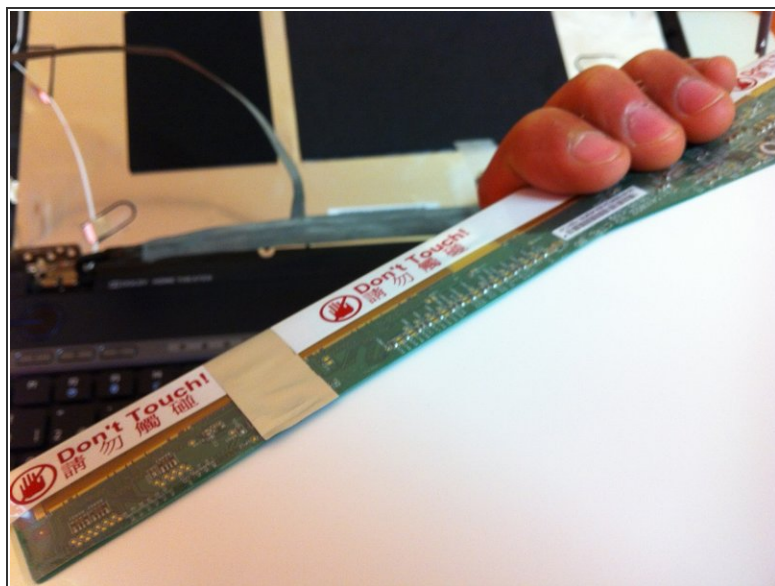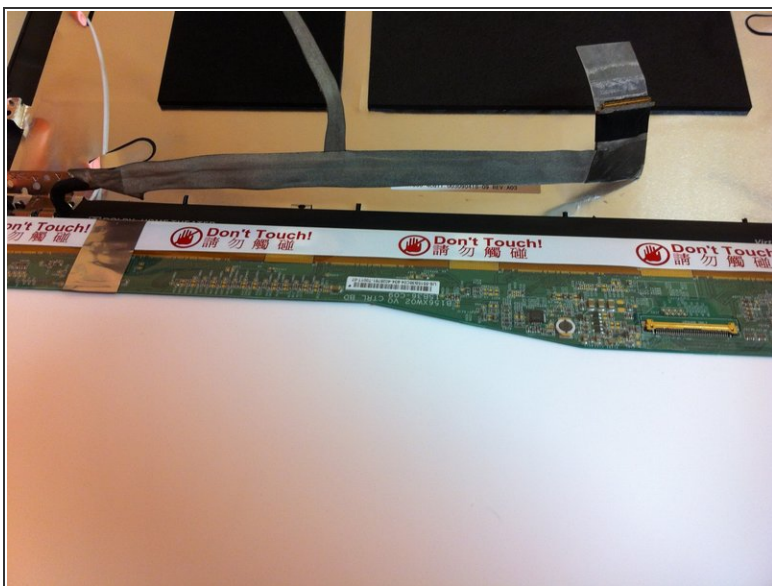

- Unstick the cables from the back of the LCD screen.
- The LCD should be completely free, so just take it out and install a new one.

To reassemble your device, follow these instructions in reverse order.