



Neato Botvac 65 Battery Replacement

Replacement of the battery for the Neato Botvac 65 if the current one will not charge for various reasons.

Written By: Anthony



INTRODUCTION

Step by step instruction on how to replace the battery pack for the Neato Botvac 65.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the device upside down.
- Locate the two (2) 20mm screws on the battery plate.

Step 2





- Use the Phillips #1 screwdriver to loosen both screws.

Step 3



- Remove the battery back plate to reveal the battery.

Step 4

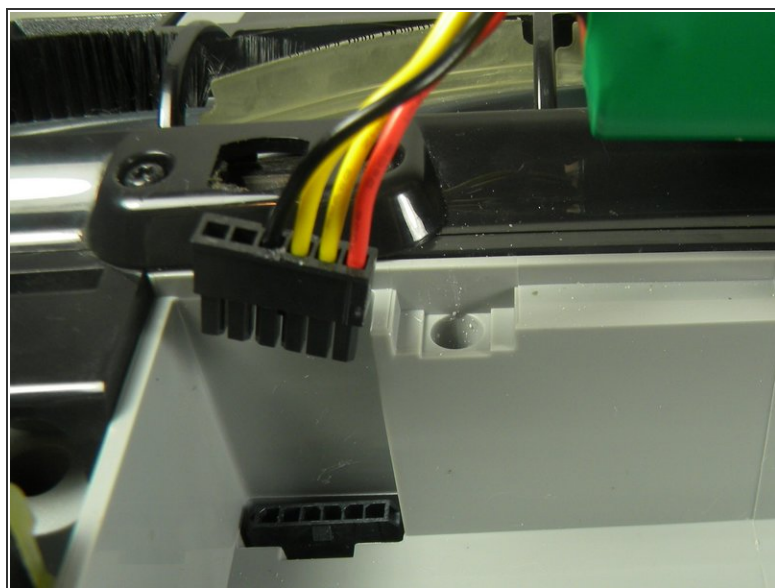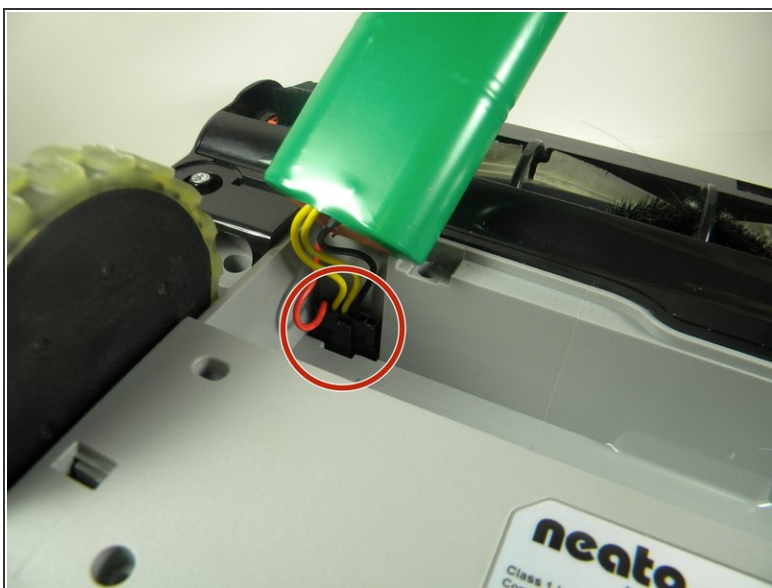

- Disconnect the current battery by pulling the connector from the base and pushing on the clip.

To reassemble your device, follow these instructions in reverse order.