



# Asus ROG GL551J Screen Replacement

This guide will show you how to remove the display from the ASUS ROG GL551J laptop.

Written By: Thien Vu



## INTRODUCTION

Use this guide for instructions on how to remove the screen from your ASUS ROG GL551J laptop.

The screen is the output surface for a laptop, showing text and/or images to the user. If the laptop screen becomes cracked, it fails to display anything, or the images are distorted or discolored, it may need to be replaced.

Be sure that your laptop is completely powered off and disconnected from external power before beginning this guide. It is also recommended that you wear ESD (electrostatic discharge) gloves or rubber gloves to avoid damaging laptop components.

### TOOLS:

- [iFixit Opening Tool](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [ESD Gloves](#) (1)

### PARTS:

- [Screen Replacement for ASUS ROG GL551J](#) (1)  
Replacement

## Step 1 — Battery



- Lay the device on a flat surface with the battery facing up.
- ⓘ Be sure to wear ESD or Rubber gloves to protect the computer components.

## Step 2



- Push the latch found below the battery to the unlock position.

### Step 3




- Pull the battery out.

### Step 4 — Screen




- Use a plastic opening tool to remove the plastic hinge covers on either side of the laptop.

## Step 5

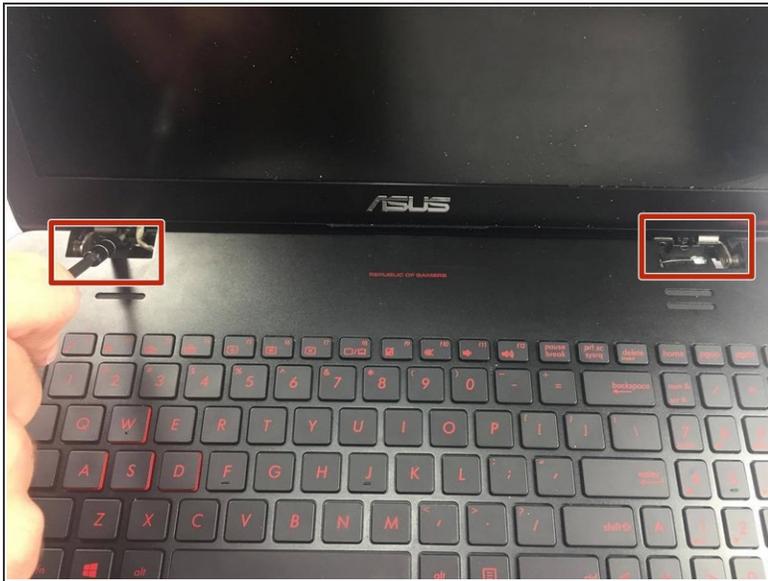

- Remove the middle screws located on either side of the display.

## Step 6

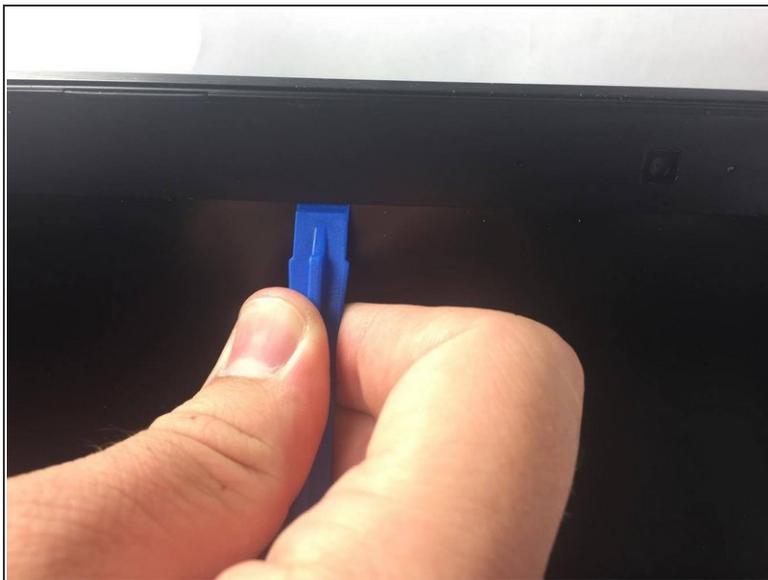


- Use a plastic opening tool to pop out the bezel from all four sides, then lift it out of the frame.
- ☑ When doing this in reverse during reassembly, try closing the laptop and applying pressure to reattach the bezel snaps.

## Step 7



- Remove the screws at each corner of the display.

## Step 8

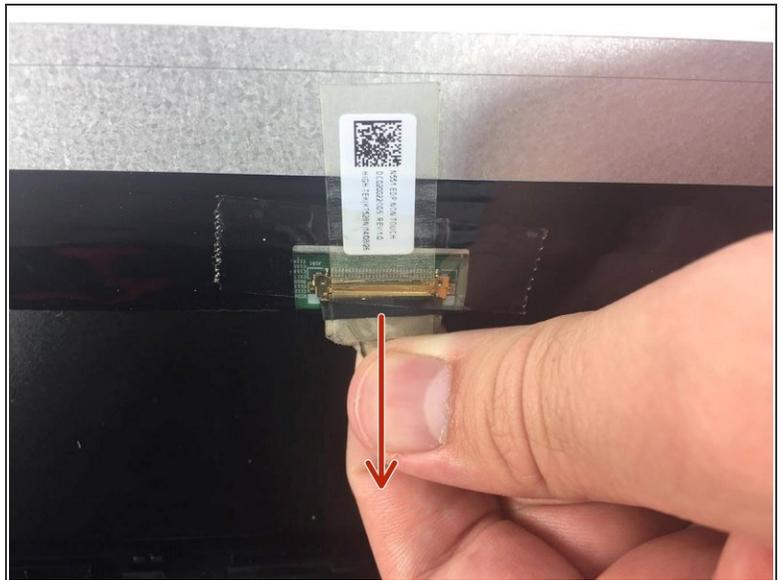

- Remove the connector from the display by pulling the wire downwards.
- Be sure to take note of the orientation of the connector when unplugging and plugging in.

To reassemble your device, follow these instructions in reverse order.