 




# HP Chromebook CB2L Motherboard Replacement

This guide helps one remove and replace the Motherboard of the HP Chromebook CB2L.

Written By: Gregory Hinkson

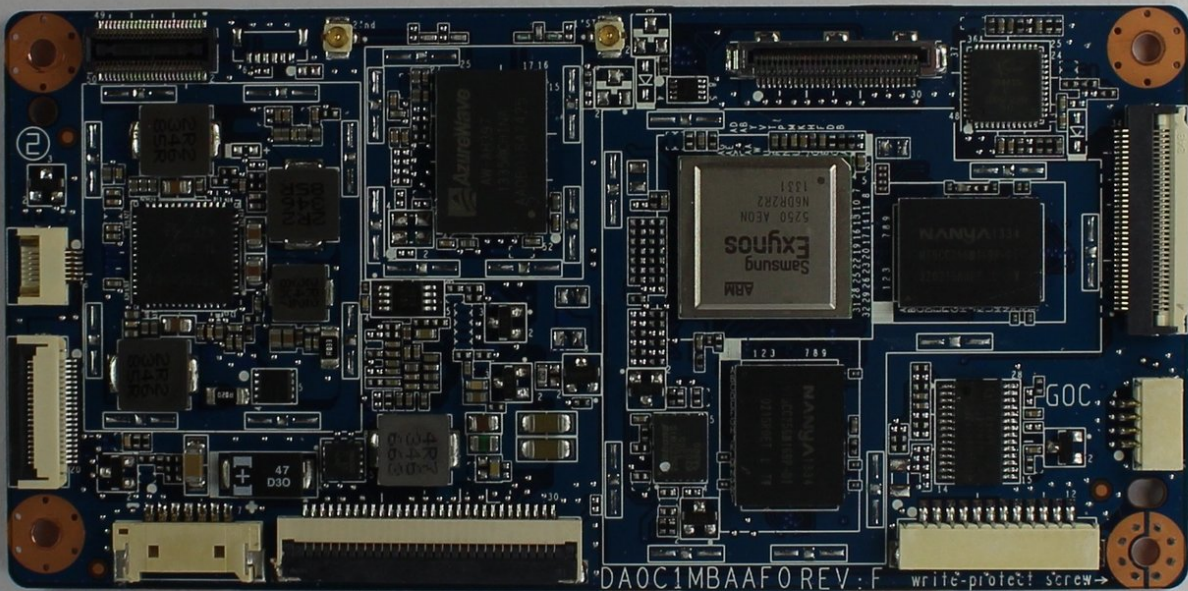

## INTRODUCTION

We are going to help you remove and replace a component of your HP Chromebook CB2L. The component that this guide helps you with is the Audio Port of the HP Chromebook CB2L. Please take a look at this troubleshooting page to confirm that this component needs replacement.

 
 
[HP Chromebook CB2L Troubleshooting](#)



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips Head Screwdriver: Size PH1](#) (1)

## Step 1 — Battery

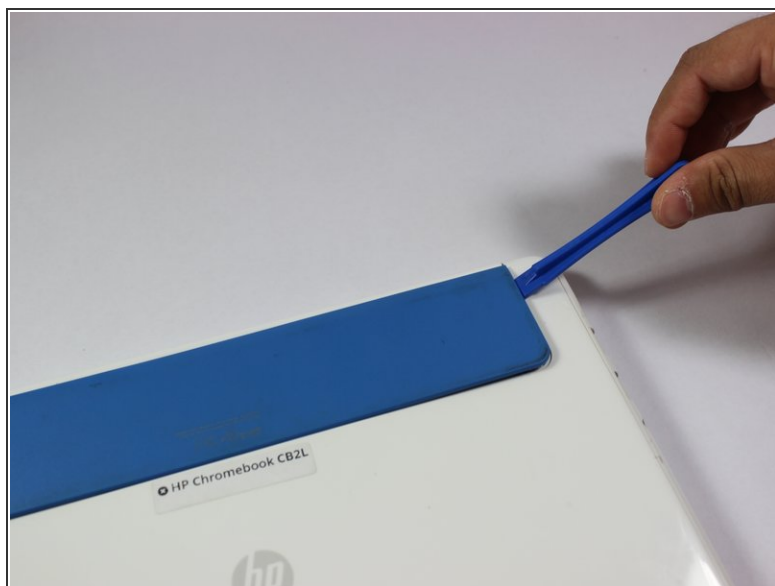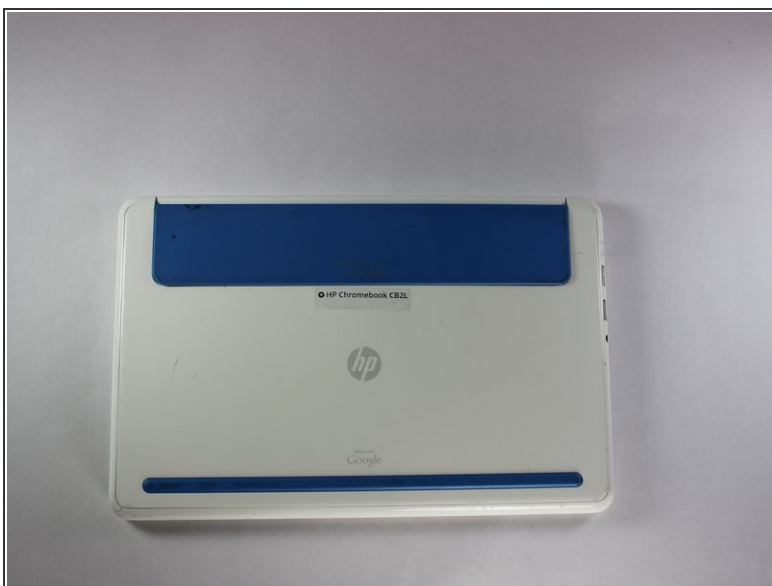


- First flip your HP Chromebook CB2L over such that the bottom is facing upwards.
- Next, using the plastic opening tool remove the blue panel.

## Step 2



 
- Using the Phillips #1 screwdriver, remove the six 1.2mm screws.
- Gently pry off the white back panel using the plastic opening tool.

## Step 3

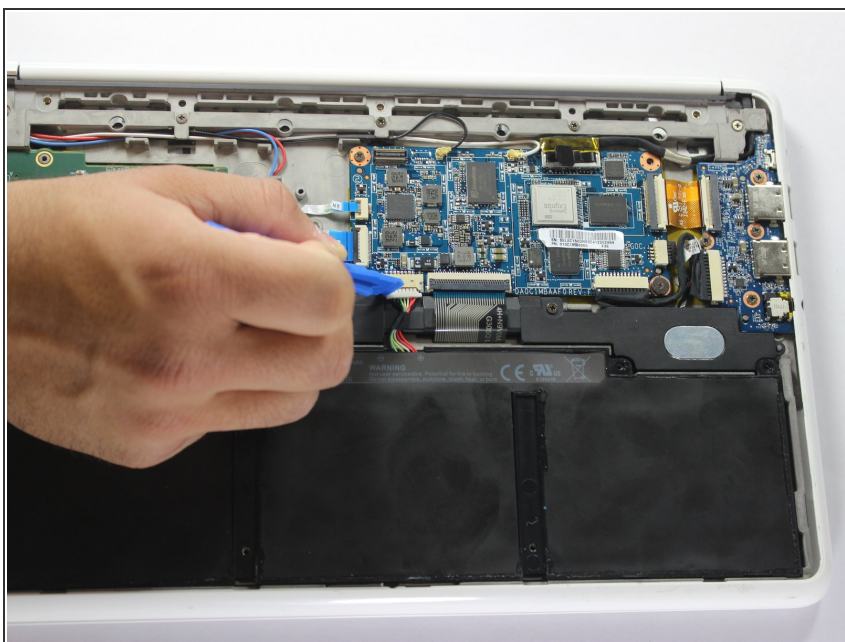

- Disconnect the battery input to the motherboard using the plastic opening tool


## Step 4

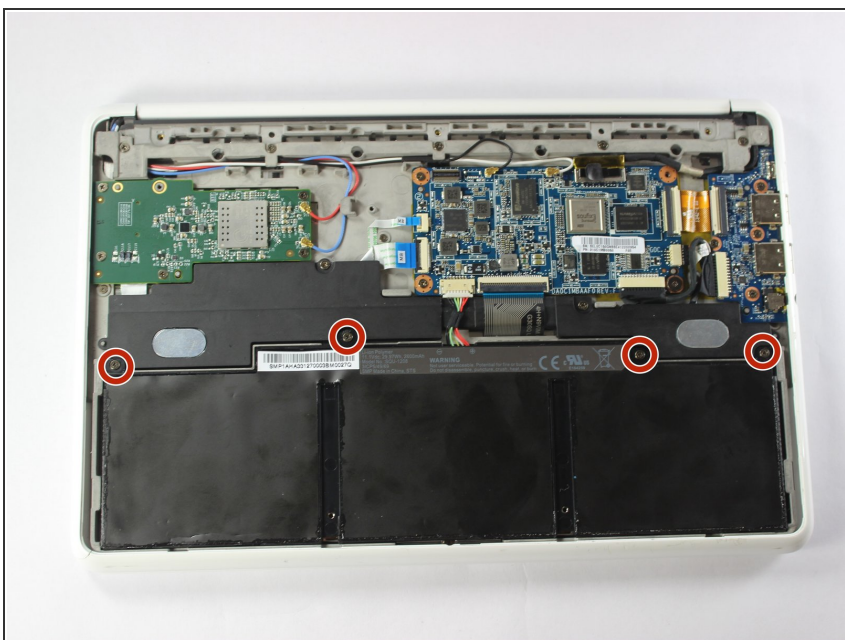 

- Unscrew the four 1.2mm screws using the Phillips #1 screwdriver.



## Step 5

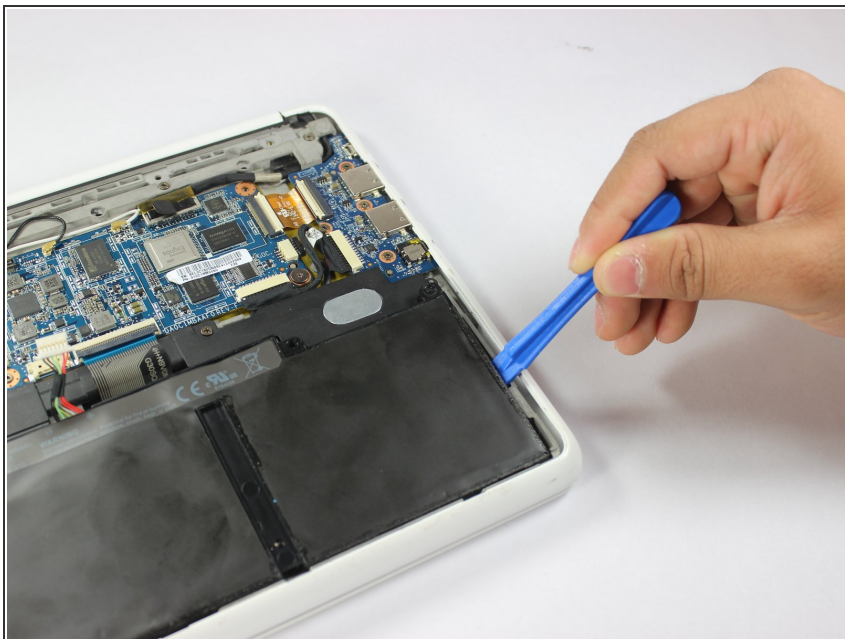 


- Using the plastic opening tool remove the battery from the Chromebook.

## Step 6 — Speaker




 
- Using the plastic opening tool lift the black tab.
- Disconnect the blue and black strip from the motherboard.

## Step 7

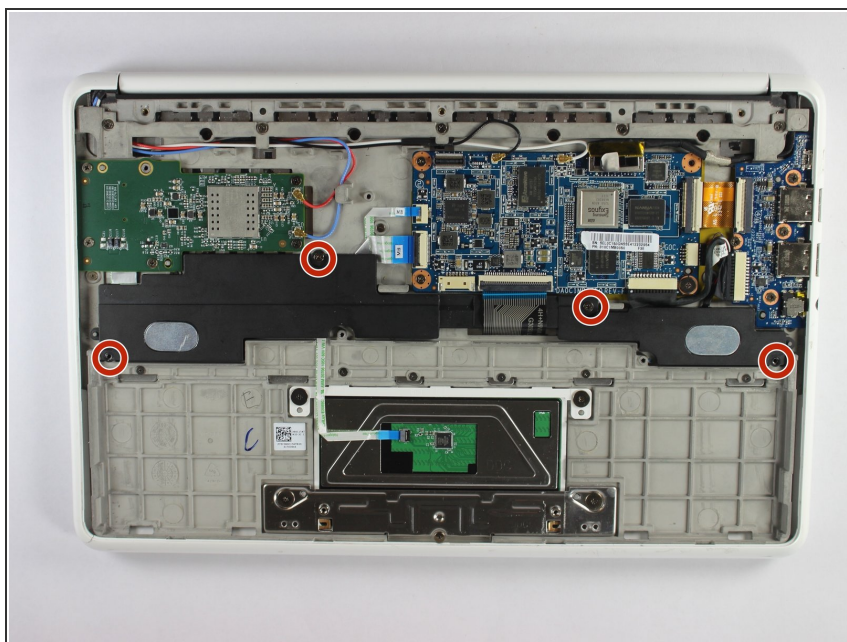

- Use the Phillips #1 screwdriver to remove the four 1.2mm screws circled red.


## Step 8

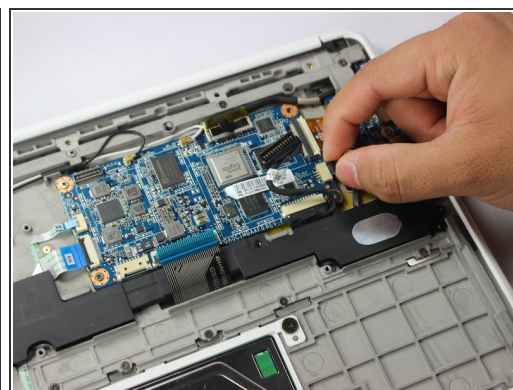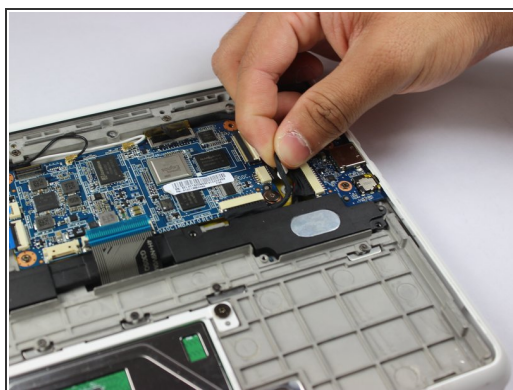  

- Gently pull the black wire to disconnect the audio port from the motherboard.
- Disconnect the black wire connecting the speaker to the motherboard with caution.






## Step 9

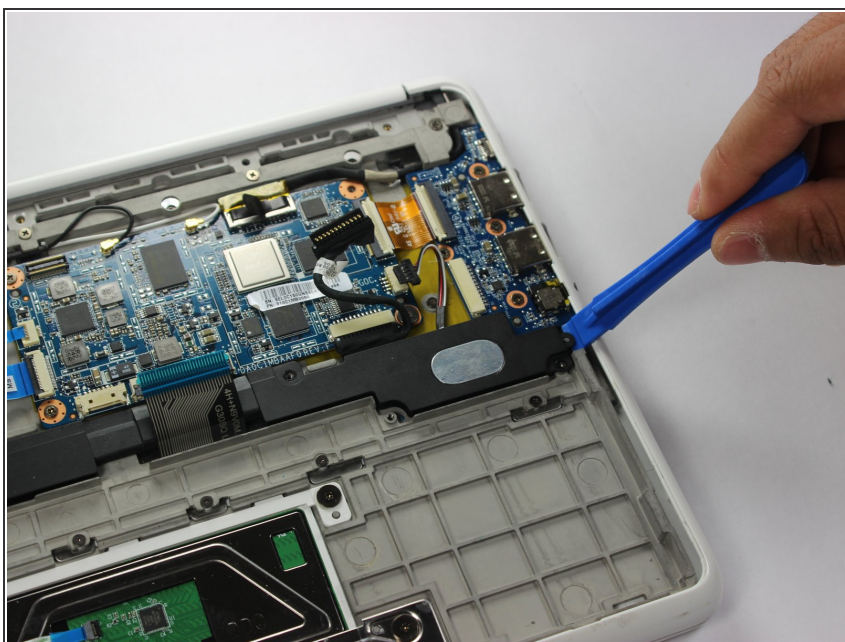 



- Use the plastic opening tool to remove the speaker from back panel.

## Step 10 — Motherboard

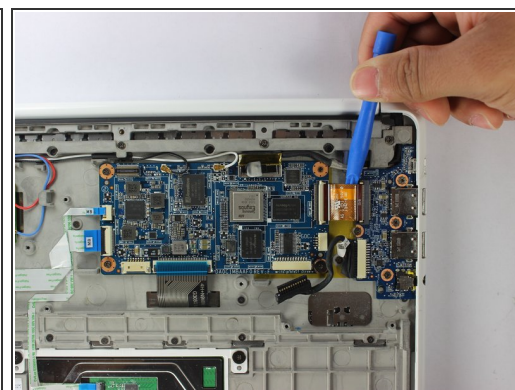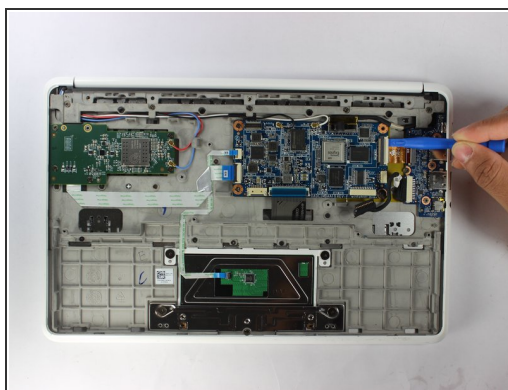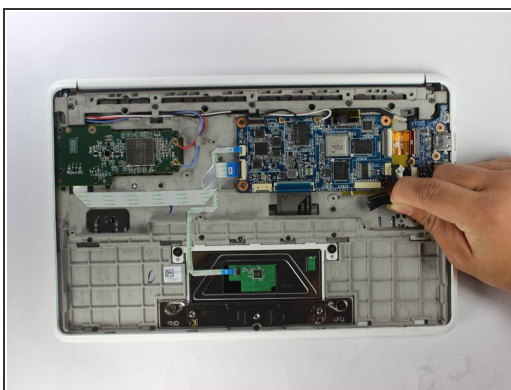   


- Disconnect the black wire which connects the audio port to the motherboard.
- Use the plastic opening tool to lift the white tab.
- Use the plastic opening tool to disconnect the gold strip which connects the audio port to the motherboard.

## Step 11

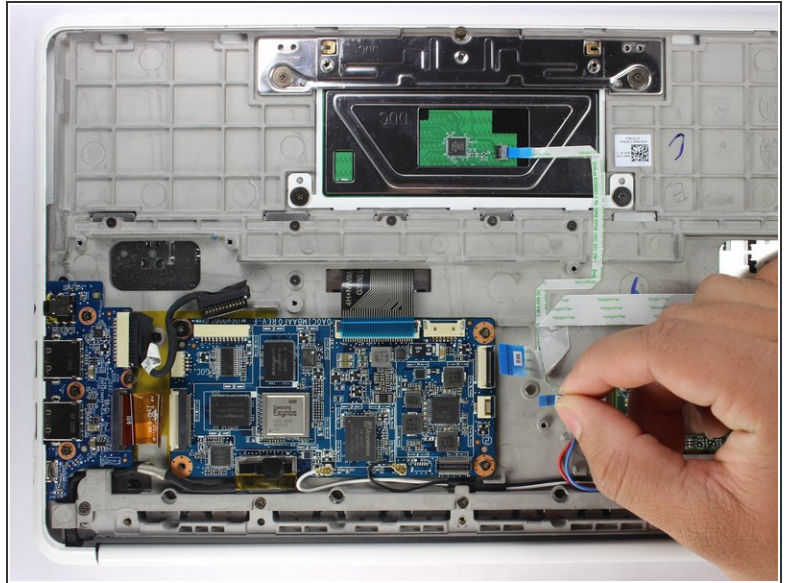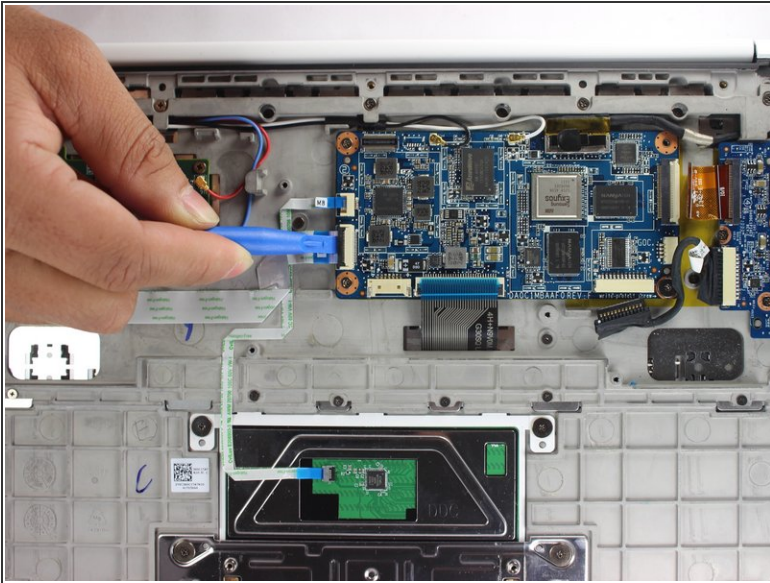  

- Lift the black tab using the plastic opening tool.
- Remove the two white strips from the motherboard.



## Step 12

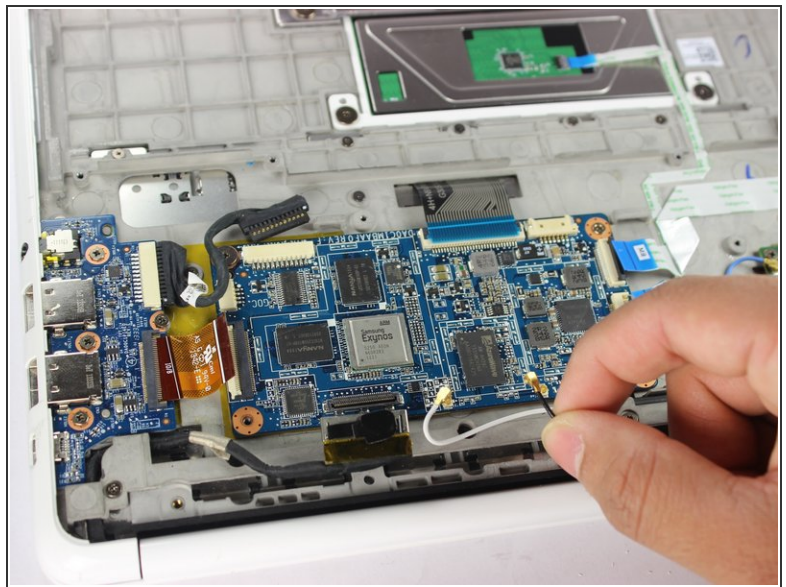 

- Lift the black and silver connector using plastic opening tool as shown.
- Remove the white and black wires by rotating them counterclockwise and gently lifting them.




## Step 13

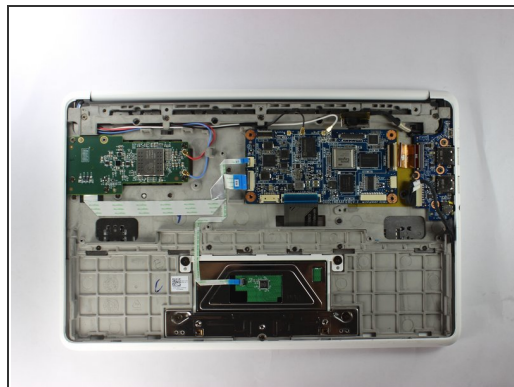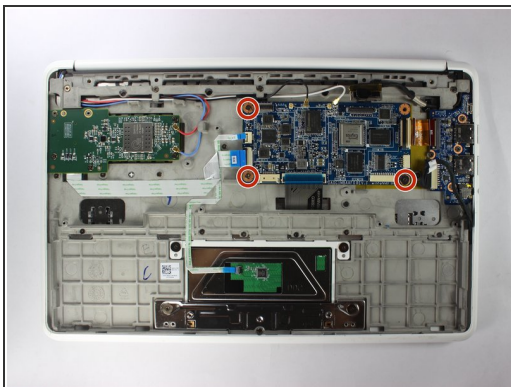  

- Remove the three 1.2mm screws using the Phillips #1 screwdriver.

## Step 14

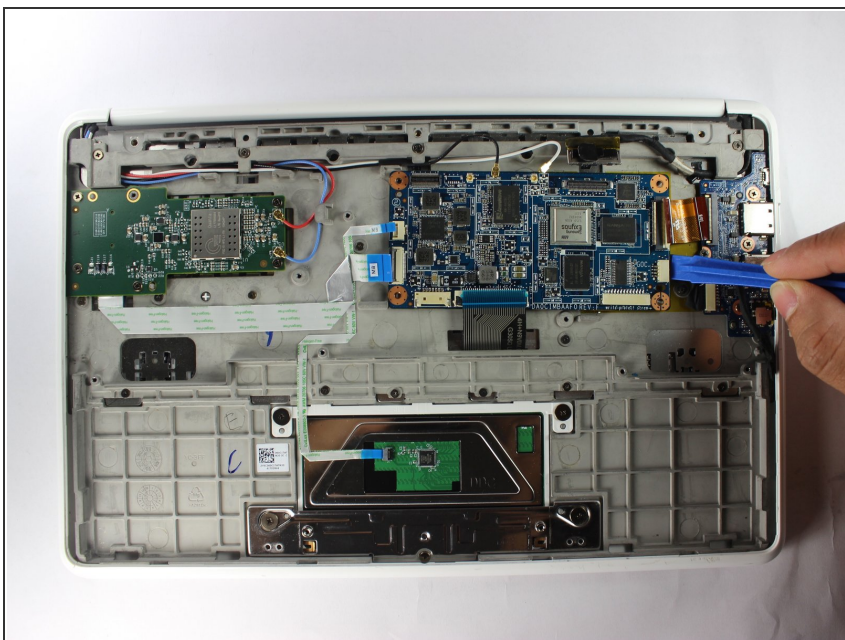 

- Using the plastic opening tool lift the motherboard out of the back panel.

To reassemble your device, follow these instructions in reverse order.