



Protocol Dronium One Rotor Guard Replacement

Replace your damaged rotor guards to protect your rotor blades.

Written By: Ameth Ramos



INTRODUCTION

This simple guide will help you replace your damaged rotor guards. By changing the rotor guards, it will help your drone fly properly.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)

PARTS:

- [Rotor Guard](#) (1)

A maximum of four guards may be replaced.

Step 1 — Rotor Guard

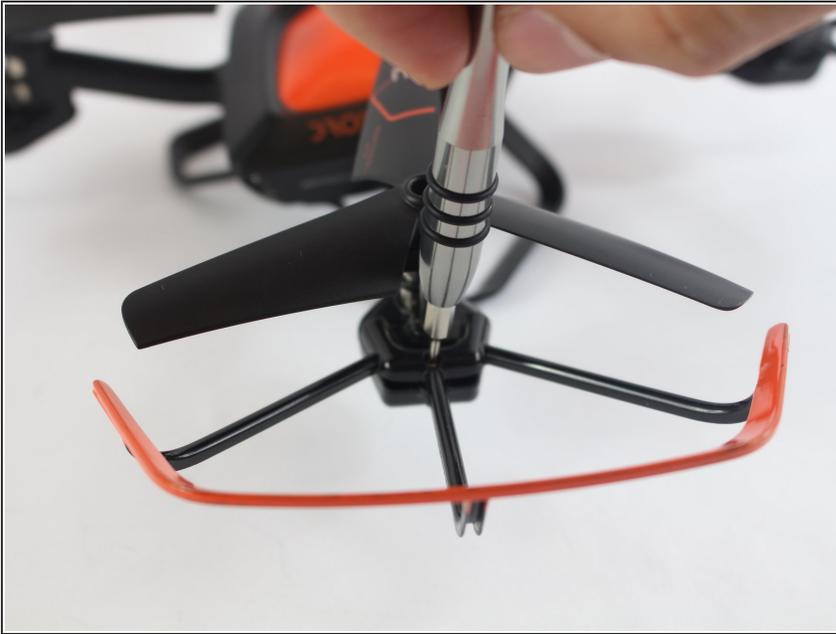

- Remove the 9.1mm rotor guard screw found directly under the rotor blade using a Phillips 000 screwdriver.

Step 2



- Carefully pull off rotor guard.

To reassemble your device, follow these instructions in reverse order.