

Neato Botvac 65 Top Cover Removal

This guide will show you how to remove the Neato Botvac 65 cover to gain access to the components of the robot.

Written By: Joseph Caton



INTRODUCTION

In order to gain access to the components of the robot the top cover needs to be removed.



TOOLS:

- Phillips #1 Screwdriver (1)
- T10 Torx Screwdriver (1)

Step 1 — Battery





- Flip the device upside down.
- Locate the two (2) 20mm screws on the battlery plate.

Step 2







Use the Phillips #1 screwdriver to loosen both screws.



 Remove the battery back plate to reveal the battery.

Step 4

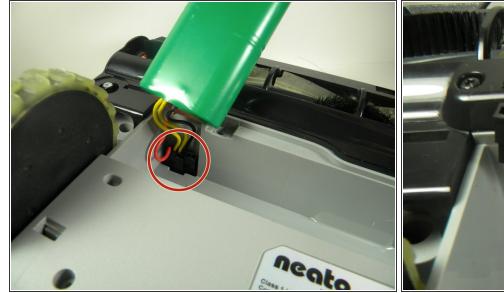

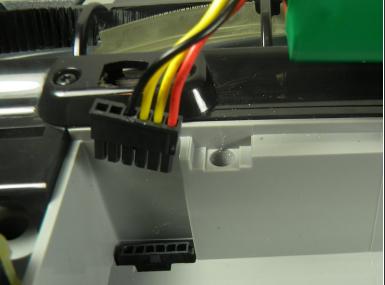

• Disconnect the current battery by pulling the connector from the base and pushing on the clip.

Step 5 — Brush



Flip the device upside down.

Step 6





• Use the screwdriver to take off the four (4) 10mm screws located near the brush which secure the plastic guard.





- Remove the plastic brush guard.
- Pull off the plastic covering the brush.

Step 8



Lift the brush to clean or replace.

Step 9 — Top Cover



- Flip device upside down.
- Locate the six (6) screw connected to the top cover.

Step 10



 Remove eight (8) star screws using the T10 bit.







Pull off one side of the brush front cover, and then pull off the other.

Step 12



- Flip right side up and turn around.
- Find the two clips connecting the top cover to the body of the device.

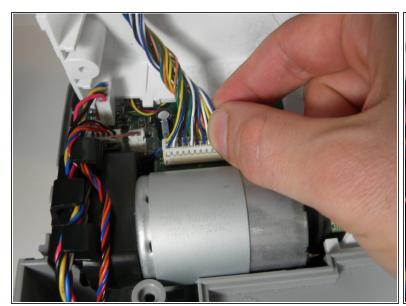

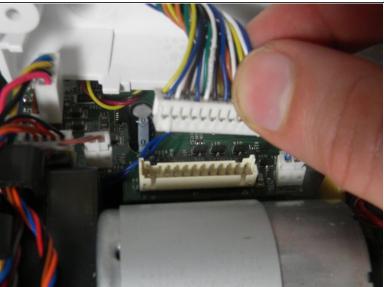

- Lift up on the top cover gently.
- Disconnect the connector from the motherboard to detach the top cover from the robot.

To reassemble your device, follow these instructions in reverse order.