

HP Compaq Presario CQ56-110US Keyboard Replacement

Use this guide to replace the entire keyboard on the HP Compaq Presario CQ56-110US if it is unresponsive or not functioning properly.

Written By: Iyonna L. Tynes



This document was generated on 2020-11-23 01:18:19 AM (MST).

INTRODUCTION

Use this guide to replace the entire keyboard if it is unresponsive or not functioning properly.



TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Battery





- Ensure that the laptop is completely powered off, then flip it over to identify the battery latch located towards the bottom of the back panel.
- Push the latch to the unlocked position.


Step 2



Gently take out the battery.

Step 3 — Keyboard



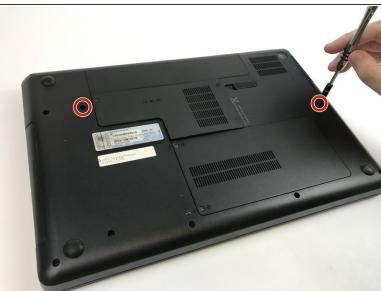

- On the back panel of the laptop are two screws which have a keyboard symbol next to them.
- Using a Phillips screwdriver with a PH0 bit, remove both the 7mm and 5.5mm screws.


Step 4






 From left to right, unscrew the 5.5mm screw, the 7mm screw, and the 5.5mm screw located in the battery panel with the screwdriver.

Step 5

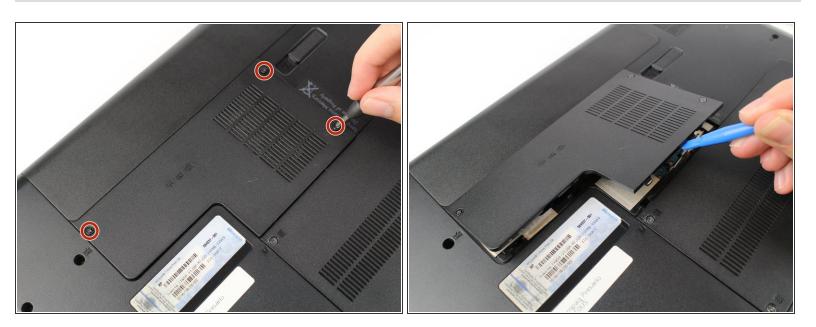

- Remove the RAM panel by unscrewing the three screws with the PH0 Screwdriver Bit.
- (i) The screws do not come free from the panel. They only need to be loosened enough so that the panel can be lifted/pried using a plastic opening tool
- Remove the RAM panel using a plastic opening tool.

Step 6

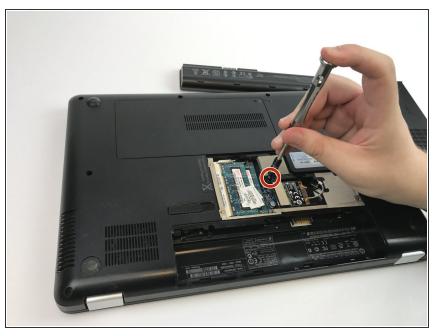

 Inside the RAM panel, use the screwdriver to remove the 5mm screw pictured.

Step 7



 Flip the laptop back over and lift the lid to expose the keyboard.

Step 8





Use a plastic opening tool to pry up the keyboard.

Step 9





Once the keyboard is lifted, disconnect the band.

To reassemble your device, follow these instructions in reverse order.