



Canon Vixia HF R70 Wrist Strap Replacement

A detailed guide for removing and replacing the wrist strap to your Canon Vixia HF R70.


Written By: Thomas Rogiensi



INTRODUCTION

The wrist strap aids the user in keeping the camera secure while recording. It is recommended that you remove it before removing the side panel.

Step 1 — Wrist Strap

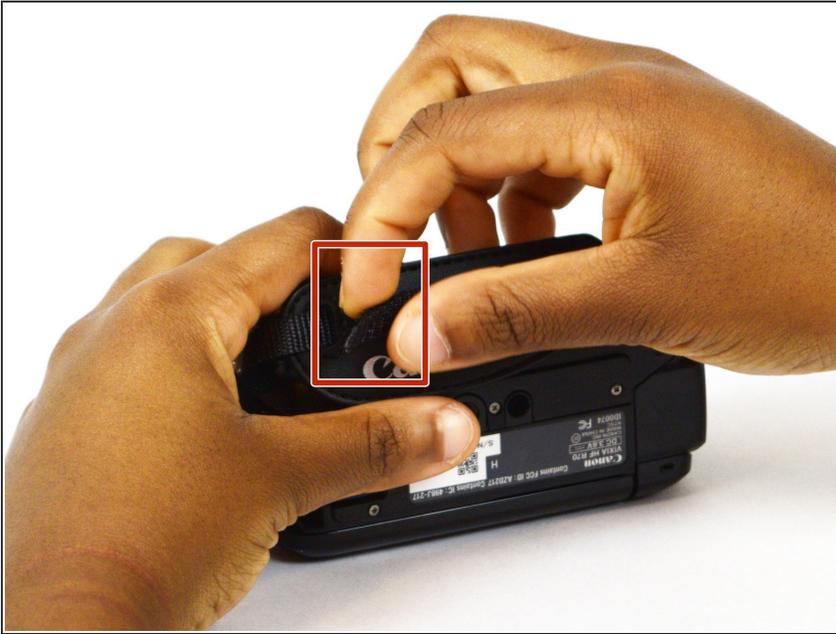

- Position the camcorder so that the wrist strap is facing you.
- Locate the loose end of the strap.

Step 2




- Gently pull on the loose end to separate the Velcro.

Step 3



- Locate the "slot" on bottom right corner of the camcorder where the strap loops through.
- Pull the strap through the loop.

Step 4

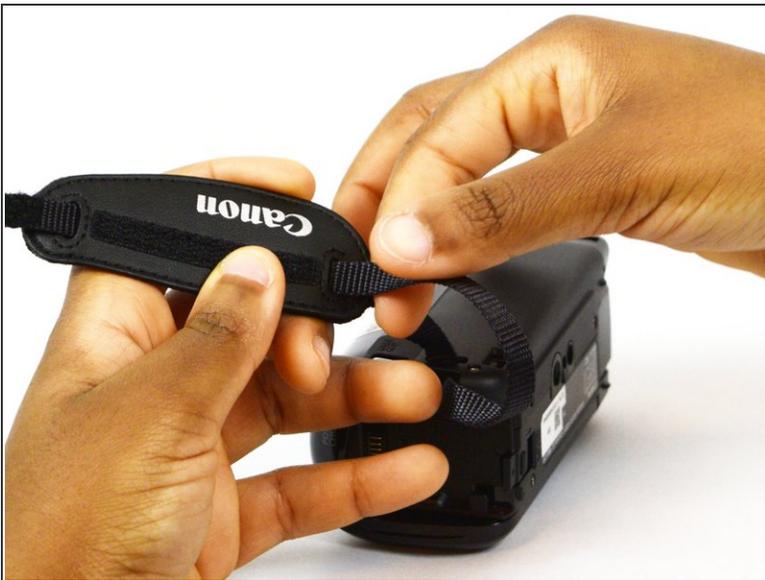

- Pull the strap through the leather cushion.

Step 5



- Pull the strap through the slot on the left side of the camcorder.

To reassemble your device, follow these instructions in reverse order.