



BLU Tank II Keypad Replacement

Replace the keypad on your BLU Tank II.

Written By: David Kelchner



INTRODUCTION

This guide will demonstrate how to remove and replace the keypad for the BLU Tank II cell phone. You will need to remove the parts talked about in the previous guides in order to replace the keypad. You will also need a screwdriver and an opening tool to replace the keypad.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Back Panel



 
 
- With the screen facing you, find the left corner of the phone. There should be a visible groove.
- With your fingers, carefully press a fingernail into the slot and separate the back panel from the phone.

Step 2 — Battery



- After the back panel has been removed, put your finger on and press down on the bottom part of the battery.
- Lift the battery up and carefully remove the battery.

Step 3 — Front Panel

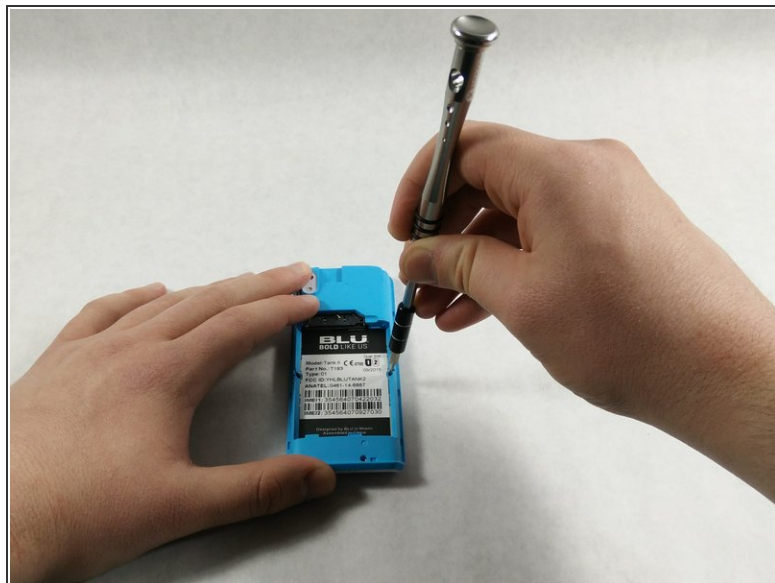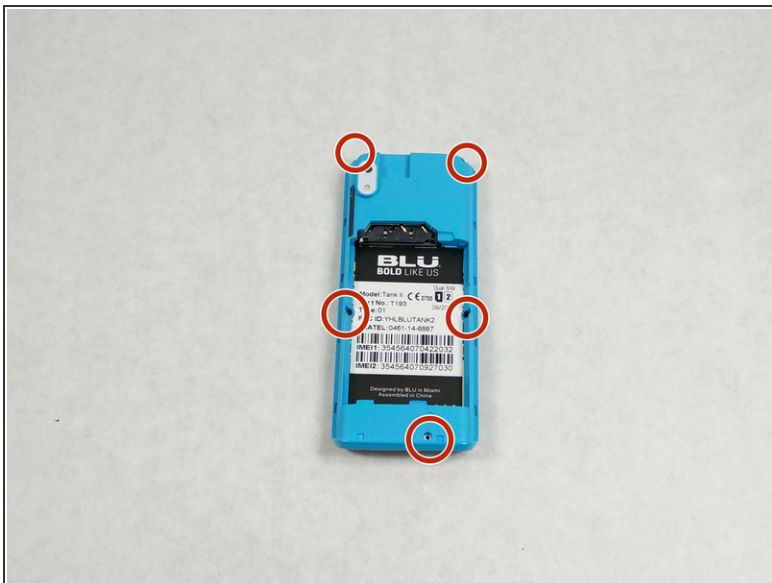

- Using the phillips head screwdriver, remove all 5 2.5mm screws.

Step 4



- Wedge the blue plastic iFixit opening tool between the front plate and the outer lens plate.
- Carefully separate the front plate from all sides of the phone.

Step 5 — Keypad



- Once the front plate is separated from the outer lens plate, place your fingers on the backside of the keypad.
- Peel the keypad out from the keyholes in the front plate.

To reassemble your device, follow these instructions in reverse order.