



# Dell Inspiron 13z 5323 Battery Replacement

This guide will help you replace a faulty battery in the Dell Inspiron 13z 5323.

Written By: Chase Hussey



## INTRODUCTION


In this guide you will be shown in 4 easy steps how to remove and replace the battery in the Dell Inspiron 13z 5323.



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

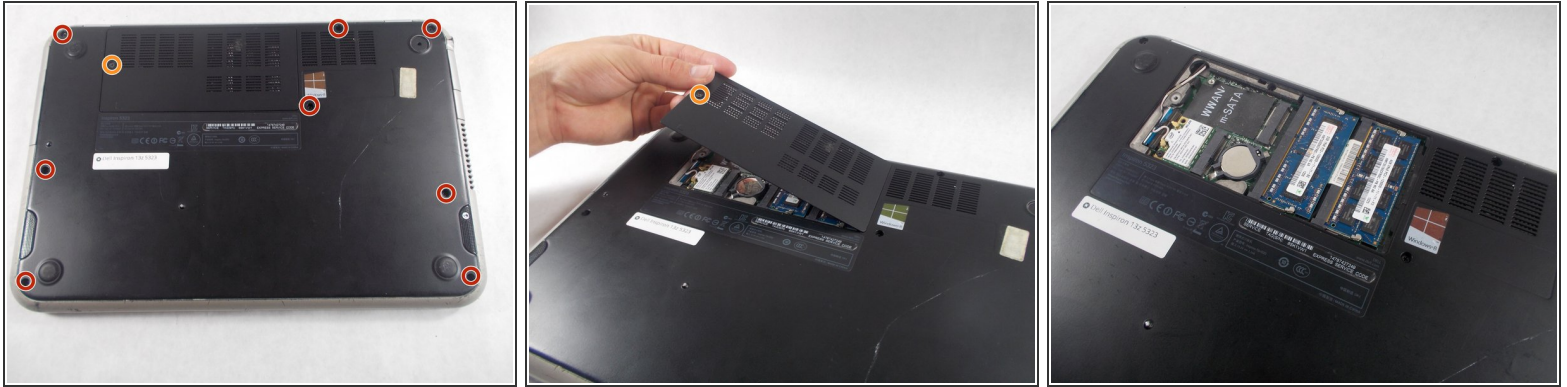

- Remove nine screws from the bottom case.
- The highlighted captive screw on the base cover is held in place with a washer, so when it is loosened and the cover is removed, the screw will stay in the plate.
- Once the captive screw is loosened, remove the small base cover on the bottom of the device.


## Step 2

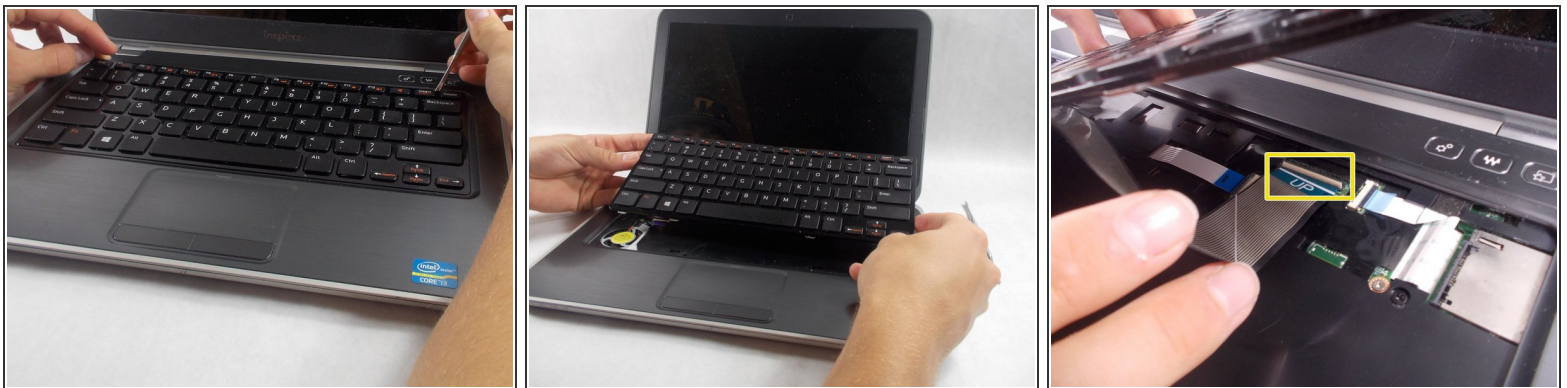

- There are 3 slots on the top of the keyboard where you will have to use a thin tool, such as a flathead screwdriver to push the tabs so the keyboard will pop out.
- ⚠ Be careful when pushing in the keyboard tabs, as they may break if they if too much pressure is applied to them.
- You will have to flip a small tab up where the ribbon connector goes into the insert, so the connector can be released and the keyboard can be removed.




## Step 3

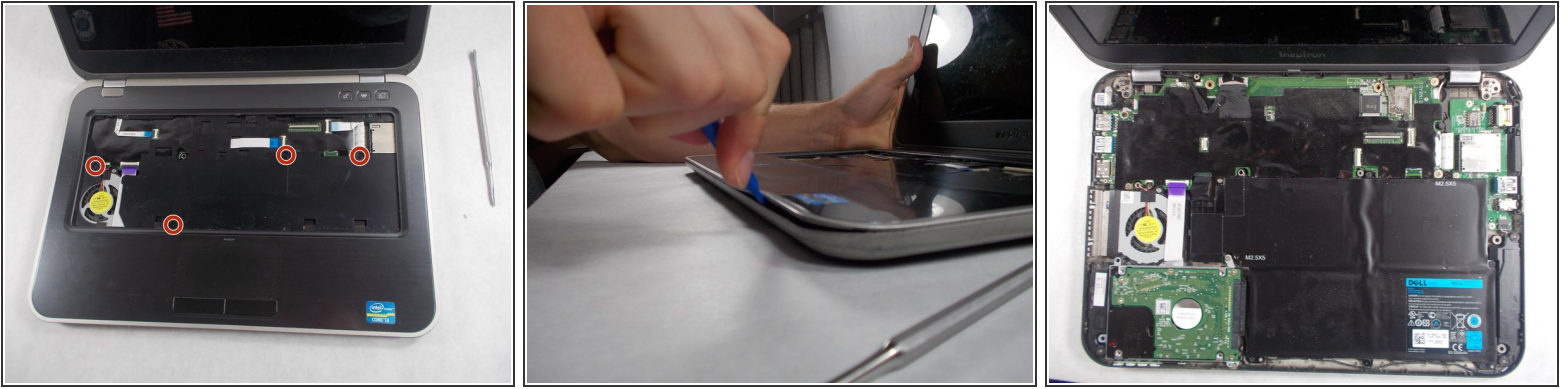

- Remove the highlighted 4 screws and then use the plastic separator to remove the palm rest.

⚠ Be careful when separating the palm rest from the laptop, because being too aggressive with it can cause the small clips that hold the palm rest in place to break .

## Step 4

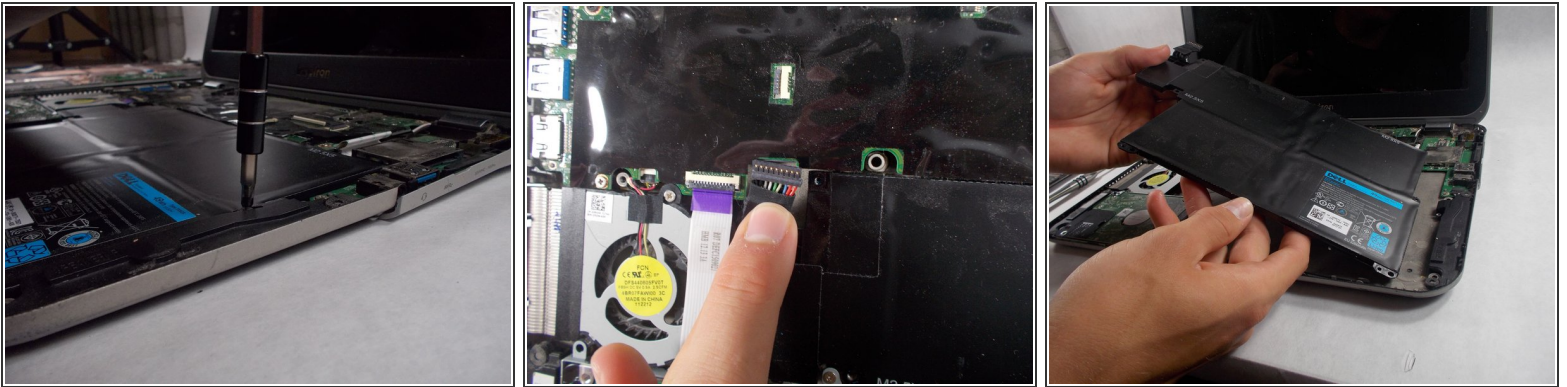

- Remove the screws surrounding the battery and unplug the cable in the top left corner to then remove the battery.

To reassemble your device, follow these instructions in reverse order.