



Asus UL80J Battery Replacement

This guide will show you how to remove or replace the laptop's battery.

Written By: Loren Plopper



INTRODUCTION

The battery of the laptop provides power for all the functions of your laptop. If your laptop's battery is broken or defective this guide will give you step by step instructions on how to replace it. Additionally, the laptop's battery should always be removed before disassembling the laptop, to avoid any possible electric shock.



PARTS:

- [Asus UL80J-BBK5 Battery](#) (1)
-

Step 1 — Battery



- Place laptop face down with battery facing up.

Step 2



- Slide unlock button to the right.

Step 3



- Slide the button marked with an arrow to the left. The battery should now unclick. Slide the battery away from the laptop to remove it.

To reassemble your device, follow these instructions in reverse order.