




HP Chromebook CB2L Audio Port Replacement

This guide helps one remove and replace the Audio port of the HP Chromebook CB2L.

Written By: Fahad Al Raei

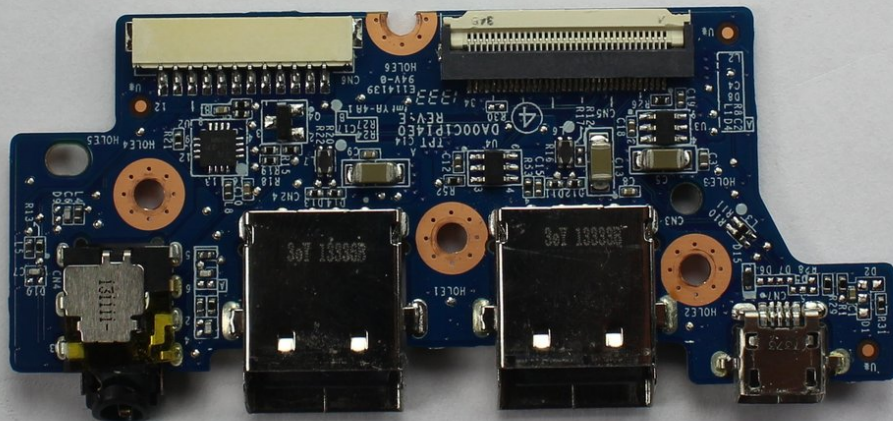

INTRODUCTION

We are going to help you remove and replace a component of your HP Chromebook CB2L. The component that this guide helps you with is the Audio Port of the HP Chromebook CB2L. Please take a look at this troubleshooting page to confirm that this component needs replacement.

[HP Chromebook CB2L Troubleshooting](#)

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Audio Port




- Flip Chromebook over so that the bottom panel is facing upward.
- Use the plastic opening tool to remove the blue panel.

Step 2




- Unscrew the six 1.2mm screws on the metal plate using Phillips #1 screwdriver.
- Lift the white panel by gently prying around the edges using the plastic opening tool.

Step 3

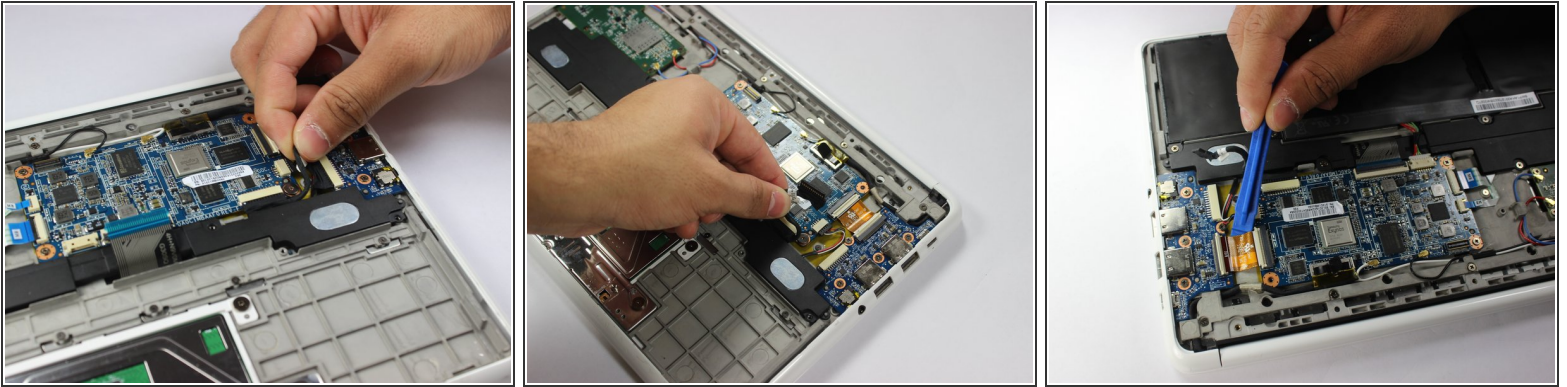

- Disconnect the black wire which connects the audio port to motherboard.
- Disconnect the gold strip connecting the audio port to motherboard

Step 4

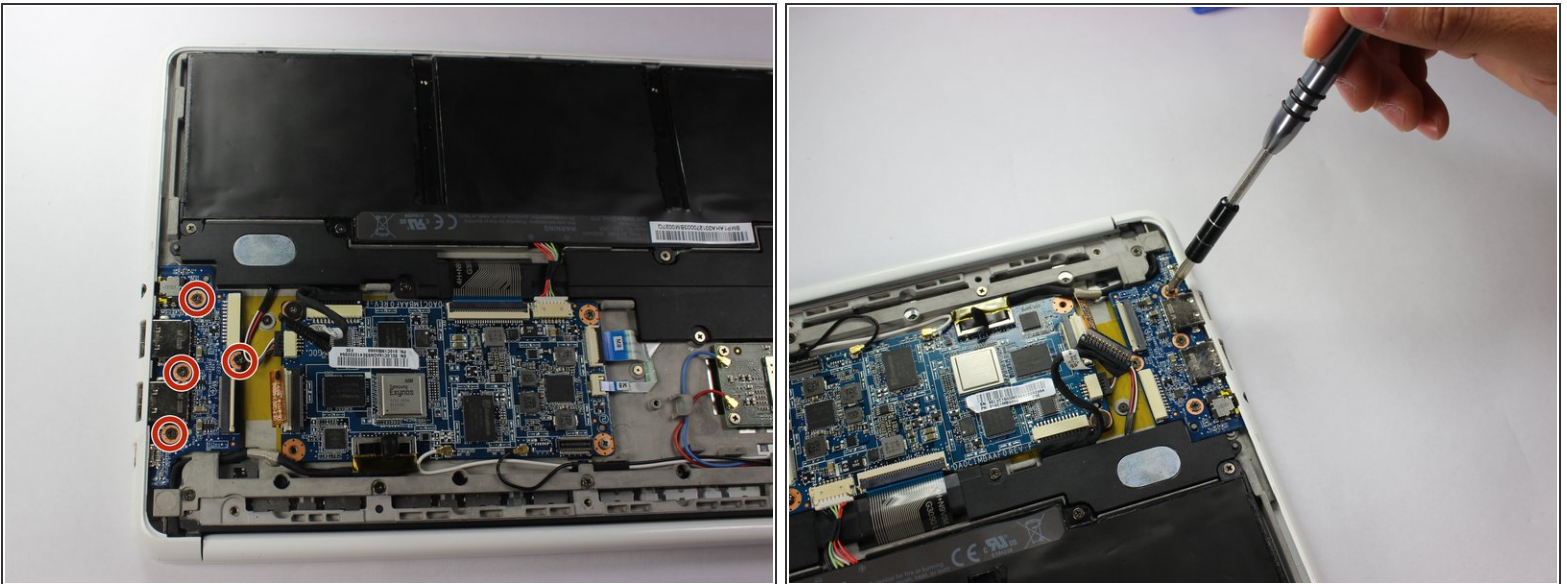

- Unscrew four 1.2mm Phillips screws using Phillips #1 screwdriver.

Step 5



- Using the plastic opening tool remove the audio port from the back panel.

To reassemble your device, follow these instructions in reverse order.