



# Fujifilm FinePix F505EXR Battery Replacement

This guide will instruct users on how to...

Written By: Matthew Kilmonis



---

## INTRODUCTION

This guide will instruct users on how to replace their Fujifilm FinePix battery. This is a step-by-step guide that will include information on replacing, charging, and identifying defective batteries.


---



### PARTS:

- [Fujifilm Lithium Ion Battery Pack NP-50](#) (1)
-



## Step 1 — Battery

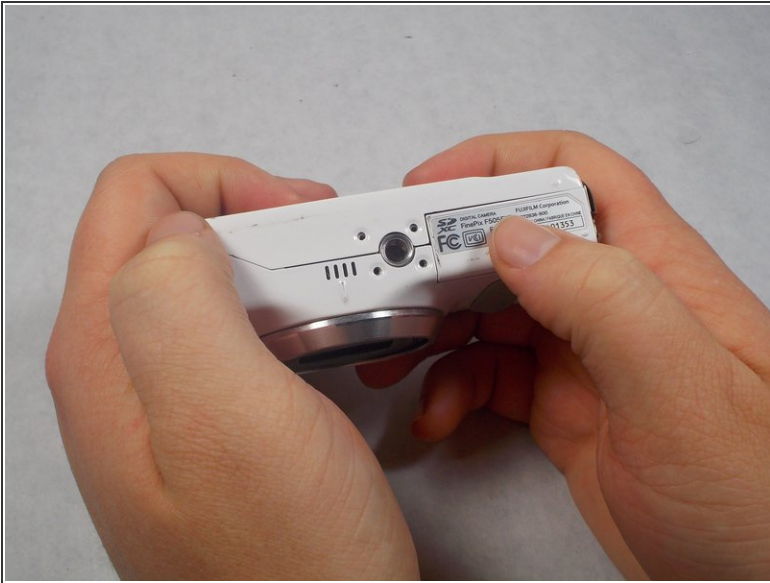

**⚠ Power the device down before taking any other actions.**

- Hold the camera with the lens facing towards yourself.
- Turn the camera upside down and place your right thumb on the battery chamber cover.

## Step 2

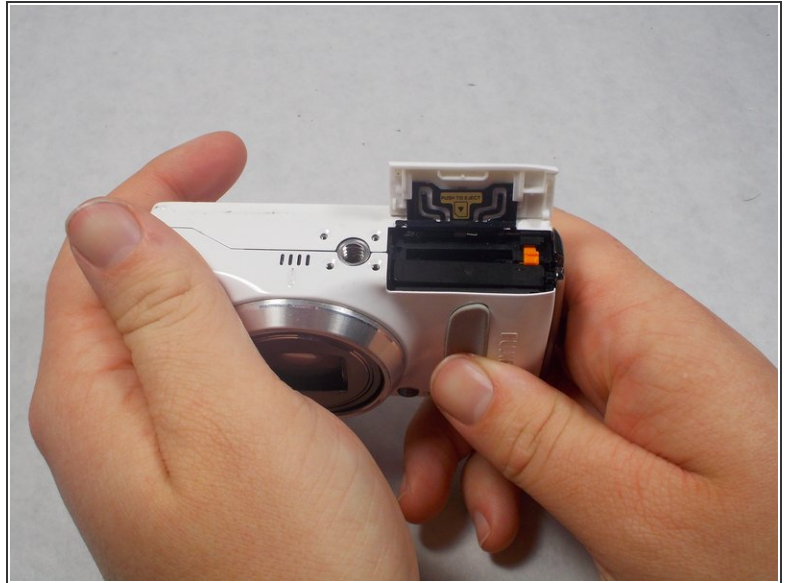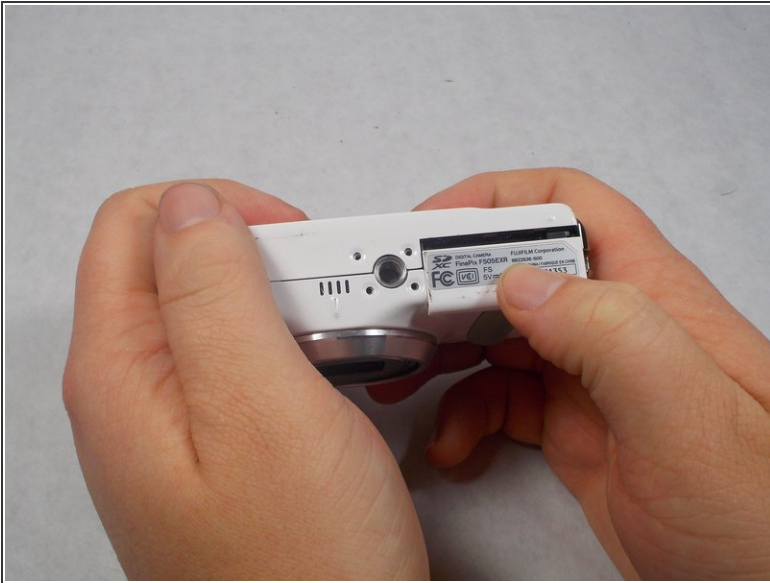


- Hold the camera, then pull the battery chamber towards yourself with your right thumb.
- Pull the cover entirely out and release it to reveal the battery.



## Step 3



- Locate the orange battery latch that holds the battery in place.
  - Use your finger to push the latch away from yourself to release the battery.
  - Remove the battery manually from the battery chamber.
  - Place the battery into a charger if it is dead.
-  Remove battery before performing any other repairs.

## Step 4



- Replace defective battery if previous steps fail
- Contact support on the Fujifilm website for further assistance

To reassemble your device, follow these instructions in reverse order.