



ASUS EEE PC701SD-WHI004X RAM Replacement

This guide will show step-by-step how to replace the RAM stick on the Asus EEE PC 701SD-WHI004X.

Written By: Vinny Micale



This document was generated on 2020-11-28 05:46:18 AM (MST).


INTRODUCTION

Use this guide to replace the RAM of your ASUS EEE PC701SD-WHI004X. Be sure to disconnect the laptop from all sources of power before beginning. You should follow this guide if you have noticed a drop in the performance of your laptop.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

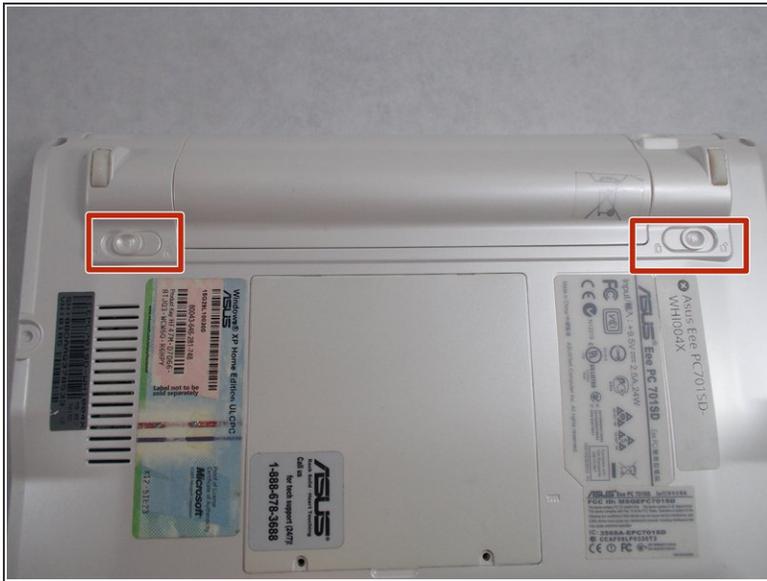

- Flip the laptop over, you should see two battery tabs.
- Slide the right tab towards the right. The orange dot should be visible. This tab will be locked open.

Step 2

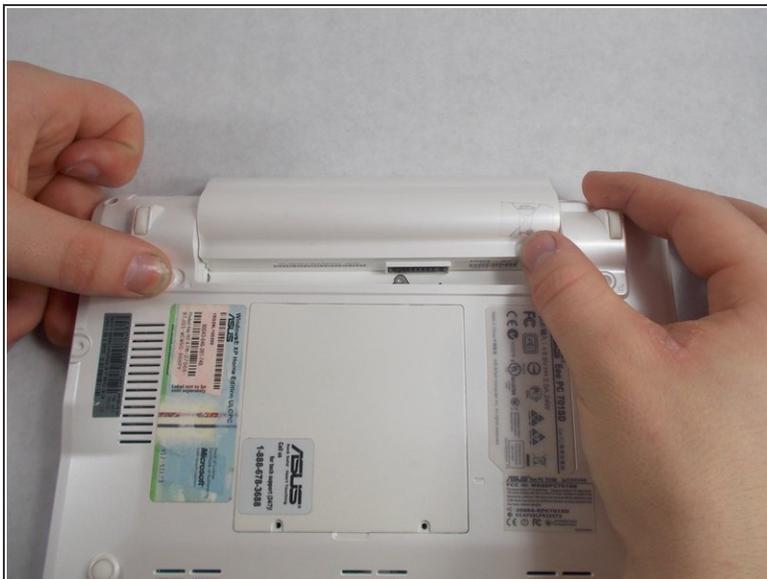

- While holding the left tab towards the left. Gently slide the battery out of the laptop.

Step 3 — RAM




- Remove the two 2.5mm Phillips #1 screws.
- Remove back panel by lifting the tab, this will expose the RAM.

Step 4



- Gently push the metal tabs outwards, this will allow the RAM to pop up.

Step 5

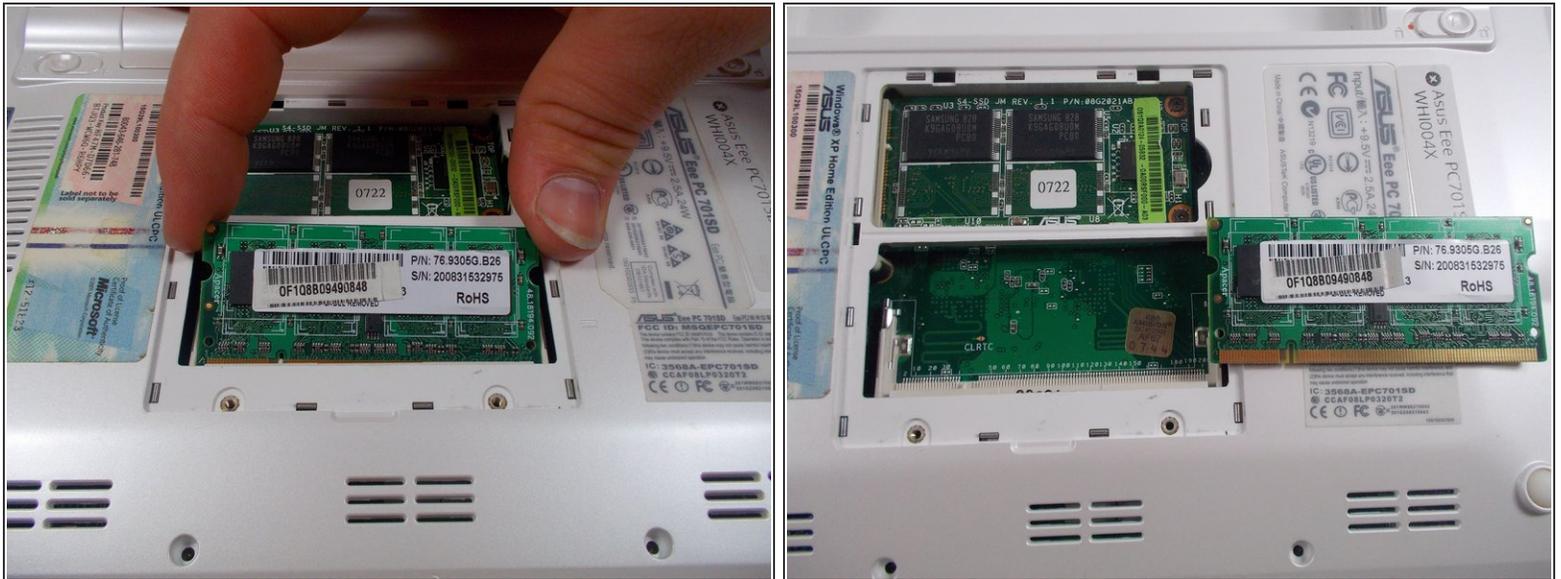

- Remove the RAM stick by grabbing it on the sides and gently pulling the stick out of its slot.

To reassemble your device, follow these instructions in reverse order.