




iLive IKBC384S Audio Speakers Replacement

In this guide you will replace the speakers in the iLive IKBC384S if they are defective.

Written By: Allen Dover

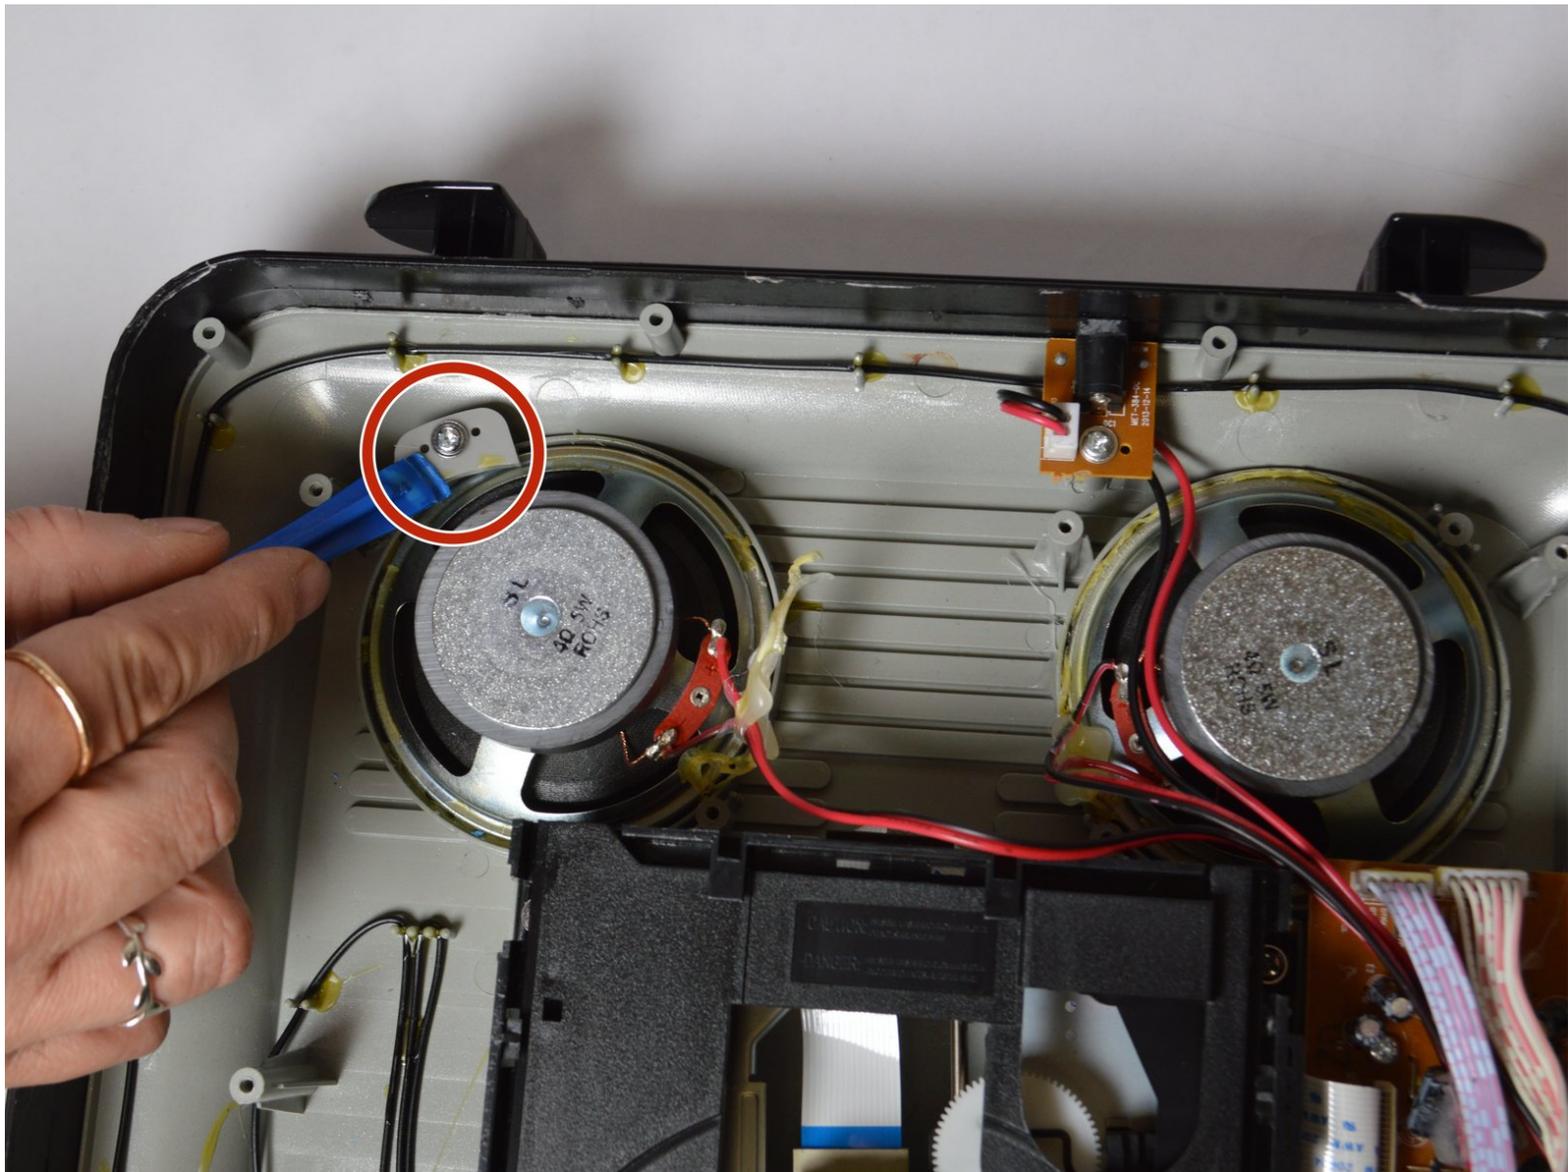


INTRODUCTION

You will need to make sure the power on the device is off and unplugged to prevent injury. Use this guide to replace both of the speakers located in the device. You will need the iOpener or heat gun, the speaker will be glued down.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [iOpener](#) (1)
 - [Plastic Spudger](#) (1)
-

Step 1 — Top Cover

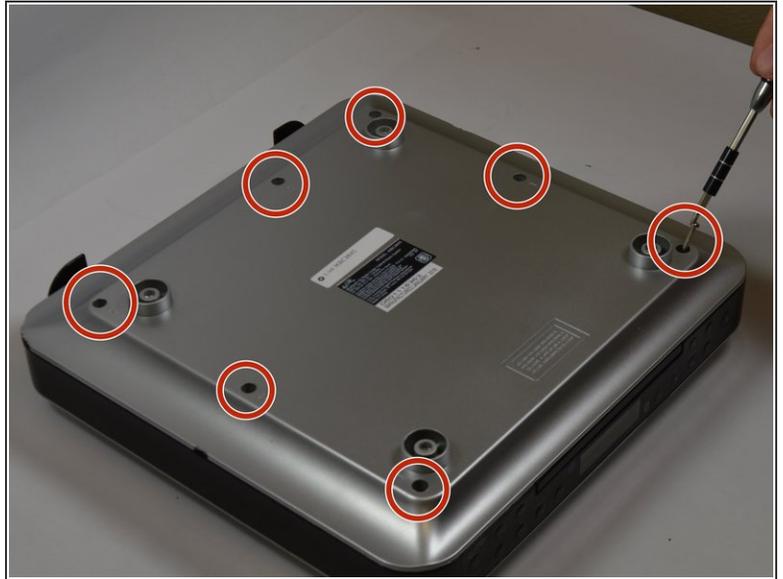


- Make sure you remove all seven 3 mm screws before proceeding to the next step.

Step 2



- Use iOpener or heat gun on all sides except the front.



Step 3

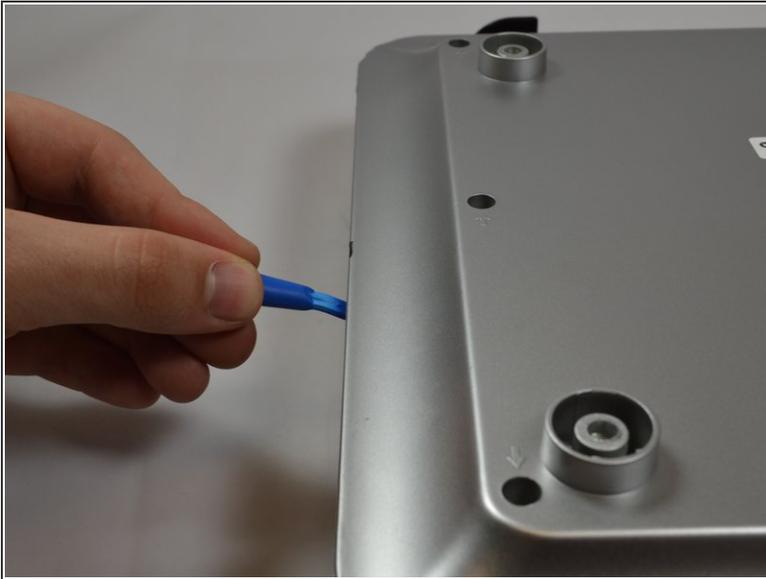

- Be cautious when taking the top of the device off there may still be some adhesive stuck to device.


⚠ The top of the device will be very difficult to remove because of the adhesive holding it together.

Step 4 — Audio Speakers

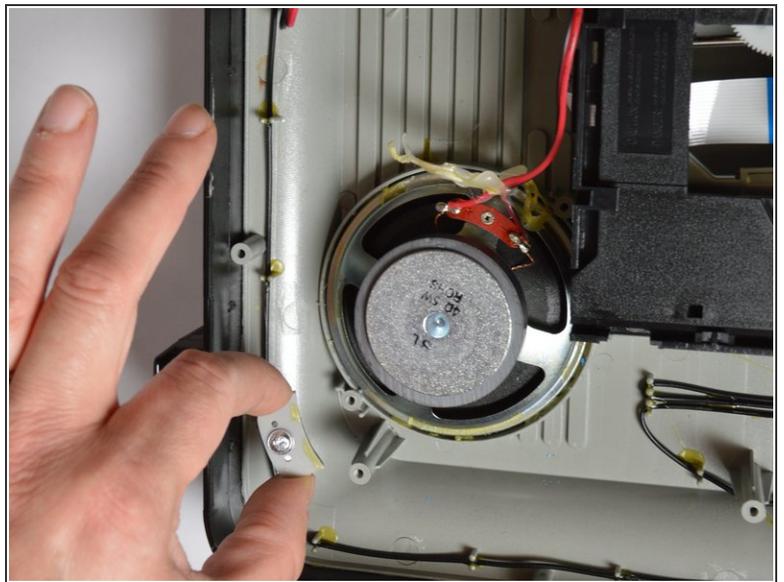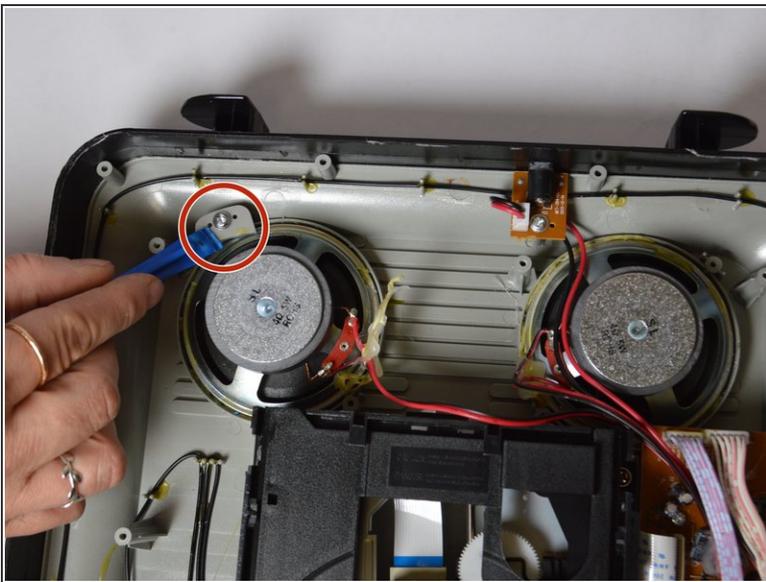

- Be sure to unscrew (3 mm) the two plastic brackets on each speaker, use iOpener or heat gun they are glued onto speakers, please do not discard.

Step 5

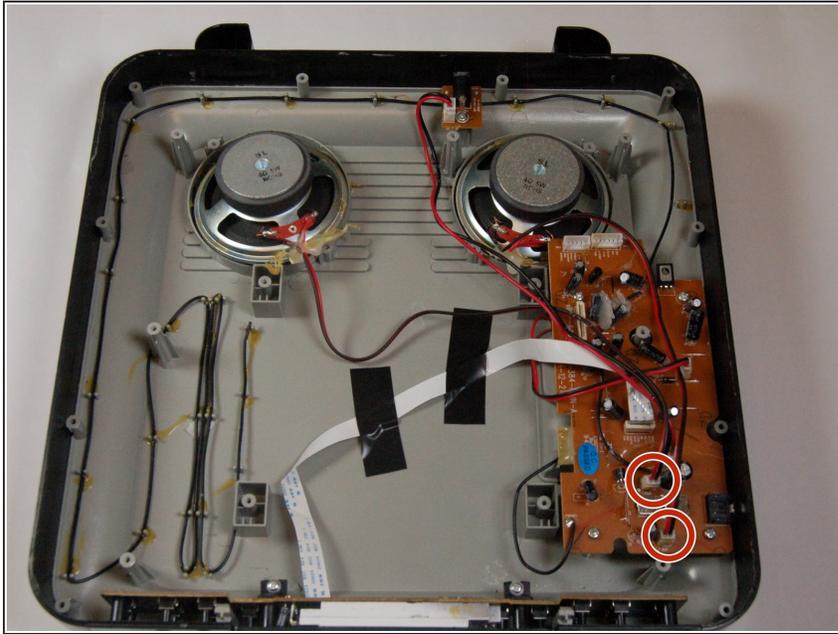

- Unplug both of the speakers from the motherboard.

To reassemble your device, follow these instructions in reverse order.