



JBL Xtreme Bass Radiator Replacement

This guide will show you how to remove a bass radiator from a JBL Xtreme Speaker.

Written By: Benny Huynh



INTRODUCTION

This guide will show you how to remove a bass radiator from a JBL Xtreme Speaker. Removing these radiators is required if they become damaged and will also be necessary to access certain components inside the speaker.

TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Cover



- Locate the seams next to the 'feet' on the bottom side of the device.

Step 2



- Use the metal spudger to gently pry and lift the edge of the seam. The cover is held in place with plastic snaps that will make a popping noise when disengaged. !!Start with the back half, this will expose TWO Screws that need to be removed before lifting the front half.

Step 3



- For the first part of the case: gently pull back the edges of the case rotating along the hinge opposite the opening seam illustrated in the second photo. Plastic snaps hold the cover in place.
- For the second part of the case: there are 2 screws to be removed at the seam. Once removed, the case will come off completely without forcing.

Step 4 — Bass Radiator



- Unscrew the six 9.75mm Phillips head screws holding the bass radiator in place.
- ⓘ Three of the five outer screws are indicated in the first image and the sixth inner screw is indicated in the second image.

Step 5



- Once the screws have been removed, the bass radiator will easily lift free.
- ⓘ Both radiators are identical. Repeat the above steps on the opposite radiator if necessary.

To reassemble your device, follow these instructions in reverse order.