


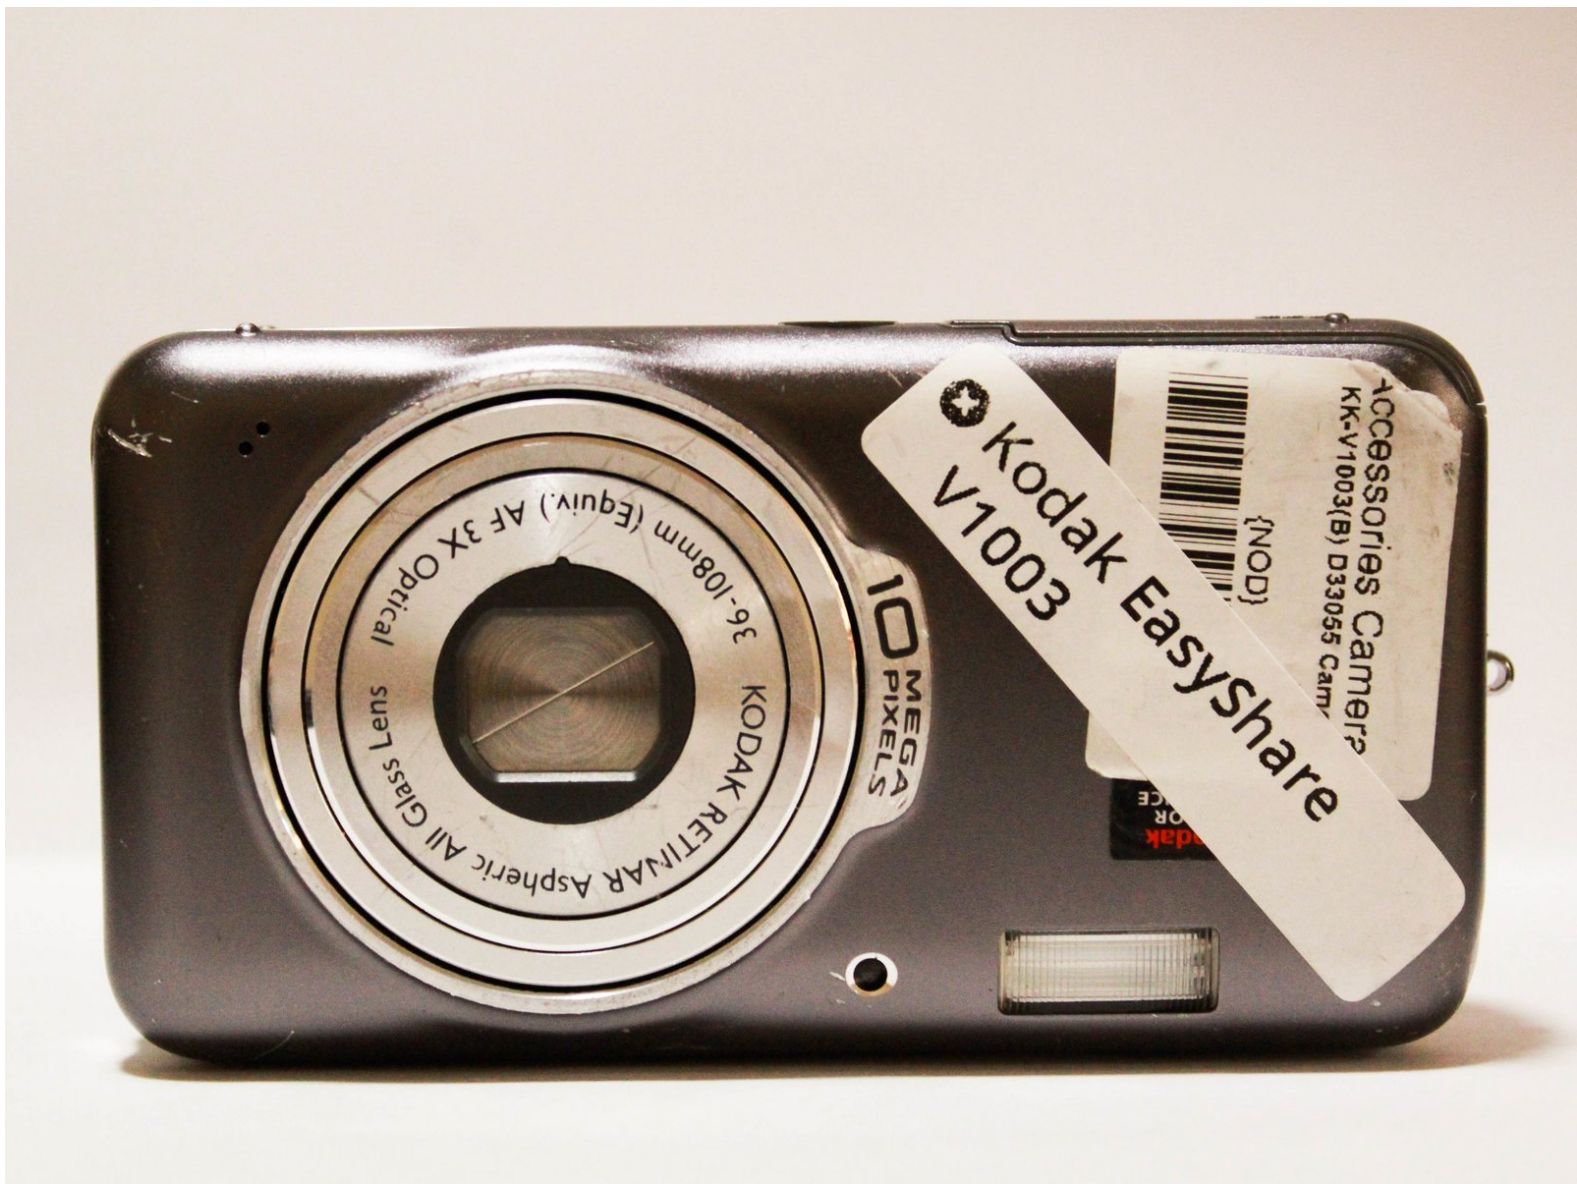

Kodak Easyshare V1003 Battery Replacement

Use this guides to remove and replace a malfunctioning battery on the Kodak EasyShare V1003 digital camera.

Written By: Sarah Berry



INTRODUCTION

This guide provides step-by-step instructions for removing and replacing the battery. There are no tools required and no safety precautions needed.

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera.

Step 2



- Position camera with the bottom facing up.

Step 3



- With your finger, slide the battery cover in the direction of the open arrow.

Step 4



- Lift the battery cover up gently.

Step 5



- Gently push the battery down until a click is heard. Battery should release and be lifted out of slot.

To reassemble your device, follow these instructions in reverse order.