



Lenovo IdeaPad U450 Battery Removal

In order to complete various other repairs and replacements for the Lenovo IdeaPad U450 you will need to remove the battery.

Written By: Rachel L Rodrigues



INTRODUCTION

In order to complete various other repairs and replacements for the Lenovo IdeaPad U450 you will need to remove the battery.

Step 1 — Battery



- ⚠ Turn off and unplug your laptop to prevent the risk of electrocution.
- Turn your laptop over so that the bottom is face up.

Step 2



- ⓘ On the top left of the laptop there is a switch. Make sure it's pushed in the unlocked position.

Step 3



- Locate the switch collinear with the last one and move the switch to an unlocked position.

Step 4



- Remove the unlocked battery.

To reassemble your device, follow these instructions in reverse order.