



Canon FS30 Tripod Adapter Replacement

This guide will show you how to remove the tripod adapter using no tools.

Written By: Mariafernanda Proano



INTRODUCTION

If the camcorder's tripod mount needs replacement this guide will show you how. This should take no more than 30 seconds and requires no tools.

Step 1 — Tripod Adapter



- Locate the tripod adapter on the bottom of the camcorder.

Step 2



- Lift the bail with your fingernail.
- Grip the bail and rotate it counter-clockwise until it comes out.

Step 3



- The tripod adapter can now be lifted out and replaced.

To reassemble your device, follow these instructions in reverse order.