



# Canon FS30 Hand Strap Replacement

This guide will show how to remove the hand strap of a Canon FS30 camcorder using no tools.

Written By: Emanuel Keller



# INTRODUCTION

If your camcorder handstrap is worn out or damaged, it needs to be replaced. This guide will show you how to remove it.

## Step 1 — Hand Strap



- Peel the hook and loop fastener apart

## Step 2



- Slide the thin hook and loop strap out of the camera strap.
- Remove the strap from the camcorder.

To reassemble your device, follow these instructions in reverse order.