



Canon PowerShot G1 X Screen Casing Replacement

This guide will show you how to replace the...

Written By: Joseph Cosgrove



INTRODUCTION

This guide will show you how to replace the screen casing of your Canon PowerShot G1 X camera. The screen casing protects the camera's display screen and ensures it functions properly. If you've accidentally damaged the casing, follow these step-by-step instructions to safely replace it.

A damaged screen casing can result in exposed internal components, cause further damage to the camera, and reduce device functionality. If you see visible damage or experience issues with your camera's screen, then it's important to perform this repair.

Before you begin, make sure your camera is powered off and the battery is removed for safety. Consider wearing anti-static wrist straps and gloves to handle sensitive components and protect against shock. Back up your data to avoid any loss during the repair.

TOOLS:

[Phillips #000 Screwdriver](#) (1)

Step 1 — Screen Casing




- Remove the screws on the outside of the screen case shown in the photo.

Step 2




- Remove the screws on the side of the screen casing next to the hinge on the camera.

Step 3

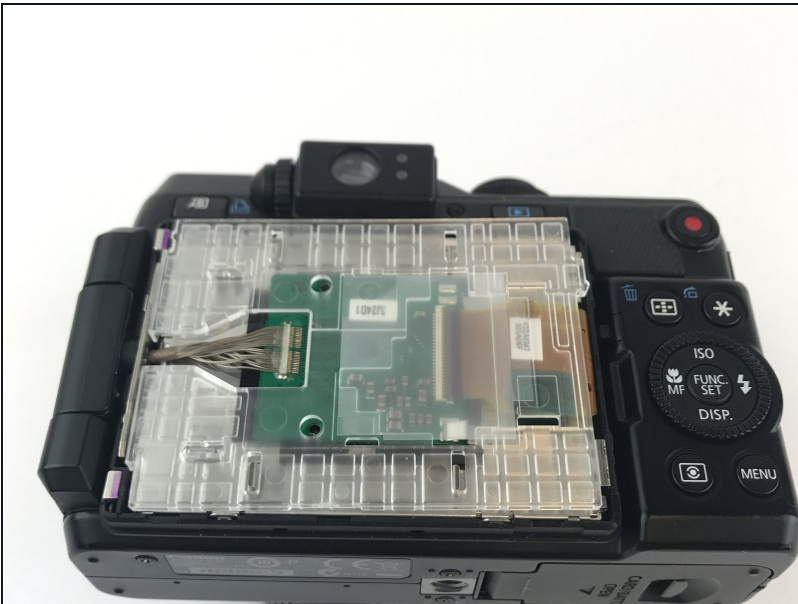


- Remove the back side of the screen casing. When removing this back casing there will be a clear plastic piece inside, remove this as well. If this is the piece you are servicing, replace it and skip to the conclusion of this guide.

Step 4

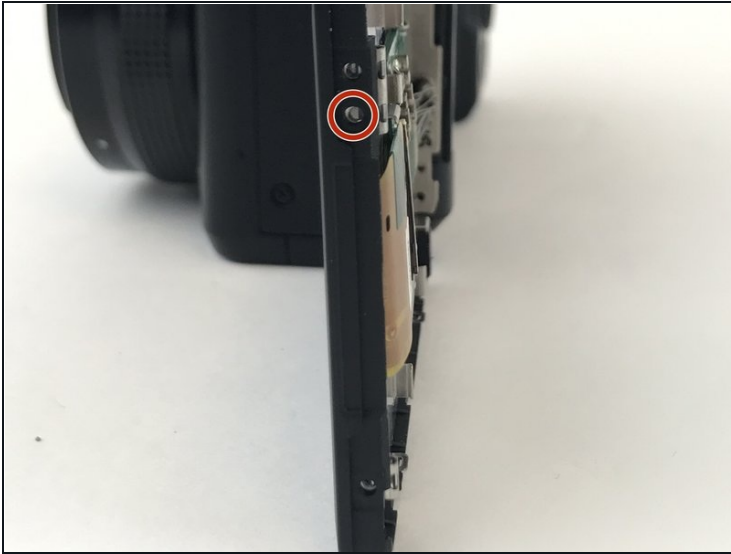


- With the plastic piece removed, locate the screws on the outside and inside of the casing shown in the photos. Remove these screws.

Step 5

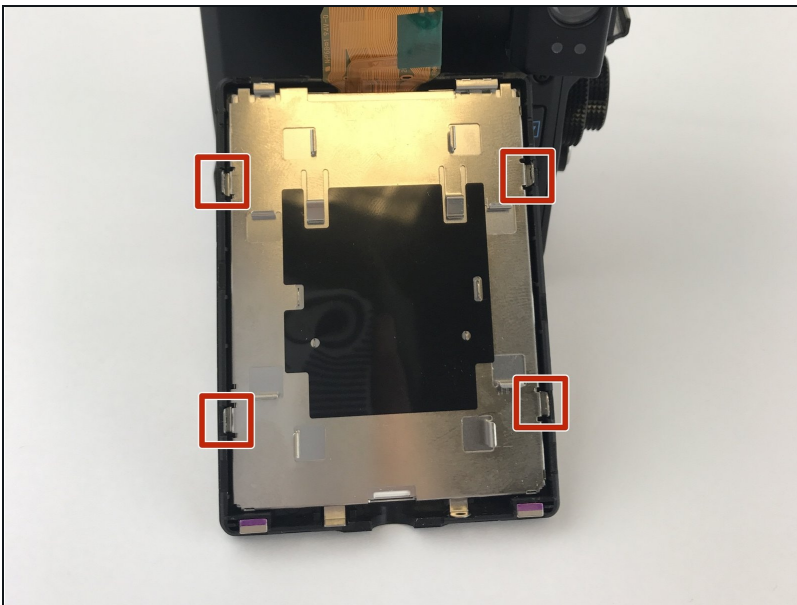

- Locate the four clips on the metal piece covering the back of the screen as seen in the photo. Push each of these clips in towards the center of the piece and pull up on the metal plate.

Step 6

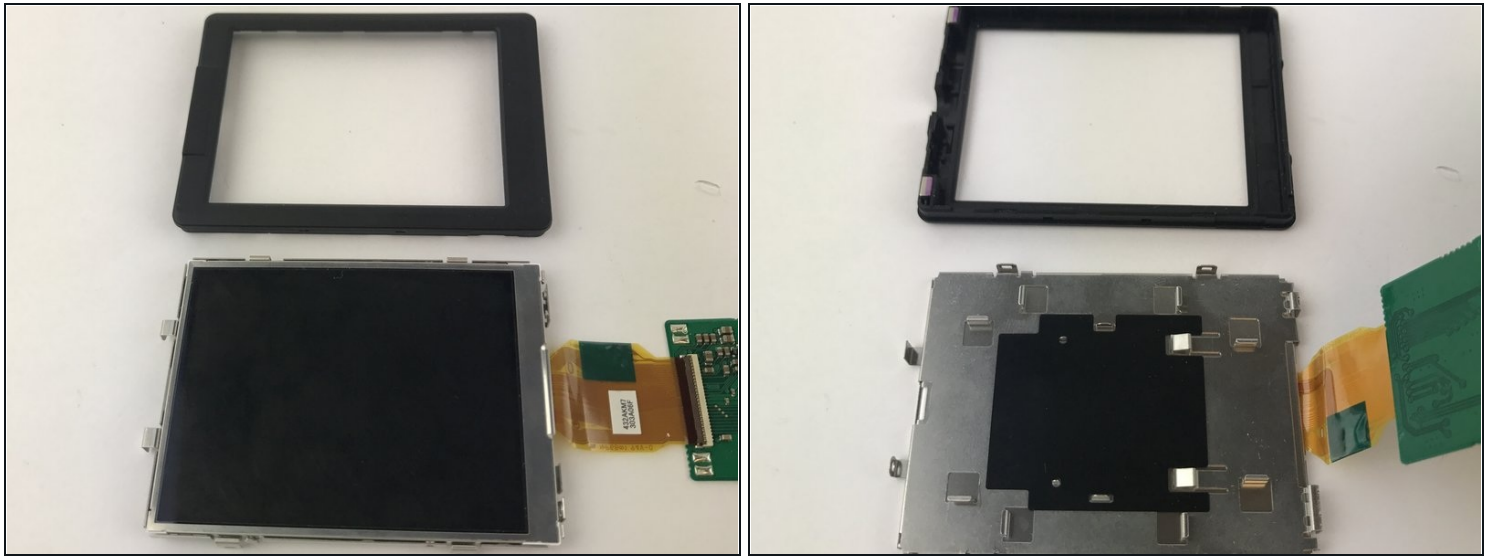

- Completely remove the casing from the screen and replace.

To reassemble your device, follow these instructions in reverse order.