



Ehang GHOSTDRONE Aerial Plus 2.0 Leg Replacement

This guide gives a step-by-step process on how...

Written By: Edrees Nawabi



INTRODUCTION

This guide gives a step-by-step process on how to replace the legs on the Ehang GhostDrone Aerial Plus 2.0 using minimal tools and in a timely manner. The legs on the Ehang GhostDrone Aerial Plus 2.0 requires the removal of hardware that is needed for reinstallation; please make sure to save this hardware. Before starting this guide, please ensure you have all replacement parts and the needed driver tools for the job. This process is straightforward and should take 3 minutes to complete.

TOOLS:


[Mako Driver Kit - 64 Precision Bits](#) (1)

Step 1 — Leg



- Flip the drone upside-down.
- Identify the screws attaching the legs to the drone.

Step 2

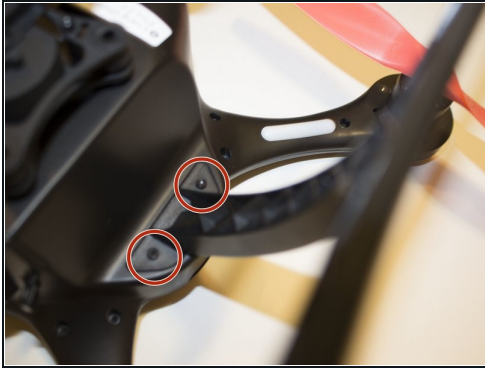

- Remove the four screws attaching the legs to the drone using a Hex 2.0 screwdriver.

Now that the original legs have been removed. The replacement legs can be reassembled on to the drone. To do this simply follow the steps above in a reverse order.