




Dell Studio 1737 RAM Replacement

This guide will instruct you how to remove or replace RAM sticks in a Dell Studio 1737 Laptop

Written By: Joseph Jacavone

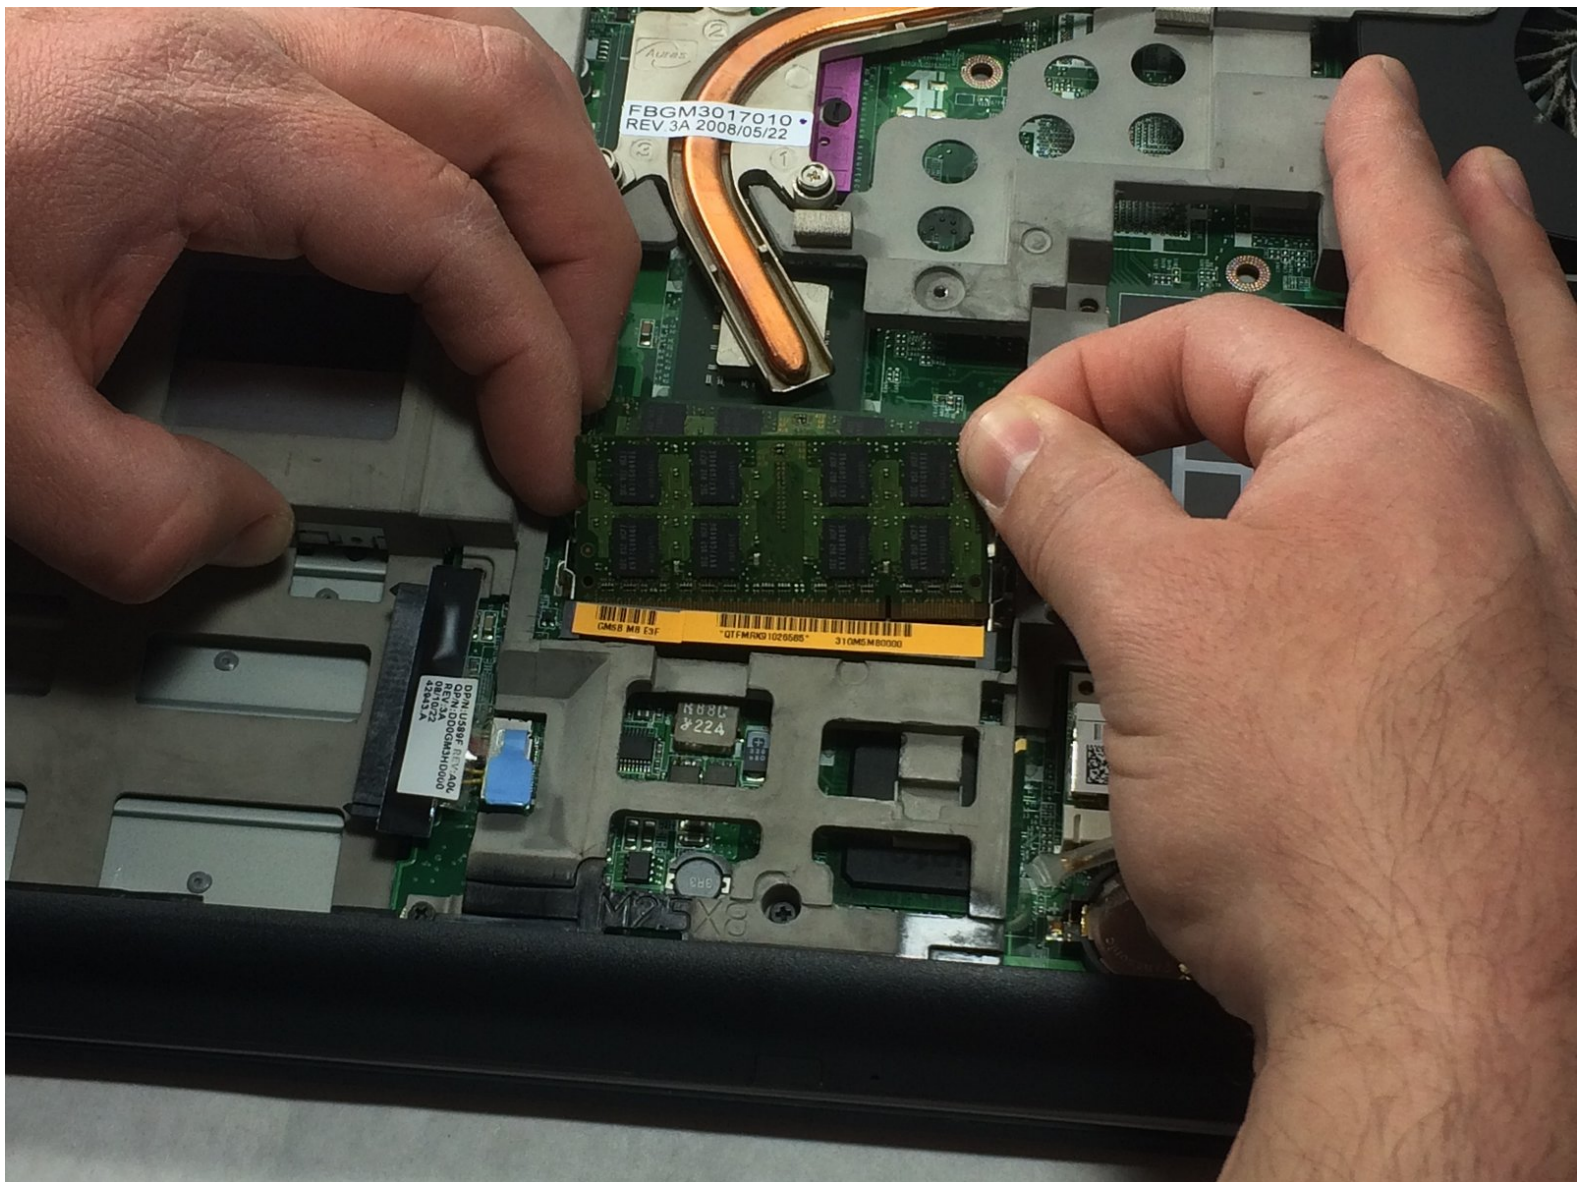

INTRODUCTION

RAM can be responsible for bluescreens and other difficult-to-diagnose errors; this guide will instruct you how to replace, remove, or add RAM to your Laptop



TOOLS:




- [Mako Driver Kit - 64 Precision Bits](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery





- Slide the battery release slider all the way to the right and push the battery straight out of the back of the computer

Step 2 — Back Panel

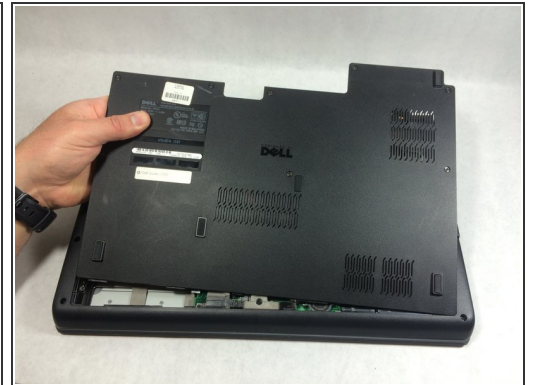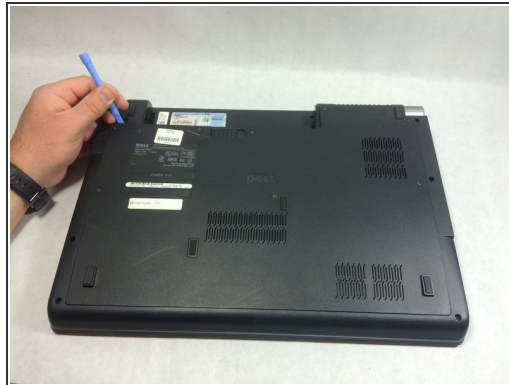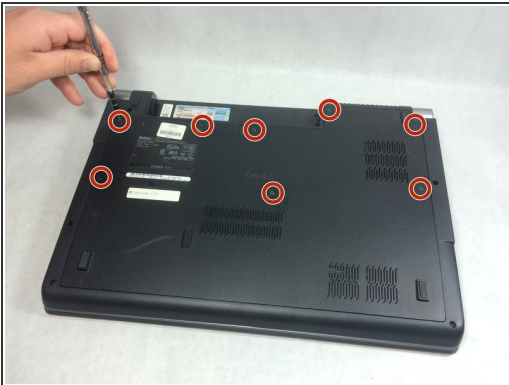

- Unscrew the 8 Phillips head screws marked in the photo.
- ⓘ Even when the screws are fully detached, they will not come out of the panel.
- Use a plastic opening tool to pry the panel away from the laptop body.
- Lift the panel up and away.

Step 3 — RAM

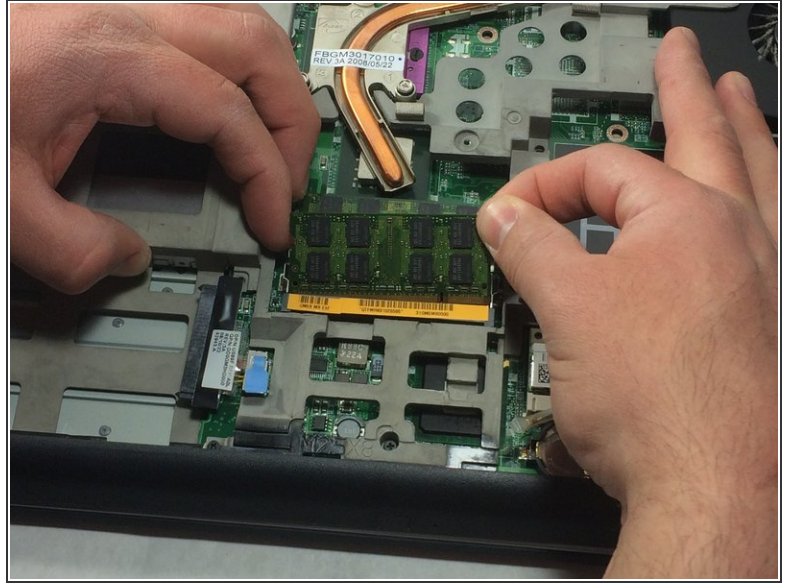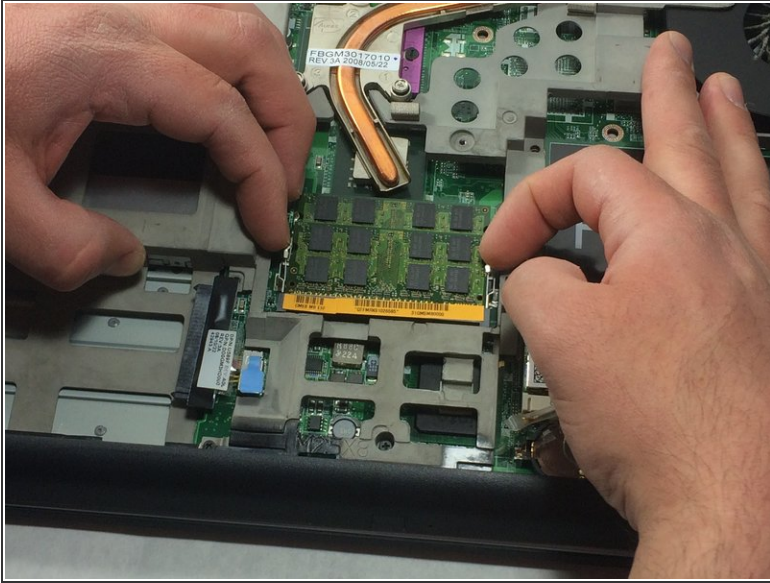

- Release RAM sticks by pulling clips out in opposite directions of each other.
- Pull RAM stick up and out.

To reassemble your device, follow these instructions in reverse order.