



Acer Aspire 4743-6481 DVD Drive Replacement

If you are having trouble opening your DVD...

Written By: Filippo Santoro



INTRODUCTION

If you are having trouble opening your DVD drive or reading CDs with it, use this guide to replace it with a new one.

TOOLS:

Tweezers (1)

Phillips #000 Screwdriver (1)

Step 1 — Battery



- Turn over the laptop to view the underside.

Step 2



- Use [tweezers](#) (or a similar tool) to slide the orange push pin. To release the battery, push it to the left.

Step 3



- You can lift the battery up and out now.

Step 4 — DVD Drive



- Remove the 7.0 mm screw, circled in the picture, using a Phillips head screwdriver.

Step 5




- Once the screw is removed, the DVD drive should easily slide out

Step 6



- Remove the drive completely.

Step 7

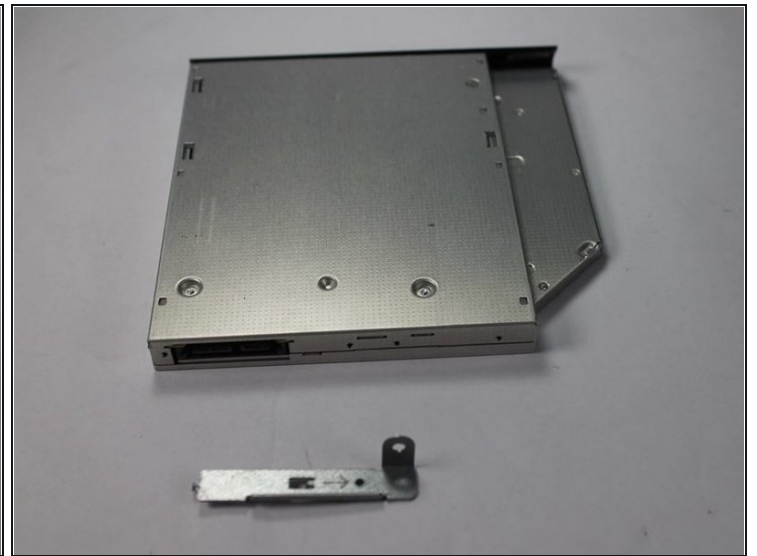

- Face the side of the DVD drive that connects to the laptop and remove the 3mm screw with a Phillips head screwdriver.
- ① Put the screw and the bracket to the side as you may need it for your replacement.

To reassemble your device, follow these instructions in reverse order.

