



Asus A52F XE2 Battery Replacement

A device's battery will eventually deteriorate...

Written By: Morgan Hays



INTRODUCTION

A device's battery will eventually deteriorate and stop working properly. This can cause your device to stop charging or it will fail to maintain charge. This guide will show you how to replace the battery of the Asus A52F XE2.

TOOLS:

Flathead 4 mm Screwdriver (1)

Step 1 — Battery



- Place the laptop face down with the battery facing away from you.
- Locate the two buttons next to the battery.
- Slide the right slider to the unlocked (red) position.

Step 2



- Hold the left button to the left.
- Slide the battery with your other hand away from you and it should disconnect.

To reassemble your device, follow these instructions in reverse order.