



# Acer Aspire 4743-6481 Screen Replacement

This guide provides detailed instructions on how to remove and replace the screen of your Acer Aspire 4743-6481.

Written By: Juan Seijas



---

## INTRODUCTION

If your device's screen display is distorted, cracked, flickers, or has tiny dots, replacing the screen will probably solve these issues.

---

### TOOLS:

- [Tweezers](#) (1)
  - [Metal Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn over the laptop to view the underside.

## Step 2




- Use tweezers (or a similar tool) to slide the orange push pin. To release the battery, push it to the left.

## Step 3




- You can lift the battery up and out now.

## Step 4 — Screen

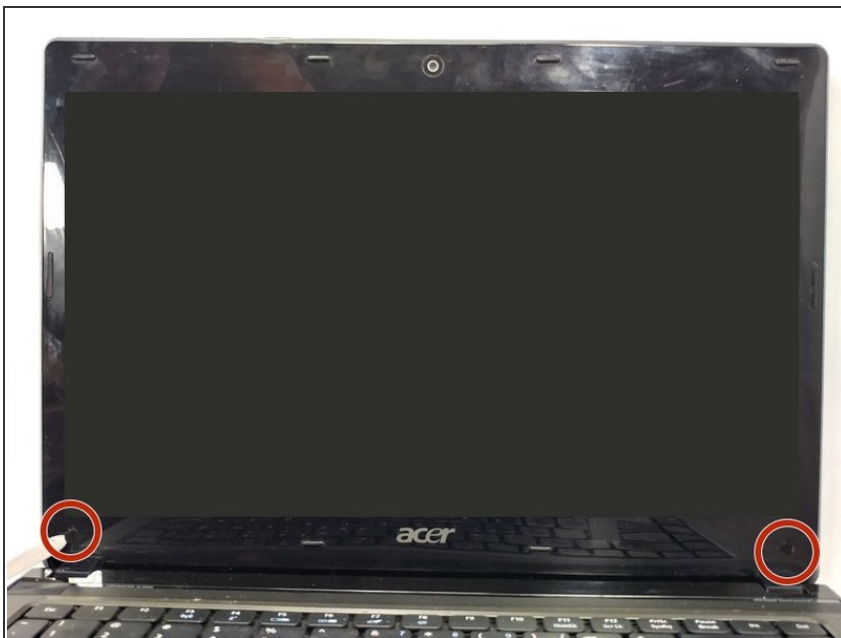


- Position the laptop so you have a clear view of the front of the screen.
- Remove the two screw covers at the bottom sides of the screen casing using a flat tool.
- Remove the two 5.0 mm Phillips screws. They will be directly underneath the screw covers.

## Step 5

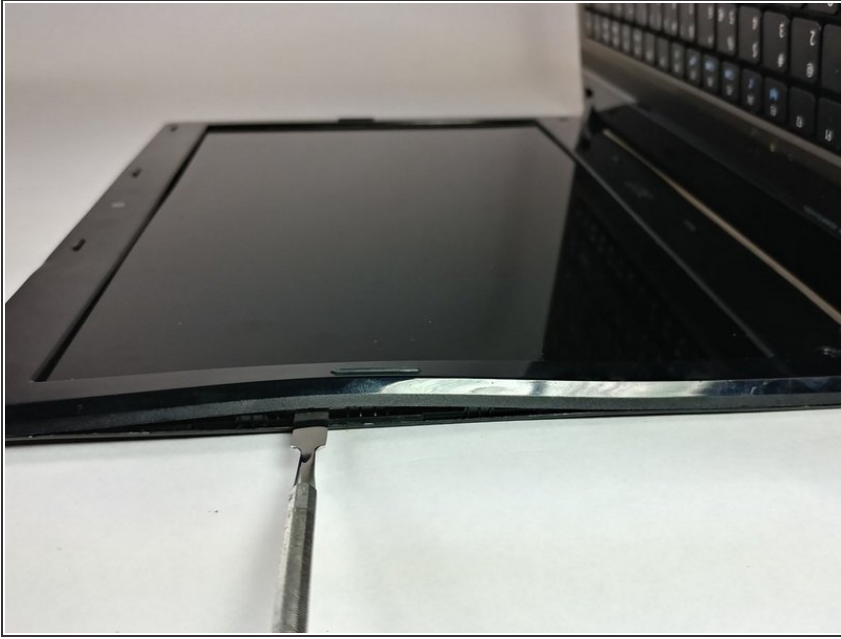

- Use a flat tool, to pry open along every side of the front casing of the screen.
- ⓘ It will require a small amount of force to grudge open. Make sure every side of the casing is loose before removing it.
- ⚠ You should use a metal pry tool only if you are unsuccessful with a plastic one. The metal tool could cause damage to your device.

## Step 6

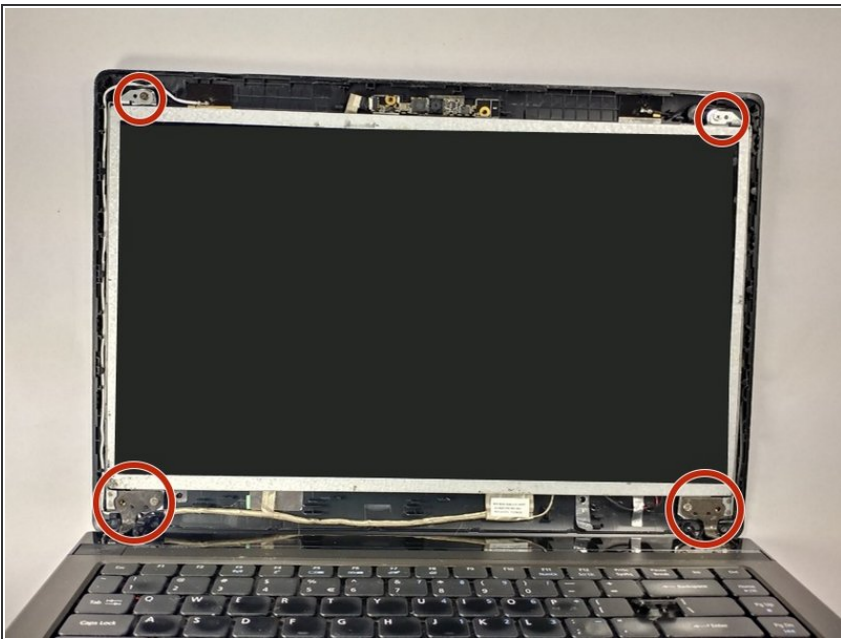

- Remove the front casing.
- Remove the four 5.0 mm Phillips screws located next to every corner of the screen.





## Step 7



- After removing the screws, gently place the screen on top of the keyboard.
- ⚠ Do not attempt to remove the screen yet since it is not fully disconnected from the laptop.
- ℹ You may use a piece of cloth or similar material beneath the new screen to avoid scratching it with the other surface.

## Step 8

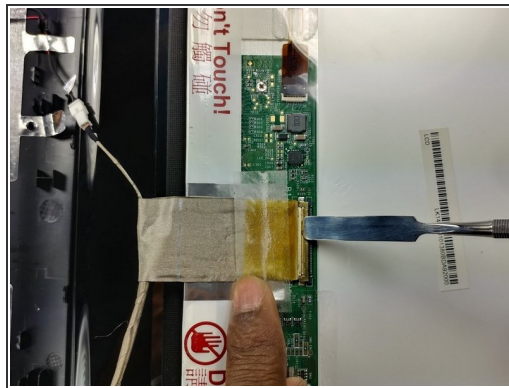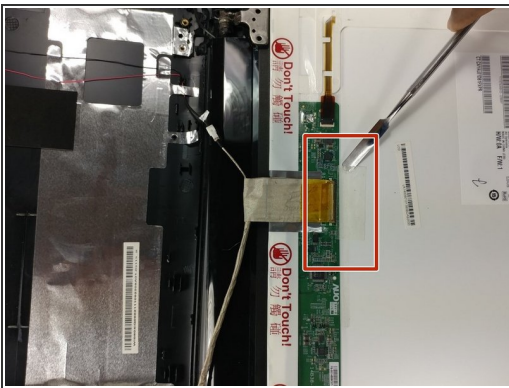

- Gently remove the tape that covers the connector cable, as highlighted in the first picture.
- With a flat tool, gently disconnect the connector cable from the damaged screen.

## Step 9



- Remove the four remaining 3.5 mm Phillips screws from the screen piece.
- ❗ There will be two screws on each side, one on the bottom and another on the top.

## Step 10



- The screen can be easily removed from its frame now.

To reassemble your device, carefully follow these instructions in reverse order.