




Black and Decker DustBuster 15.6V Suction Rubber Seal Replacement

Replacing Suction Rubber Seal.

Written By: Roberto Perez

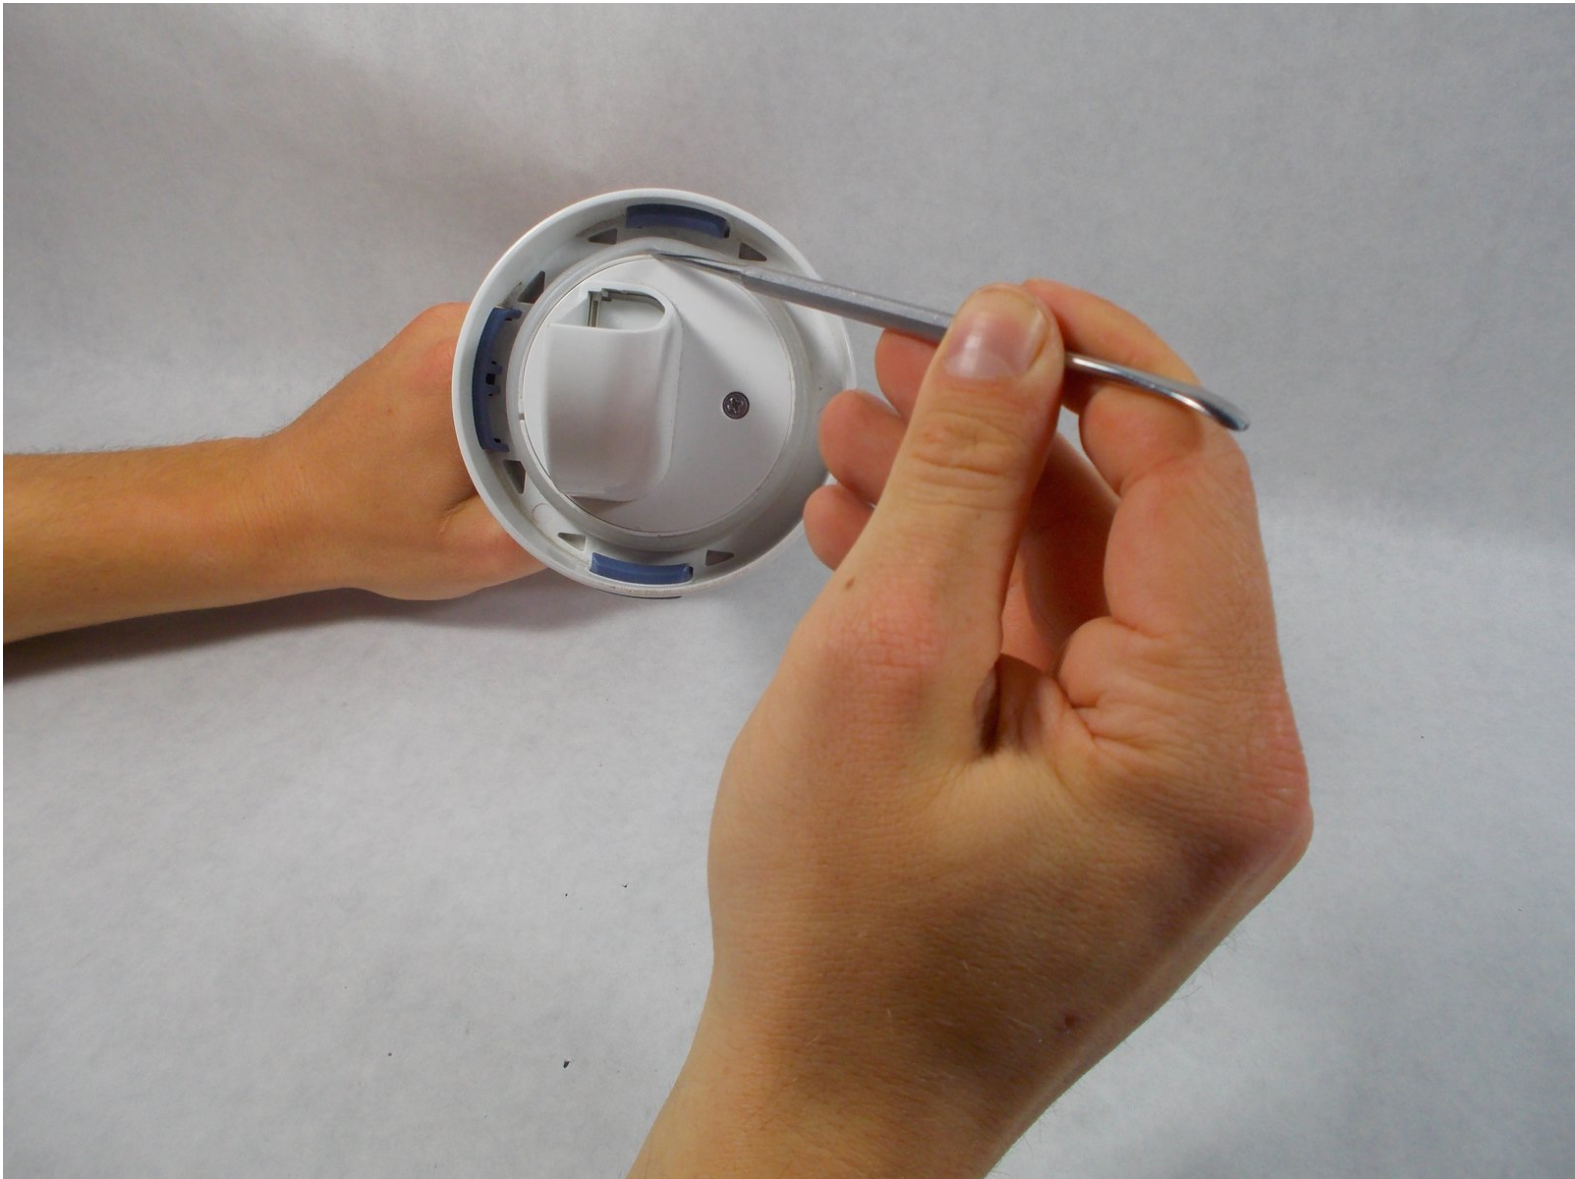

INTRODUCTION

Replacing suction seal which is the cause of loss performance and/or air leak.



TOOLS:


- [Metal Spudger](#) (1)
-

Step 1 — Suction Rubber Seal




- Press to blue unlock buttons at the base of the nozzle in word and pull forward .

Step 2

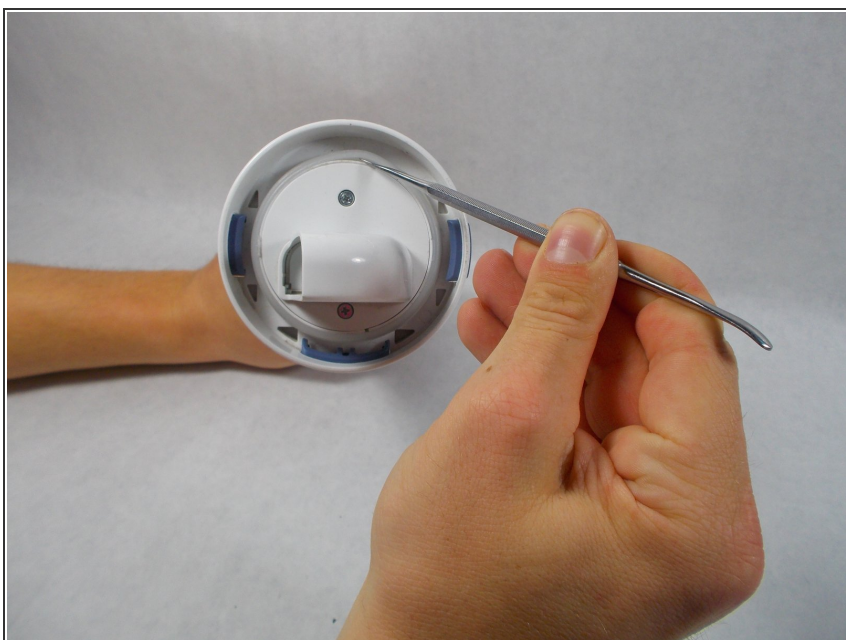


- Locate rubber suction seal.

Step 3

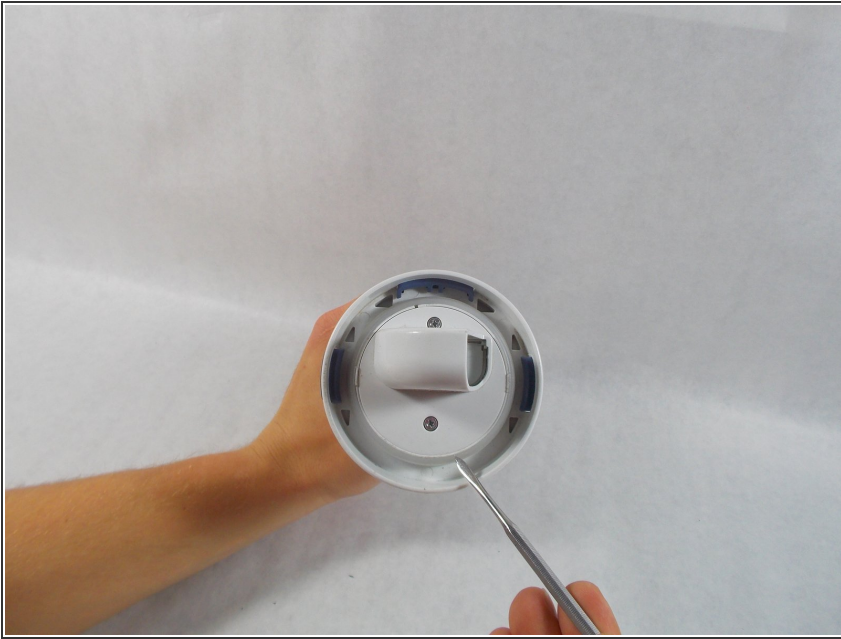

- Insert a metal spudger in between white plastic and rubber seal and gently drag spudger around see you lifting gently much like opening a can.

Step 4

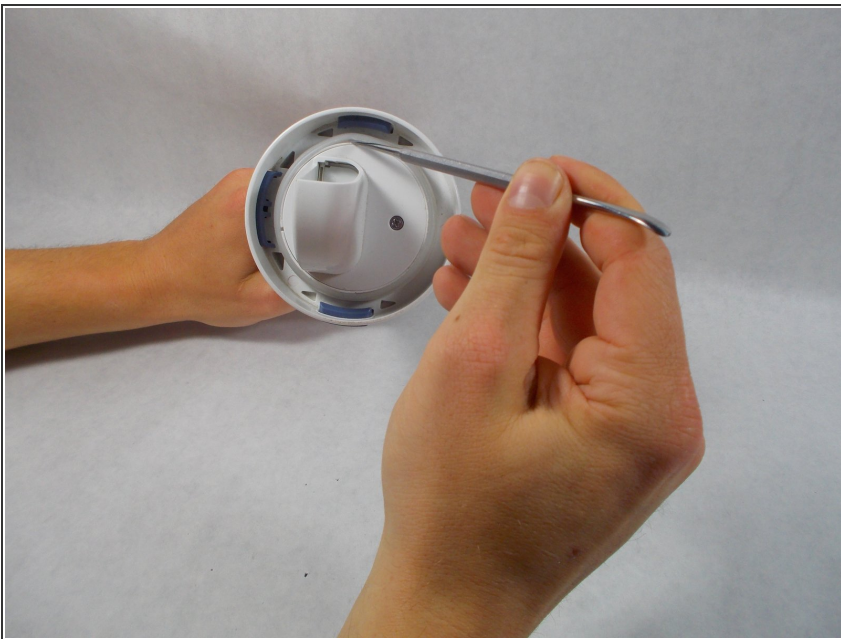

- Align slits on the bottom of new suction seal then press into those slits.
- ⚠ The seal should not come above white plastic.
- ★ If the nozzle does not connect to vacuum barrel, readjust seal and try to attach nozzle until it snaps into place.

To reassemble your device, follow these instructions in reverse order.