




Black and Decker Dustbuster CHV1510 Outer Shell Removal

Replacing a faulty power button switch.

Written By: luke Gauvin

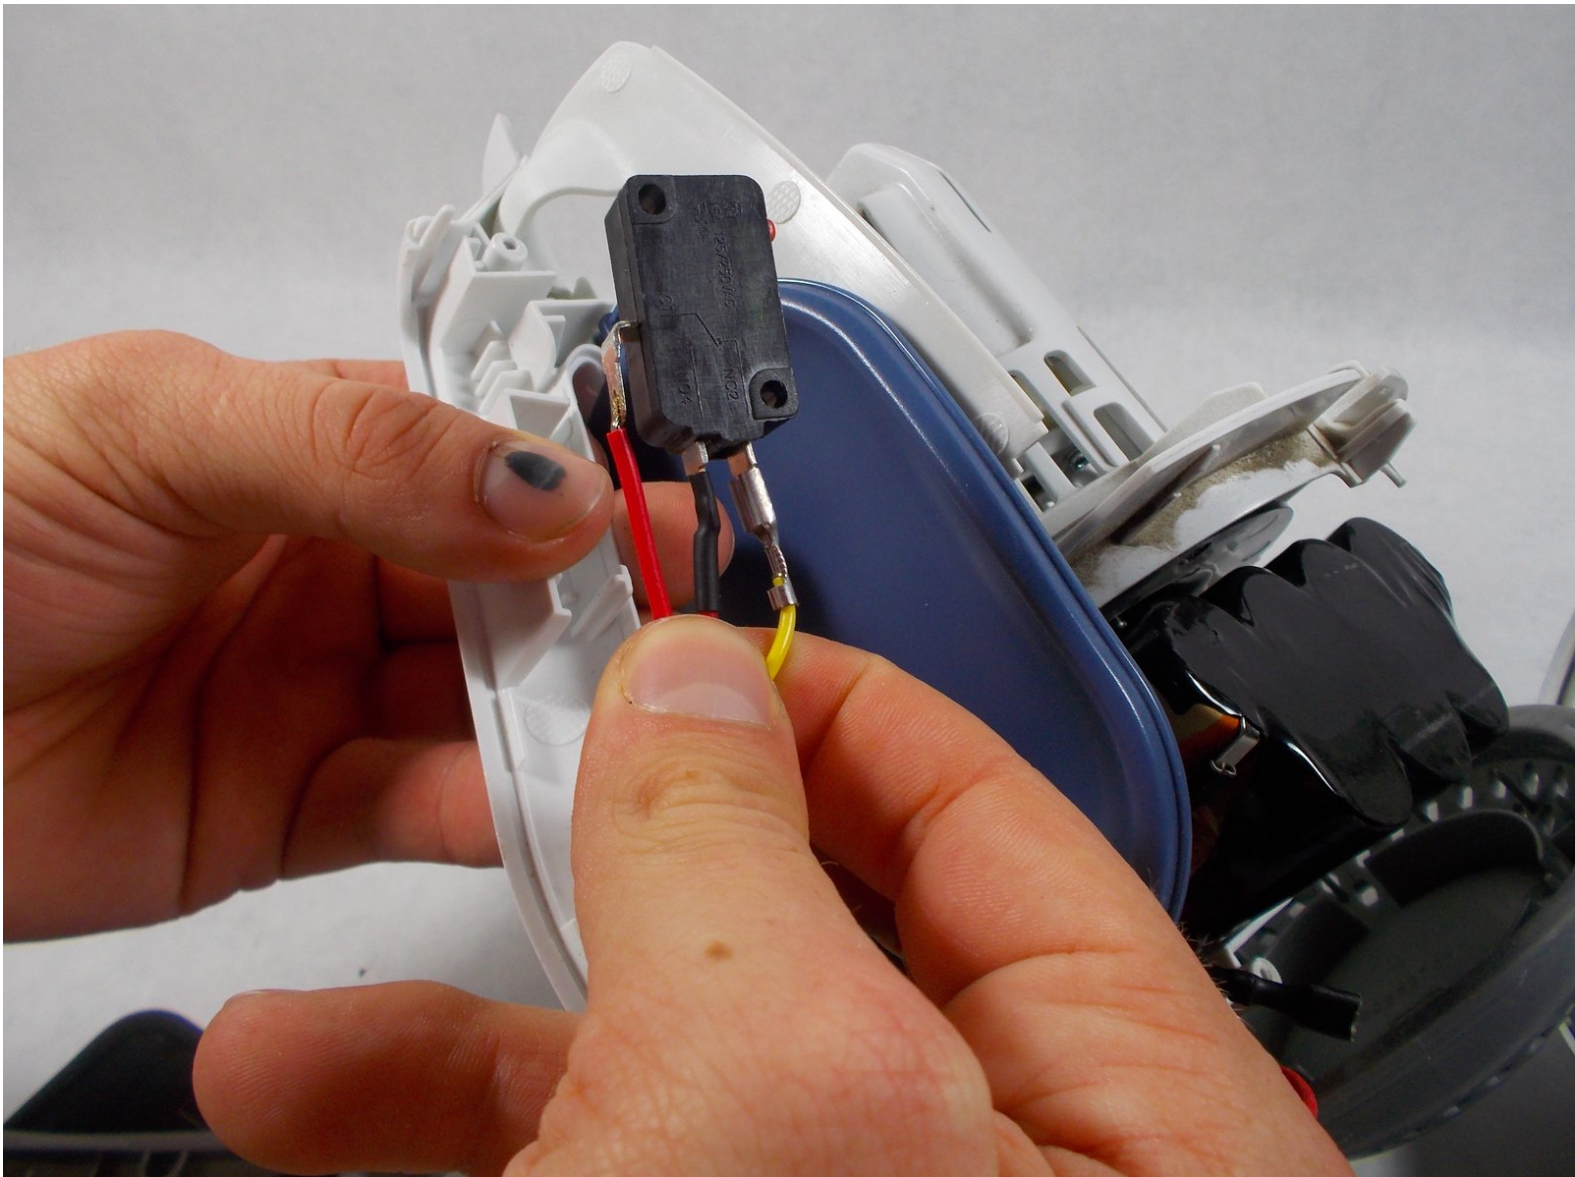

INTRODUCTION

This guide shows how to disassemble your vacuum enough to remove and replace a faulty power switch. It is a fairly simple process requiring only a long neck Phillips head screwdriver.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Replacement Power Switch](#) (1)


Step 1 — Black and Decker Dustbuster CHV1510 Outer Shell Removal



- Remove nozzle by pressing two blue buttons with unlock symbols on the side of the nozzle.
- Pull the nozzle upward.


***i** The other button cannot be seen on the image.*

Step 2

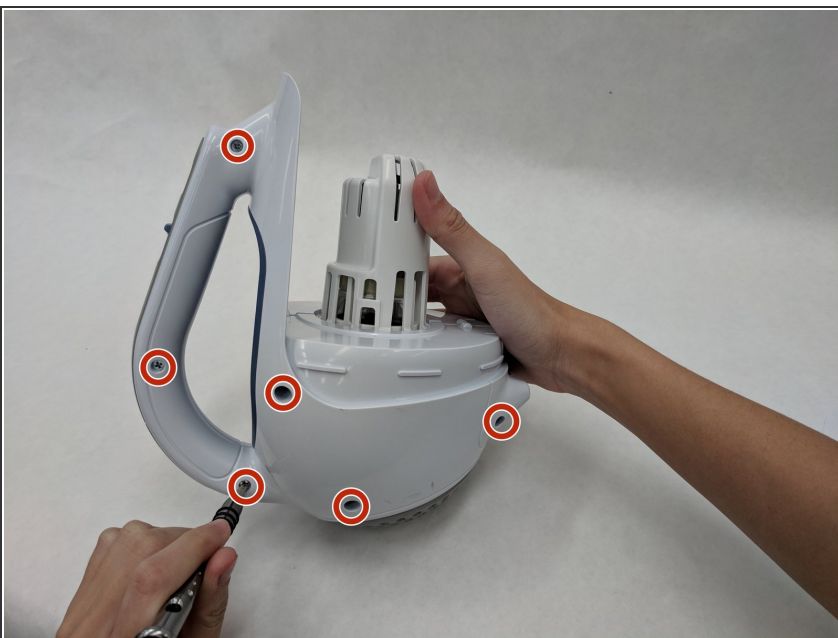

- Remove the six exterior 2 mm Phillips #1 screws that secure the two halves of the outer shell.

Step 3

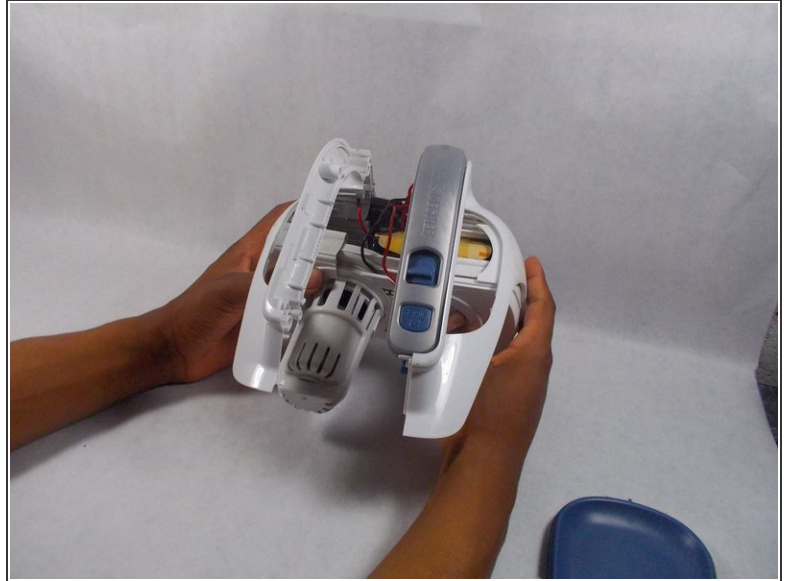


- Separate the two halves of the outer shell by pulling them apart.

Step 4



- Remove the grey handle by lifting it towards yourself.
- ⓘ Be cognizant of the compressed spring in the handle assembly to prevent it from ejecting.

Step 5

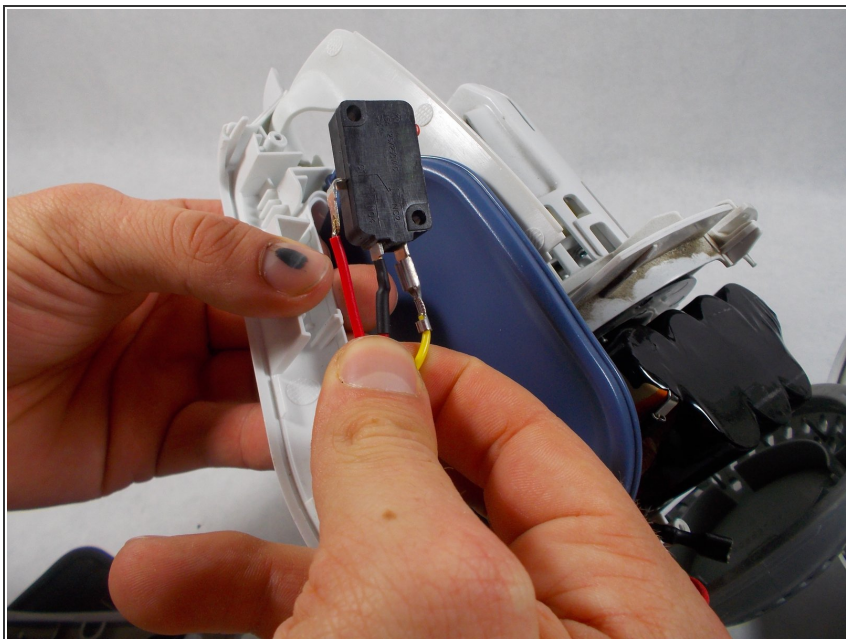

- Remove the switch assembly from inside the grey handle.

To reassemble your device, follow these instructions in reverse order.