



Fujifilm FinePix XP70 Button Replacement

This guide shows how to replace the shutter, power, and recording button at the top of the Fujifilm FinePix XP70.

Written By: Olivia A



INTRODUCTION

This guide shows how to replace the shutter, power, and recording button at the top.

TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Power off the camera.
- ⚠ Leaving the camera on while removing presents the risk of electrical shock or permanent data loss.

Step 2

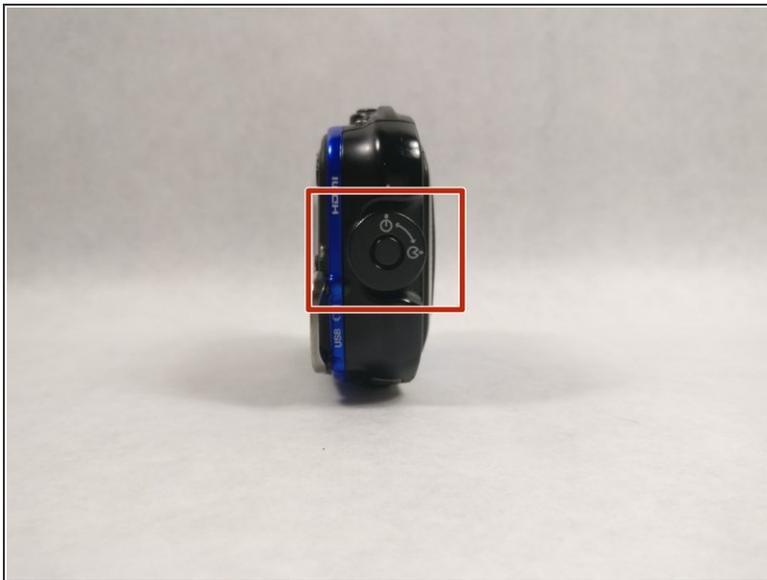

- Push down on the center button and turn the dial on the side counterclockwise to open the battery compartment.

Step 3



- Pull the orange tab towards the hinge to release the battery.

Step 4 — Button



- Pry the black button plate off using a plastic opening tool.
- ⓘ Buttons can fall out easily.
- ⓘ It's easiest to start from the side exposed by an open battery compartment.
- 📌 When putting this plate back on, orientate the buttons as shown to properly fit back into the plate.

Step 5



- Pull the three buttons out.

To reassemble your device, follow these instructions in reverse order.