




# Chumby One LCD Screen Replacement

A guide to show how to replace LCD Screen in the Chumby One.

Written By: Jordan Houchins

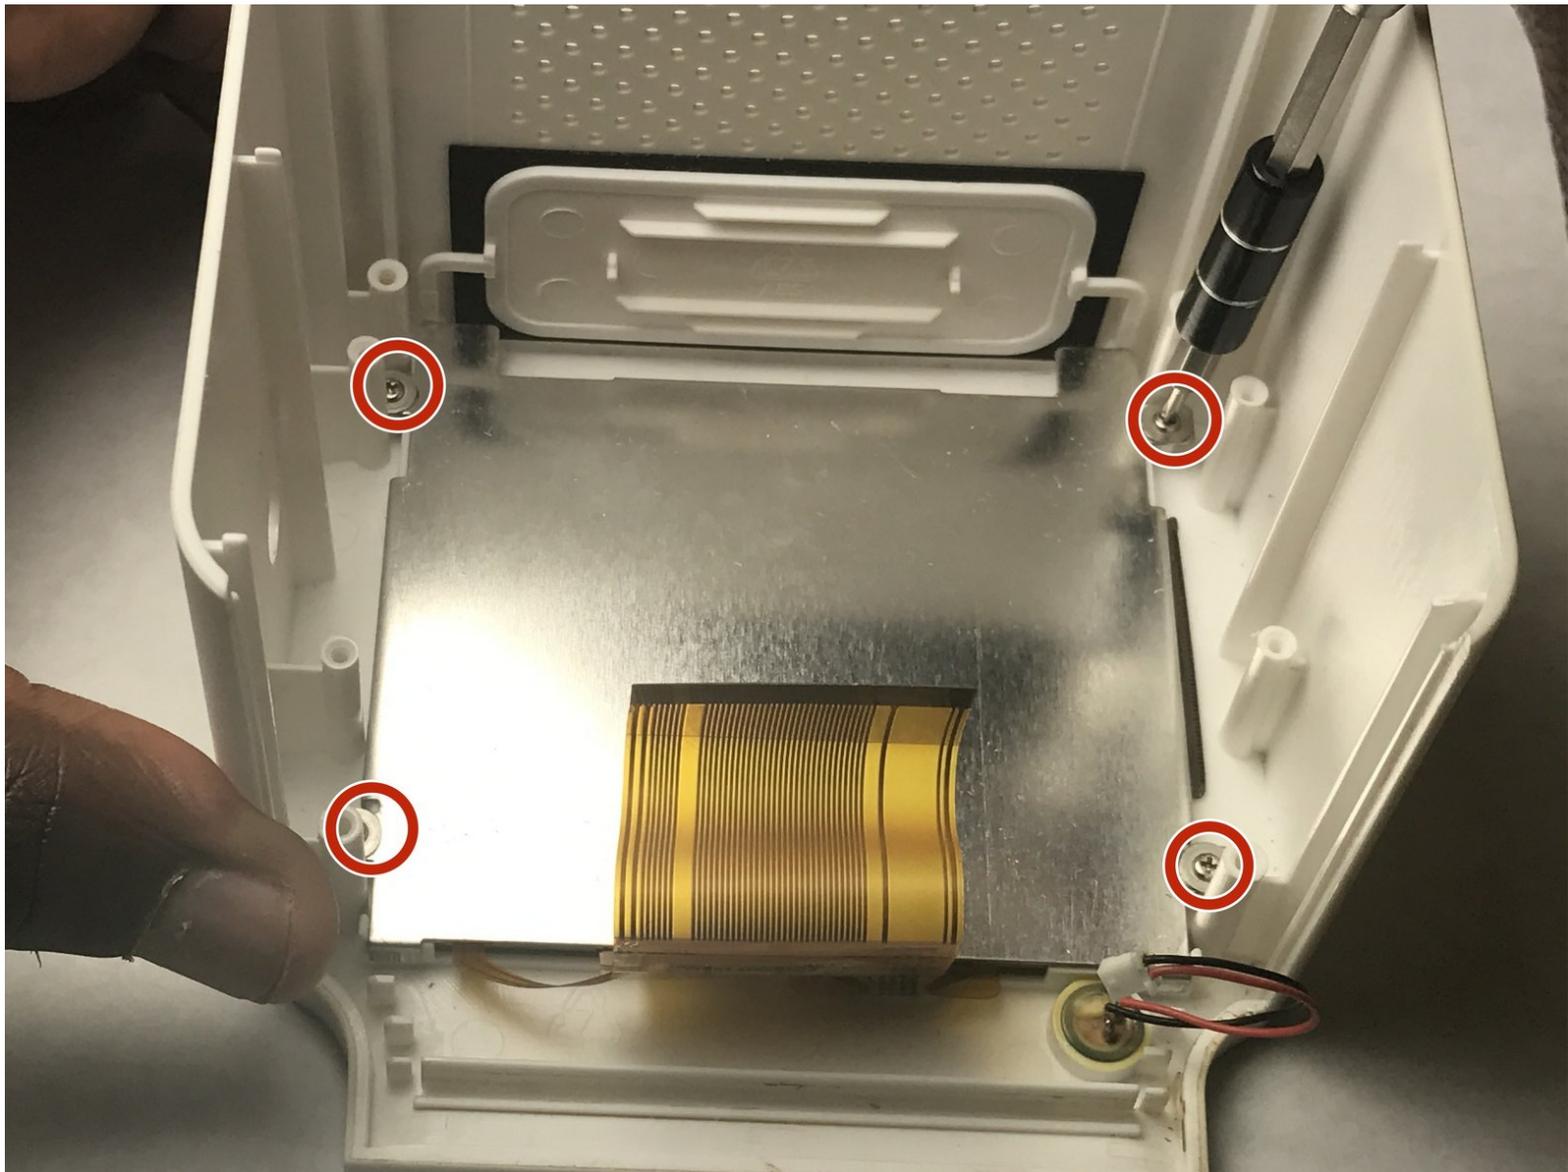

---

## INTRODUCTION

A guide to show how to replace LCD Screen in the Chumby One.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Chassis




- Remove 4 self-adhesive plastic dots covering the screw holes.

## Step 2

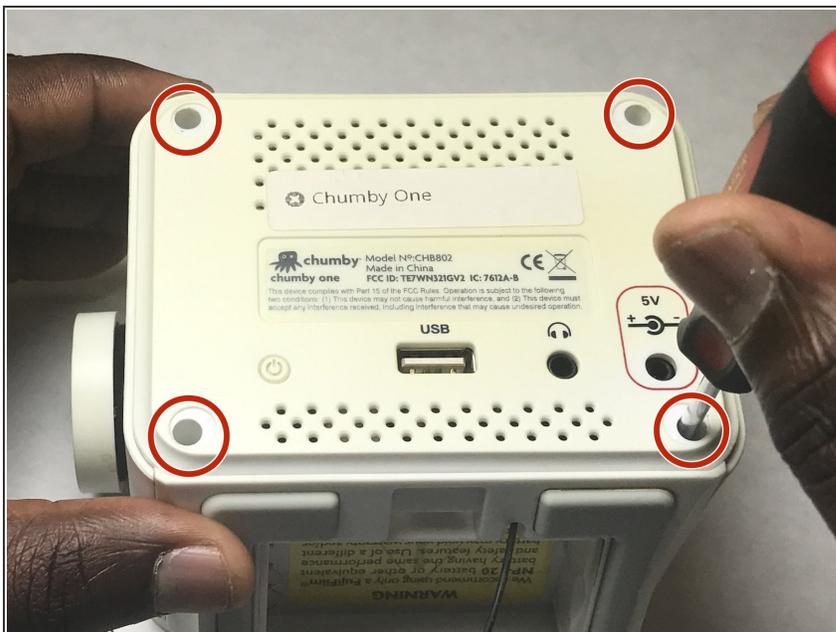


- Remove the four 2mm screws with a Phillips screwdriver.

### Step 3

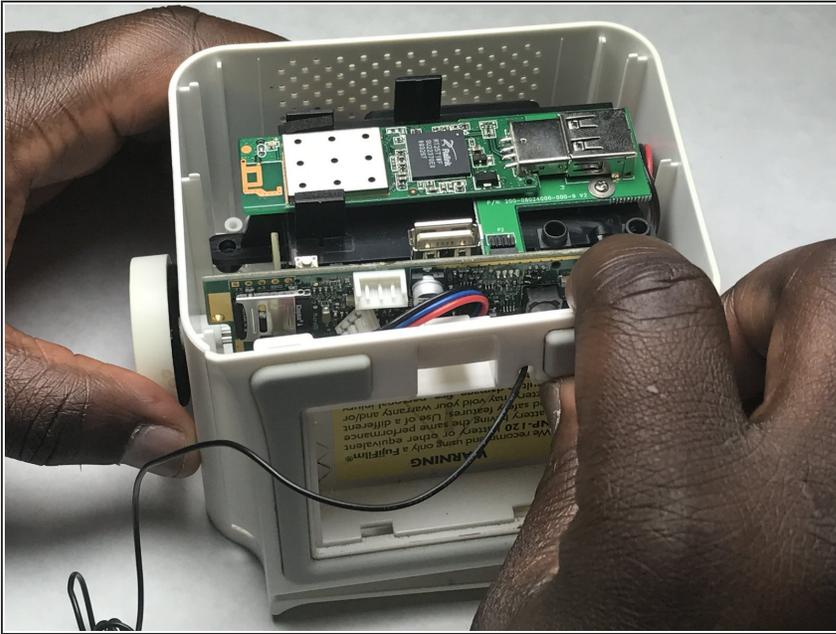


- Remove the back and bottom cover.

### Step 4

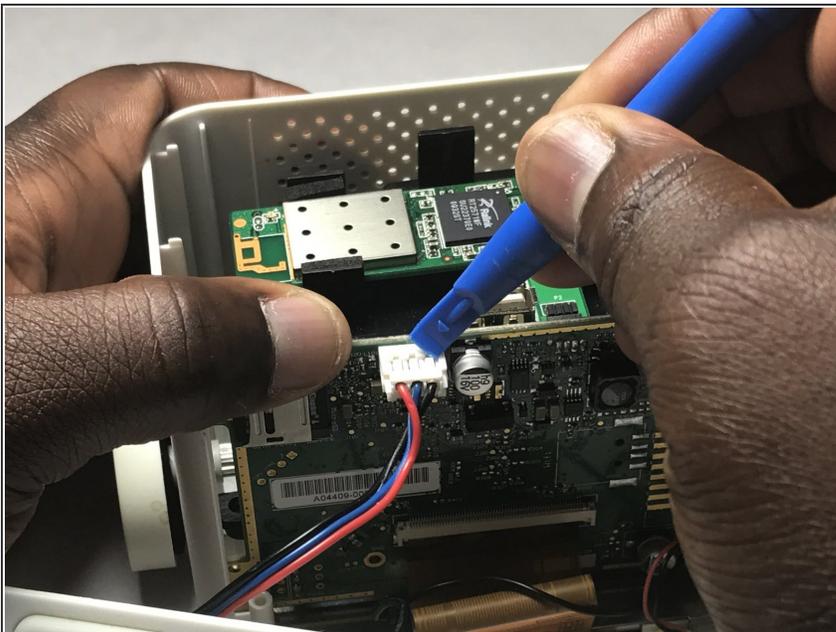


- Disconnect the battery connector from the motherboard with a plastic opening tool.

## Step 5

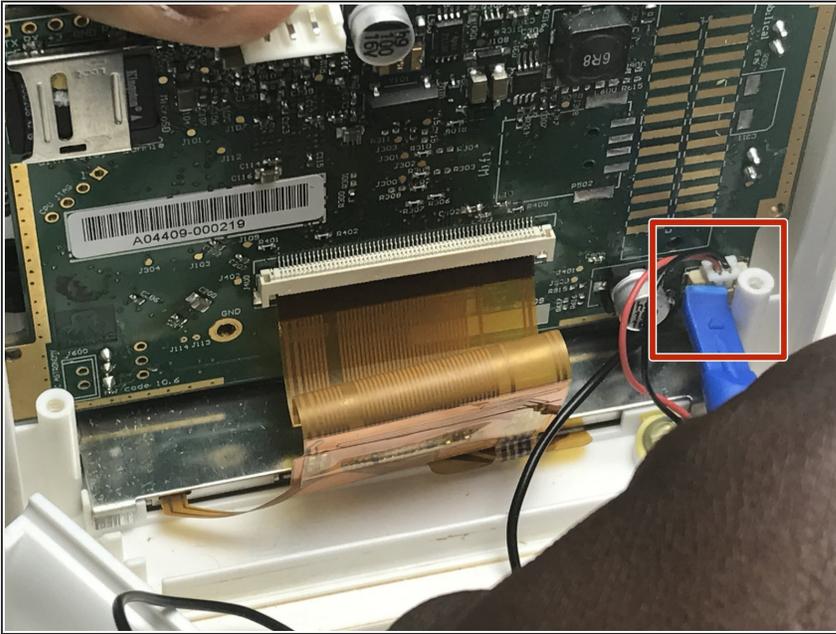


- Disconnect the microphone connector from the motherboard with a plastic opening tool.

## Step 6

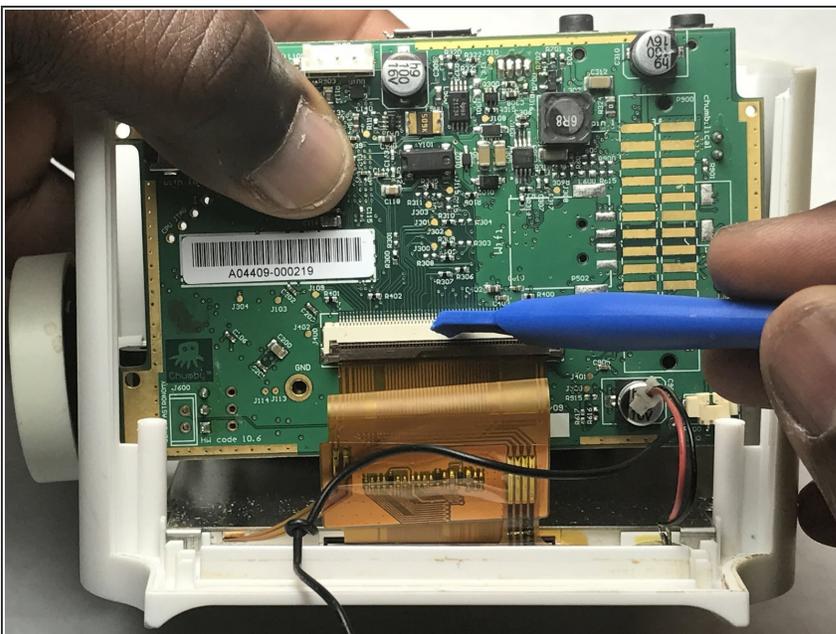


- Remove the display ribbon cable from its socket with a plastic opening tool.

## Step 7

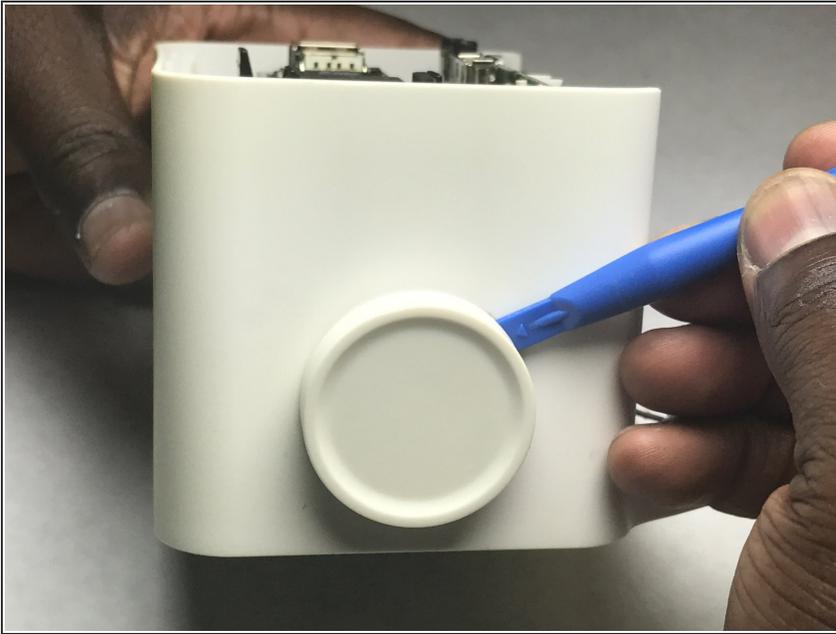


- Remove the volume knob from the side of the Chumby One with a plastic opening tool.

## Step 8

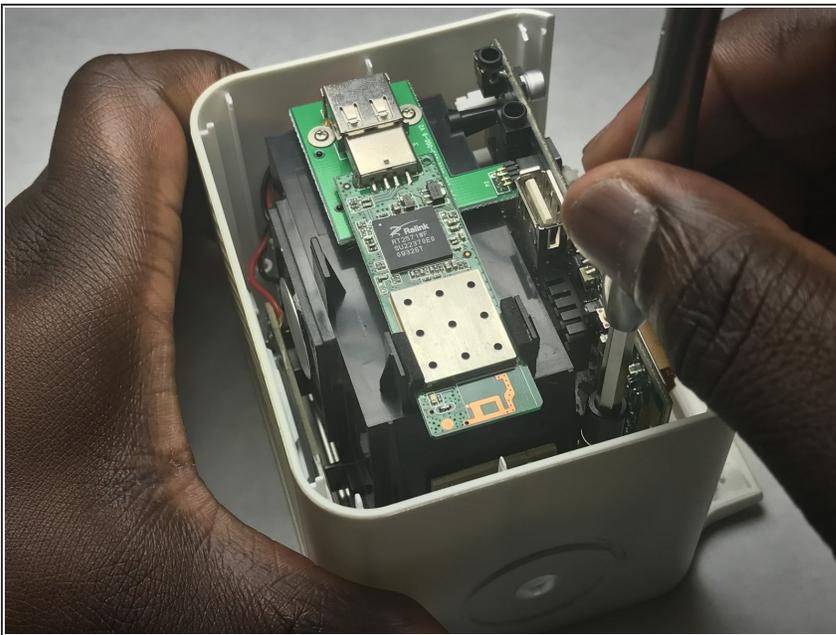


- Remove the four 6mm screws using a PH000 bit on the inner chassis.

## Step 9

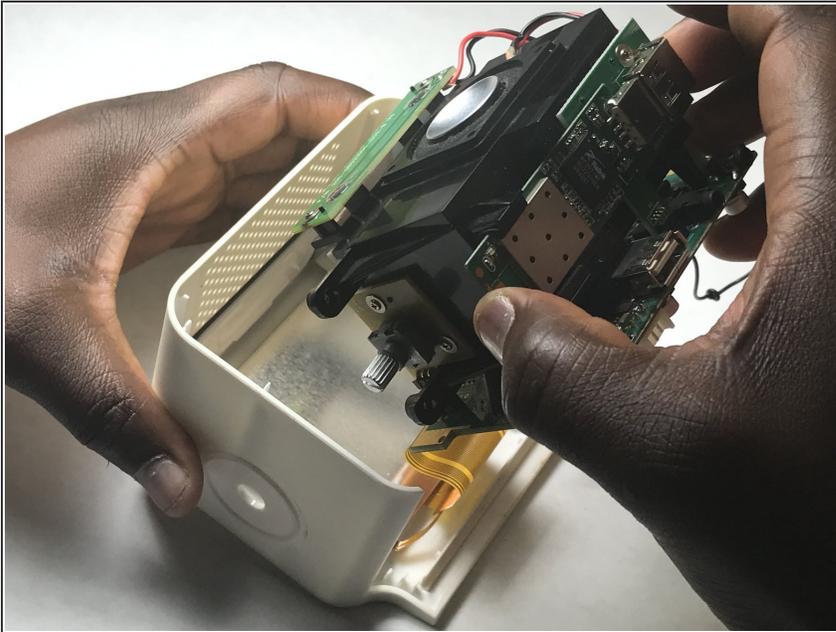


- Remove the inner components from the outer shell.

## Step 10 — LCD Screen

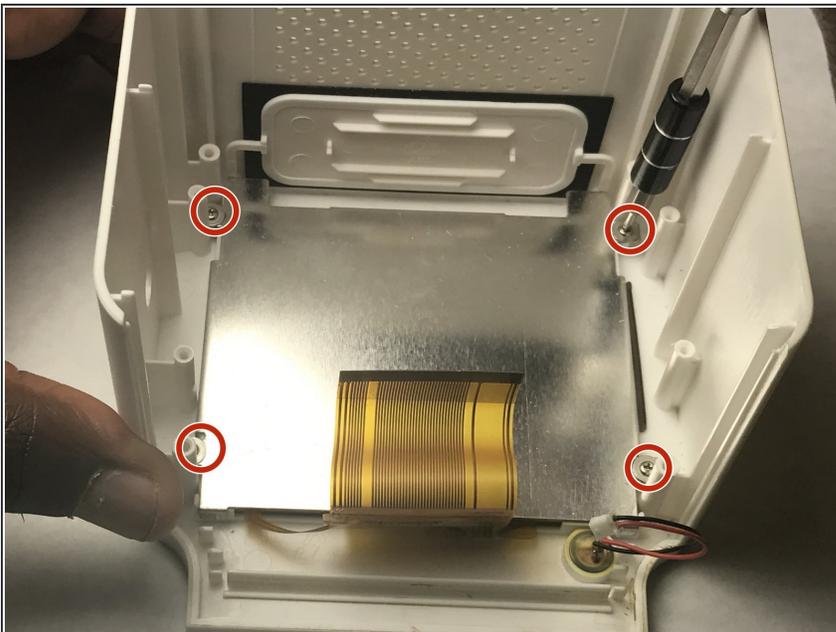


- Remove the four 5.5mm screws with a Phillips PH000 screwdriver bit.

## Step 11

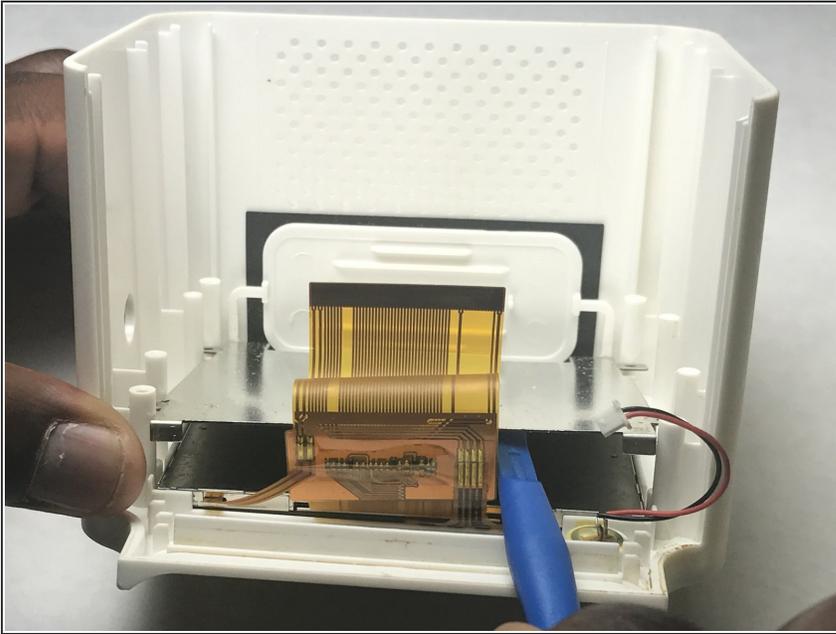

- Remove the metal shield from the front case using a plastic opening tool.

## Step 12

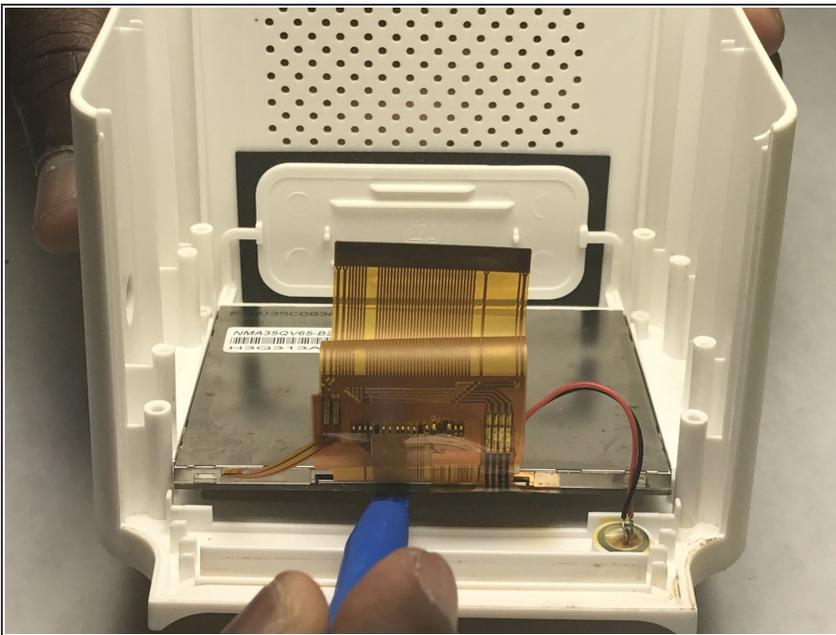

- Remove the LCD screen from the outer case using a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.