



Insignia NS-PLTPSP13 Mesh Replacement

This guide will show you how to replace the front mesh on your Insignia NS-PLTPSP13 speaker.

Written By: Matt Mrazik



INTRODUCTION

This guide will show you how to replace the front mesh on your Insignia NS-PLTPSP13 speaker.



TOOLS:

- [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Mesh



- Use the tweezers to lift the corner of the mesh until a gap is created.

Step 2



- Once there is a big enough gap, insert the metal spudger and remove the tweezers. Move the spudger around the edge of the mesh to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 05:48:26 AM (MST).

