



Lenovo G70-80 RAM Replacement

Outline what you are going to teach someone how...

Written By: Alexis Buford



INTRODUCTION

Outline what you are going to teach someone how to do.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

PARTS:

[5M30G18424 - Lenovo Laptop DDR3-1600 SODIMM - Genuine](#) (1)

Step 1 — Battery



- Turn off the computer.
- Set the computer upside down with the back facing up.

Step 2



- ① Located directly below the bottom plate will be two switches near where the battery is located.
- With the battery facing you, slide the battery switch on the right side of the laptop towards the right.
- ① To ensure the switch on the right is unlocked, look for a red indicator next to the switch.

Step 3




- Slide the left battery release switch to the left.
- While holding the switch to the left, lift the battery to remove it from the computer.

Step 4






- Remove the battery.

Step 5 — RAM

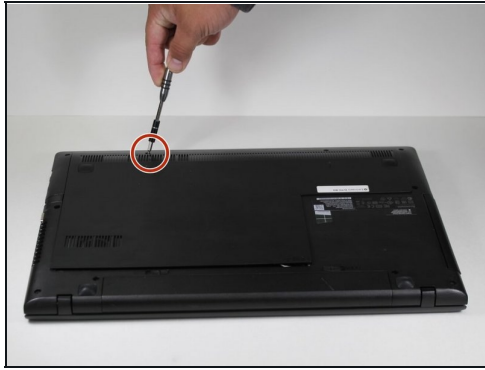

- Remove the placeholder screws and pull off the backplate.

Step 6

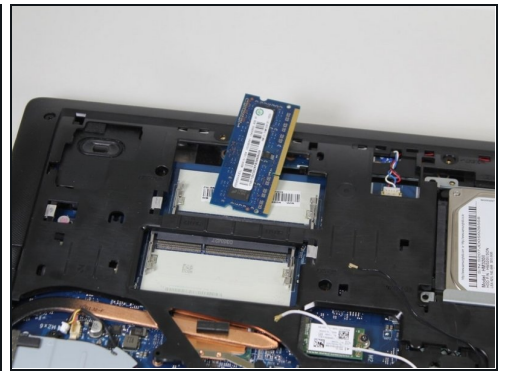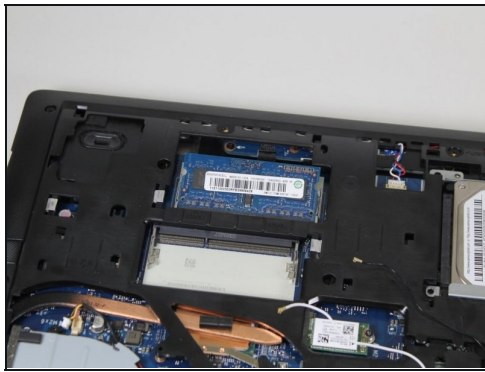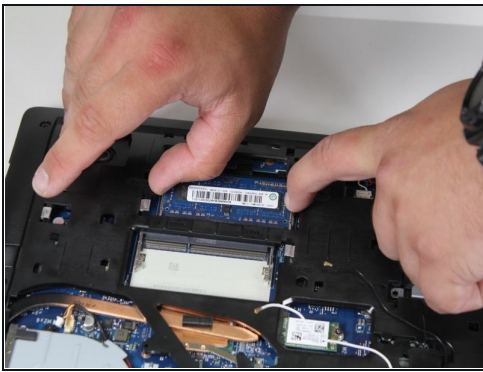

- Carefully pull the two metal retaining clips away from the sides of the RAM module.
- ① As the clips release, the RAM module should pop up at an angle.
- Remove the RAM from the device.

To reassemble your device, follow these instructions in reverse order.