



HP Mini 210-1199DX Battery Replacement

Battery replacement for the HP Mini 210-1199DX netbook. It may be dead or simply in need of replacement.

Written By: Phillip Winston



INTRODUCTION


Netbook batteries die overtime through constant use and wear. This guide will teach a user how to remove a correctly and safely remove a battery and by reversing the process how to correctly install a new one.

Step 1 — Battery



- Unplug the netbook.
- Secure the netbook in a upright position.
- Slide the plastic battery latch that secures it into the netbook.
- Keep thumb secure on the right tab as you begin to remove the battery.

Step 2

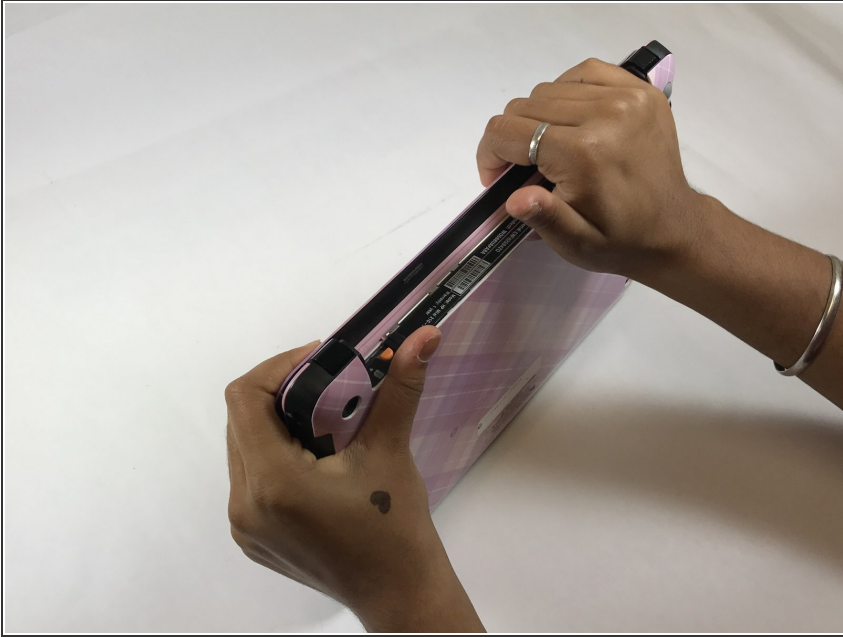

- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.