




# Creative Nomad Jukebox Zen Screen Cover Replacement

Has your Creative Nomad Jukebox Zen screen cover cracked or been scratched? This guide will show you how to replace it.

Written By: Eli Richter

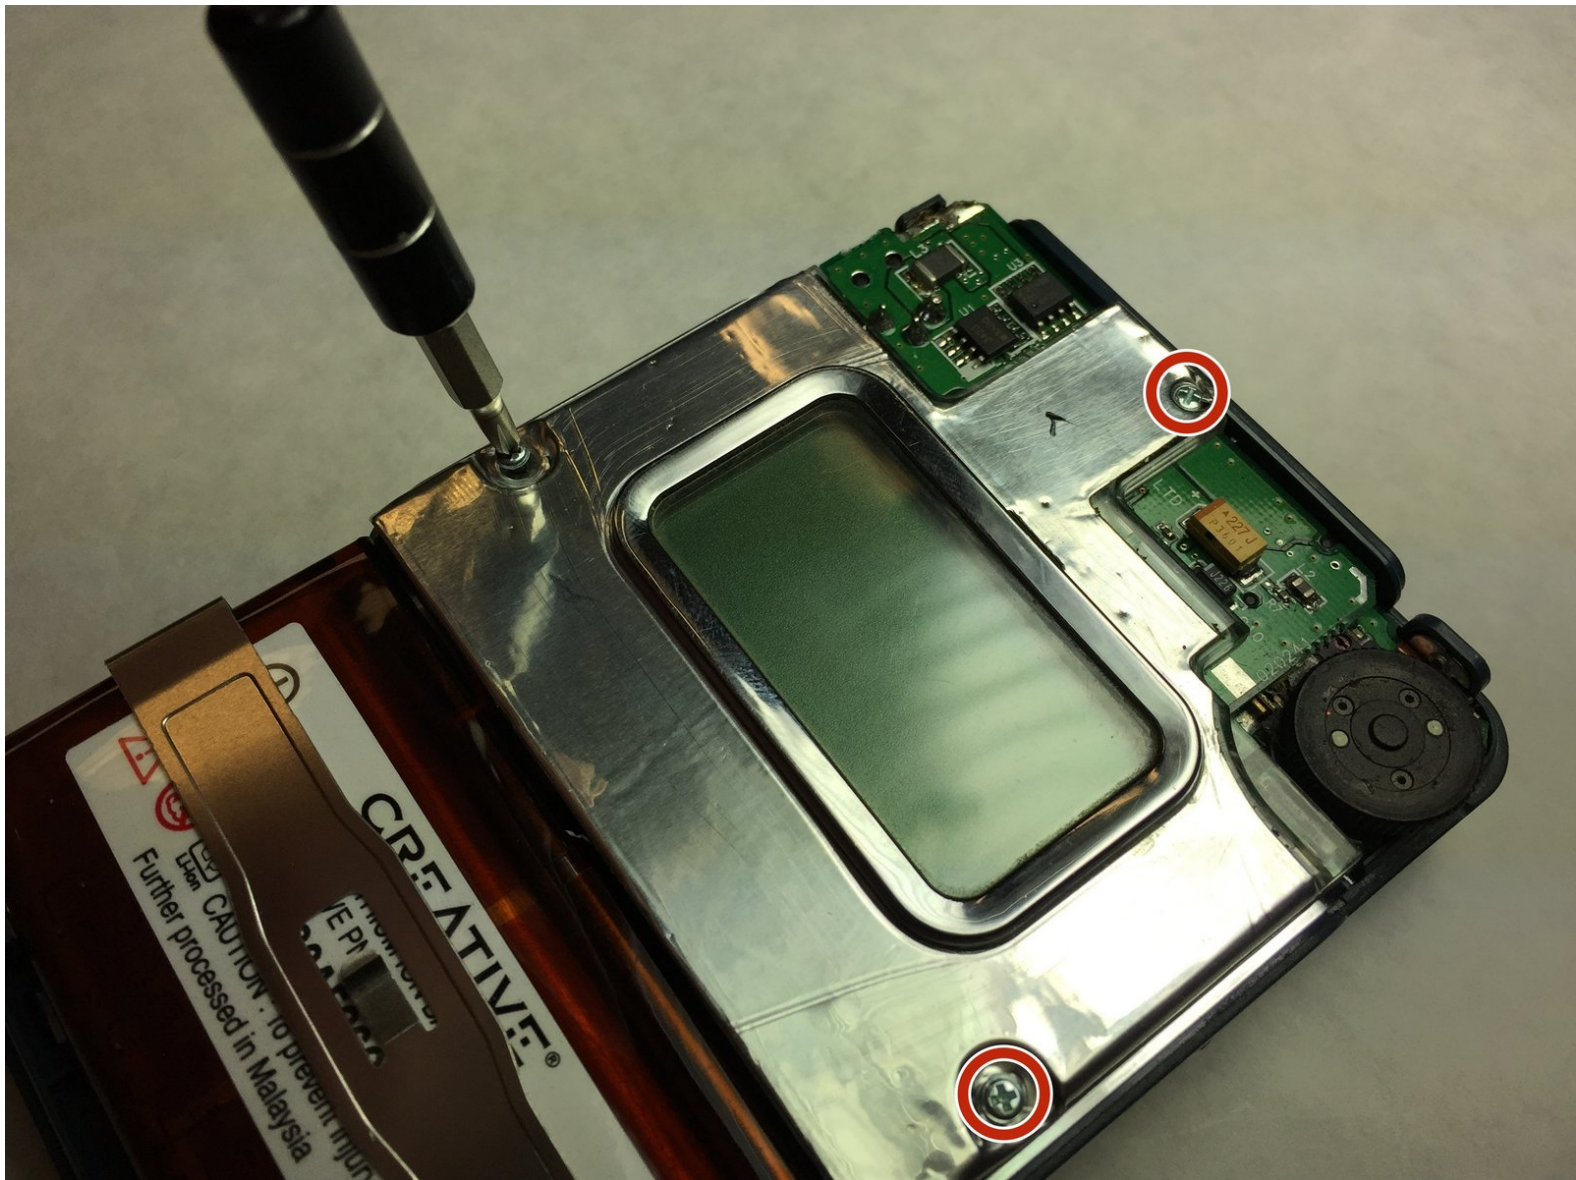

---

## INTRODUCTION

Hello! This guide will show you the steps to remove the screen cover in your Creative Nomad Jukebox Zen Device.

---



### TOOLS:

- [JIS Driver Set](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front and Back Cover



- Use a J0 screwdriver to remove the eight 3.5mm screws.


## Step 2



- Use the plastic opening tool to open the top cover by carefully prying at each corner.



### Step 3 — Screen Cover

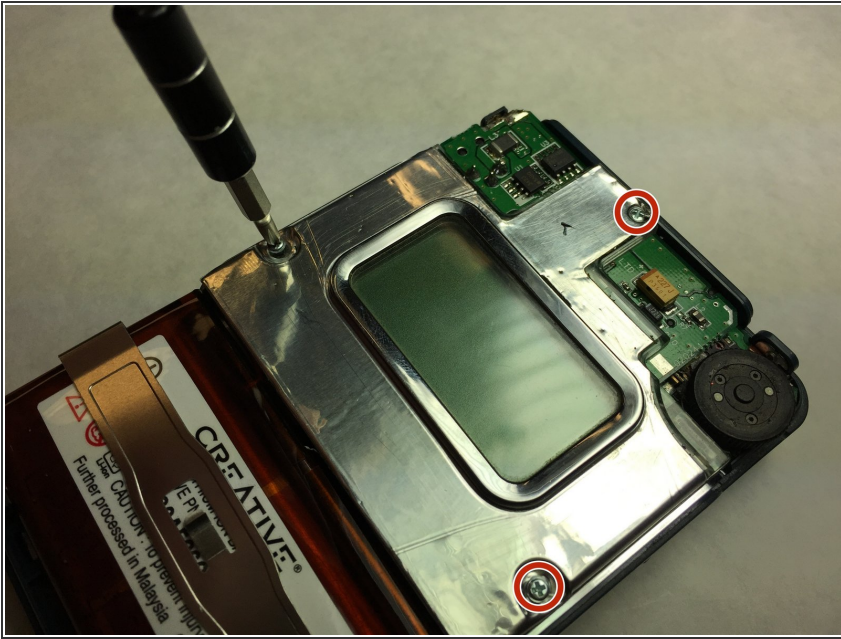

- Once the front face is removed, remove the three 6.8mm J0 screws from the metal cover and remove it.

To reassemble your device, follow these instructions in reverse order.