




Toshiba Satellite U925T-S2120 RAM Replacement

Use this guide to replace the RAM of your Toshiba Satellite U925T-S2120.

Written By: Andrew Honderich

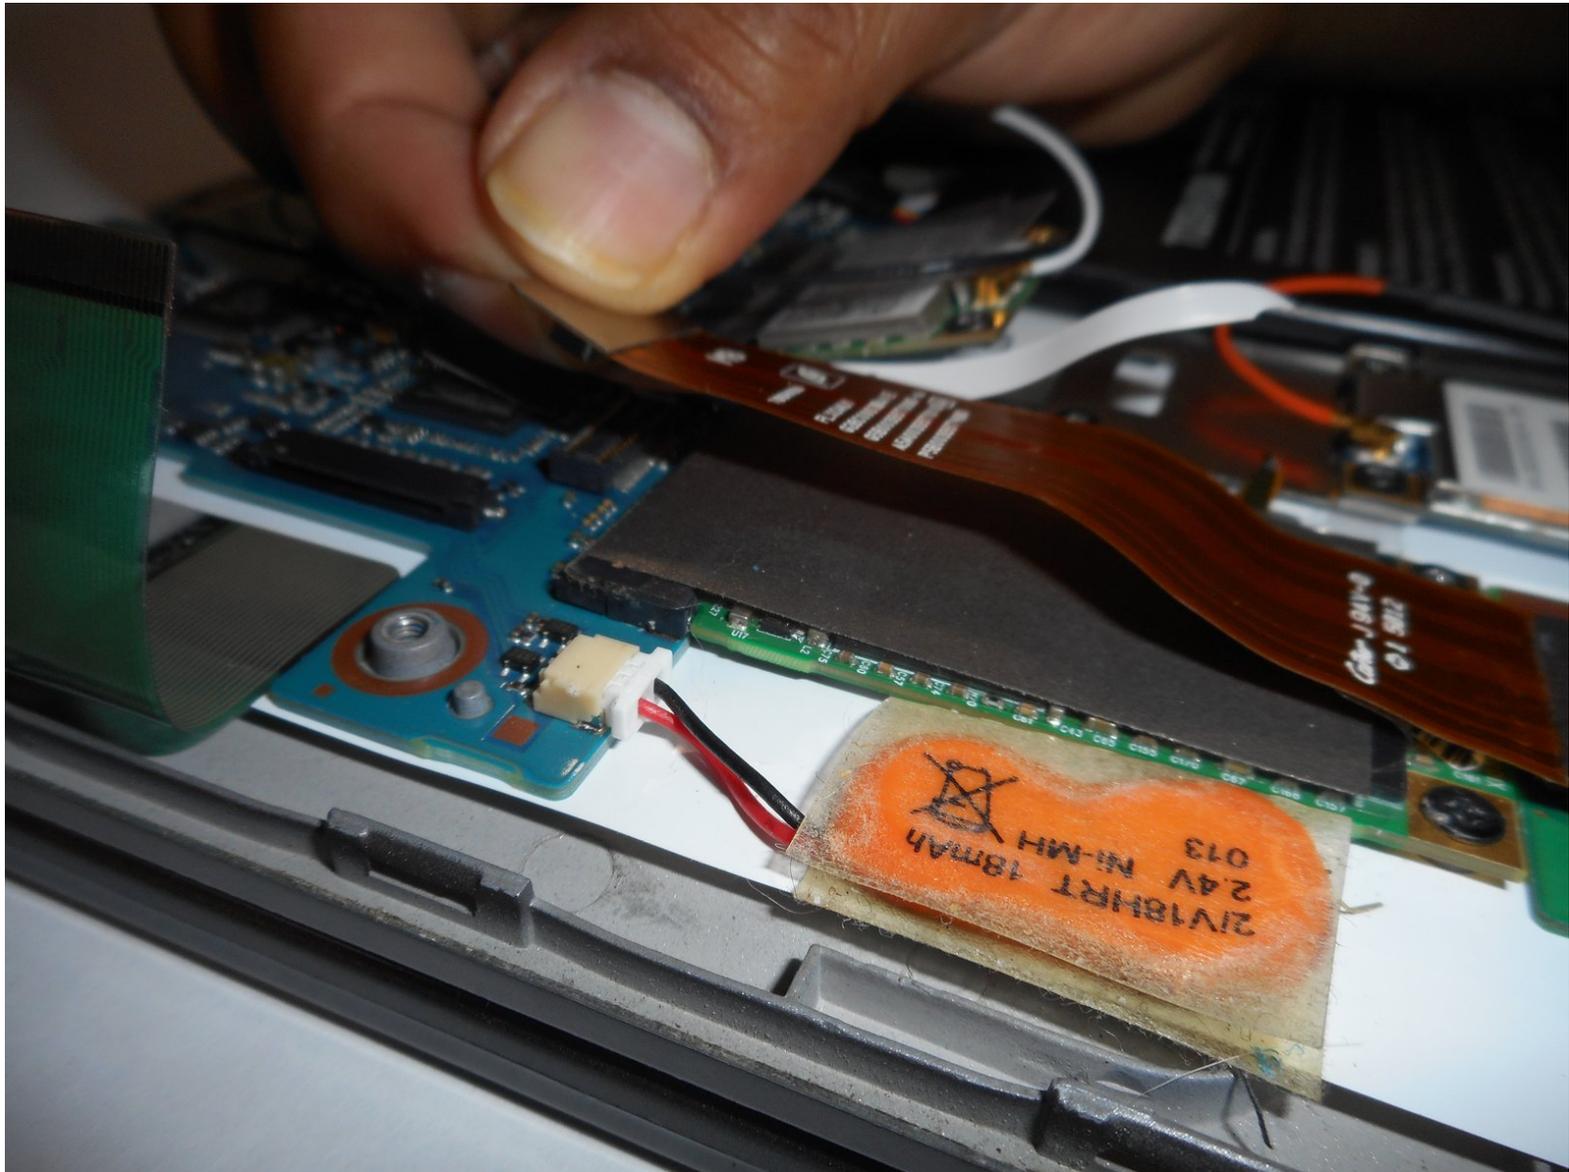

INTRODUCTION

In this guide you will learn how to remove the RAM of your Toshiba Satellite U925T-S2120. If your RAM is broken, you may need to replace it. Before beginning this guide you should have all required tools that are listed.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — RAM



- Remove the 9 rubber gripper pads on the back panel of the laptop using tweezers.

Step 2





- Unscrew nine 5.8 mm screws by turning a PH1 screwdriver clockwise after inserting it into the screw.
- Unscrew two 6.8 mm screws by turning a PH1 screwdriver clockwise after inserting it into the screw.

Step 3



- Take off the back panel open by sticking the plastic opening tool into the seam of the laptop, and pushing the opening tool downwards.

Step 4

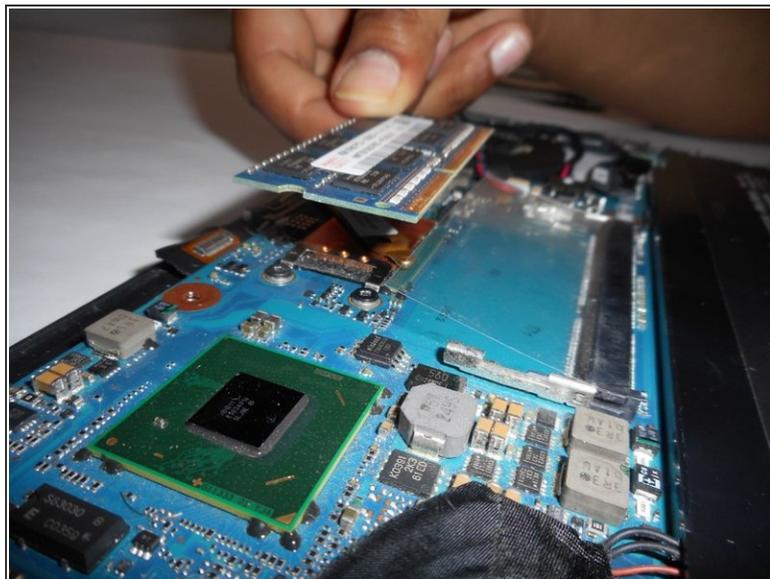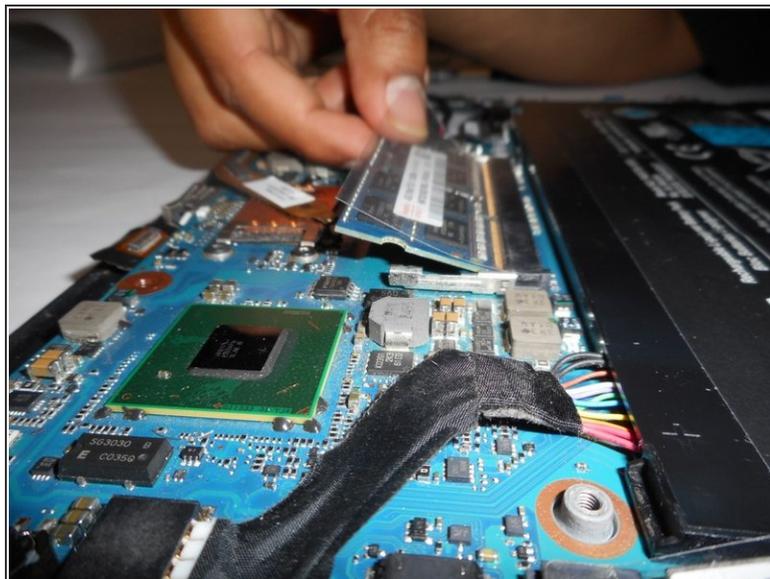

- Gently pinch the RAM with your thumb and pointer finger.
 - Pull the RAM out of the logic board with gentle force.
- ⚠ Try to keep the RAM parallel as you pull it out, so that the RAM does not chip.

To reassemble your device, follow these instructions in reverse order.