




Sol Republic Deck Speaker Replacement

Follow this guide to replace a blown or broken speaker on the Sol Republic Deck.

Written By: Jonathan Holtman

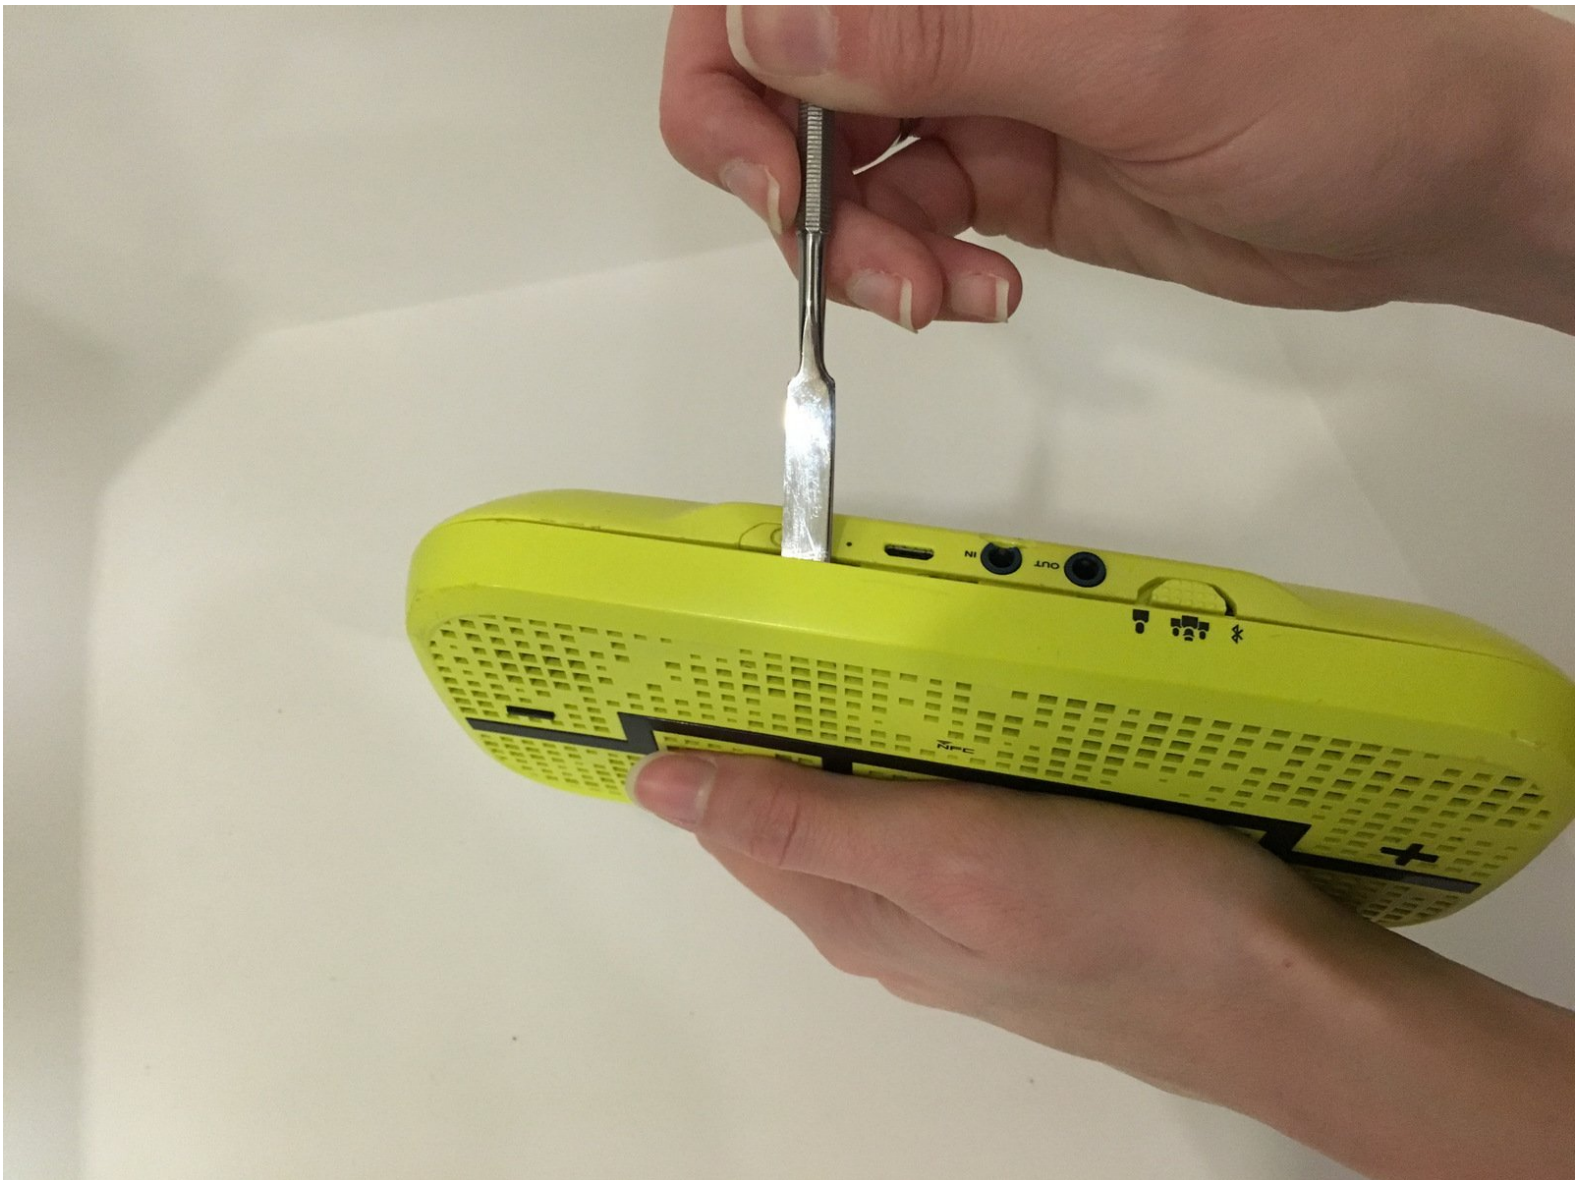

INTRODUCTION

This guide will teach you how to replace the speakers for the Sol Republic Deck.



TOOLS:


- [Soldering Iron](#) (1)
 - [Spudger](#) (1)
 - [Heat Gun](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Speaker




- With plastic spudger wedge in between the top and bottom casings to force separation . Exposing the inside components of the Republic Deck.

Step 2

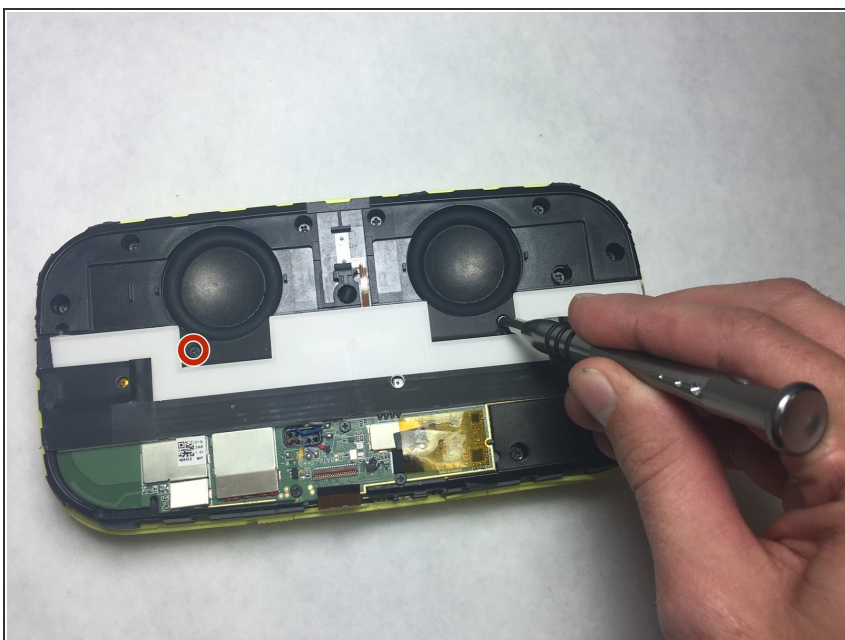


- Use the screwdriver to unscrew 2 3.63mm Phillips #0 screws securing the plastic plate.

Step 3

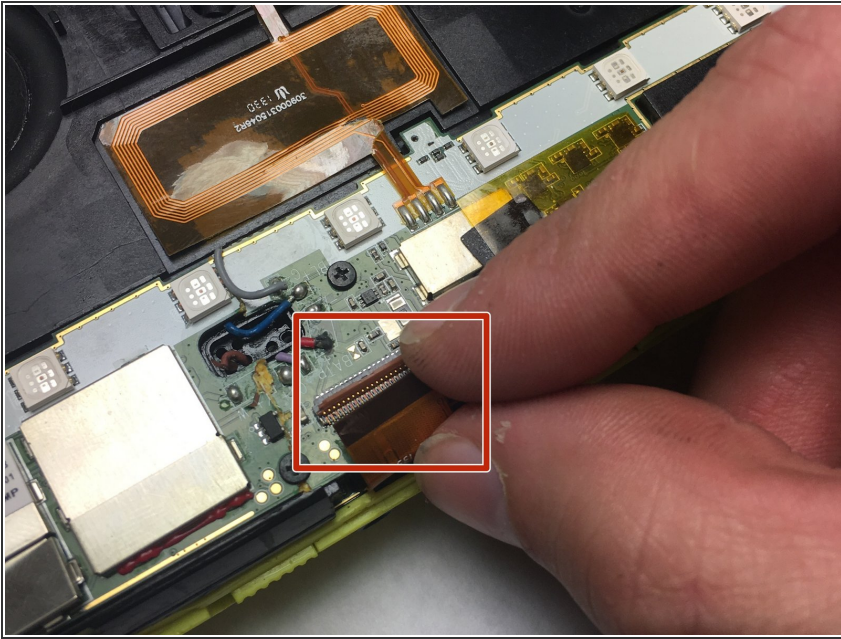

- Unplug the ribbon cable from the port.

Step 4

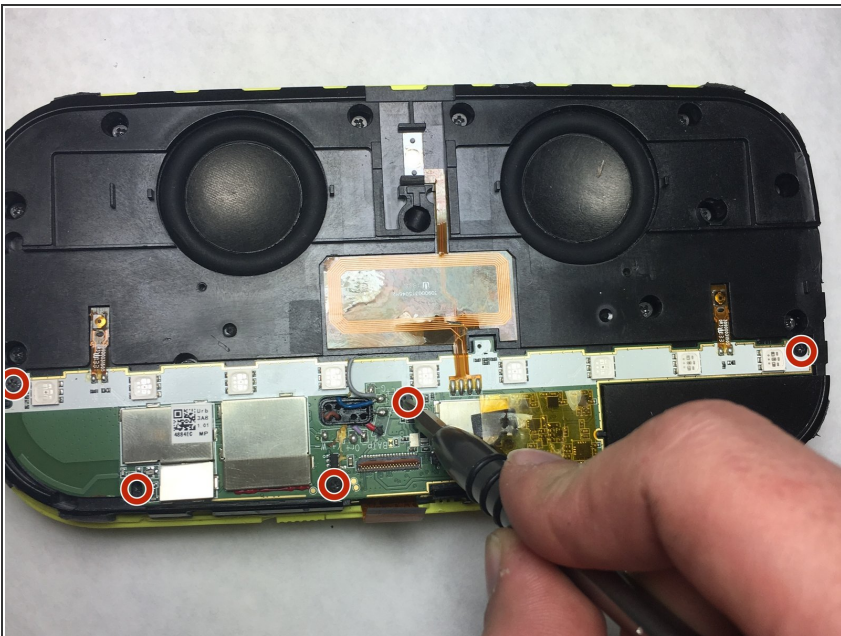


- Unscrew 5 3.63 mm Phillips #0 screws securing the circuit board.

Step 5



- Unscrew 15 6.15 mm Phillips #0 screws and lift the black plastic plate from the case.

Step 6

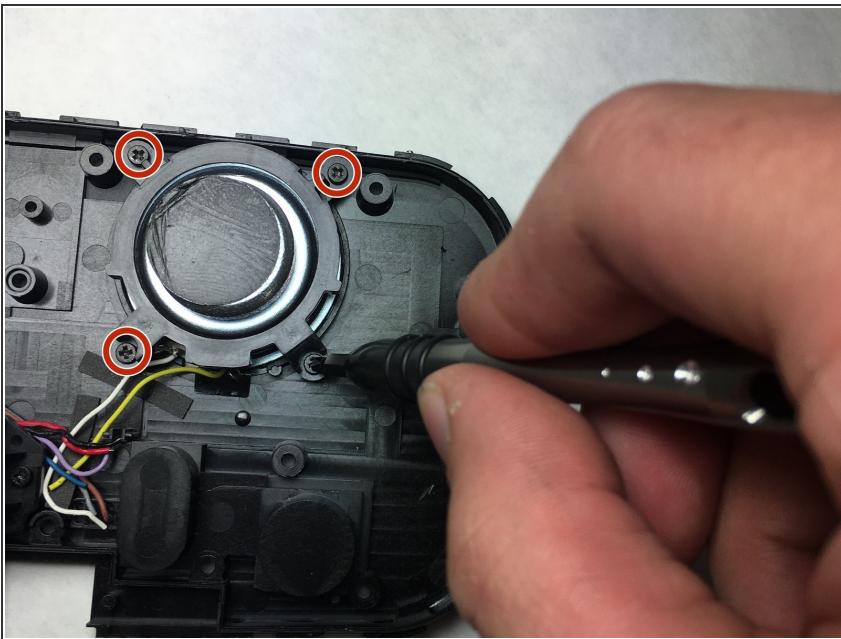

- Remove 4 3.63 mm Phillips #0 screws holding the bracket.

Step 7



- Use the hairdryer to soften the glue holding the speaker to the plastic plate.

Step 8



- Gently pull up on the speaker.

To reassemble your device, follow these instructions in reverse order.