




# Kodak Easyshare V1003 Lens Replacement

Use this guide to access and replace the camera lens on the Kodak EasyShare V1003.

Written By: Sarah Berry

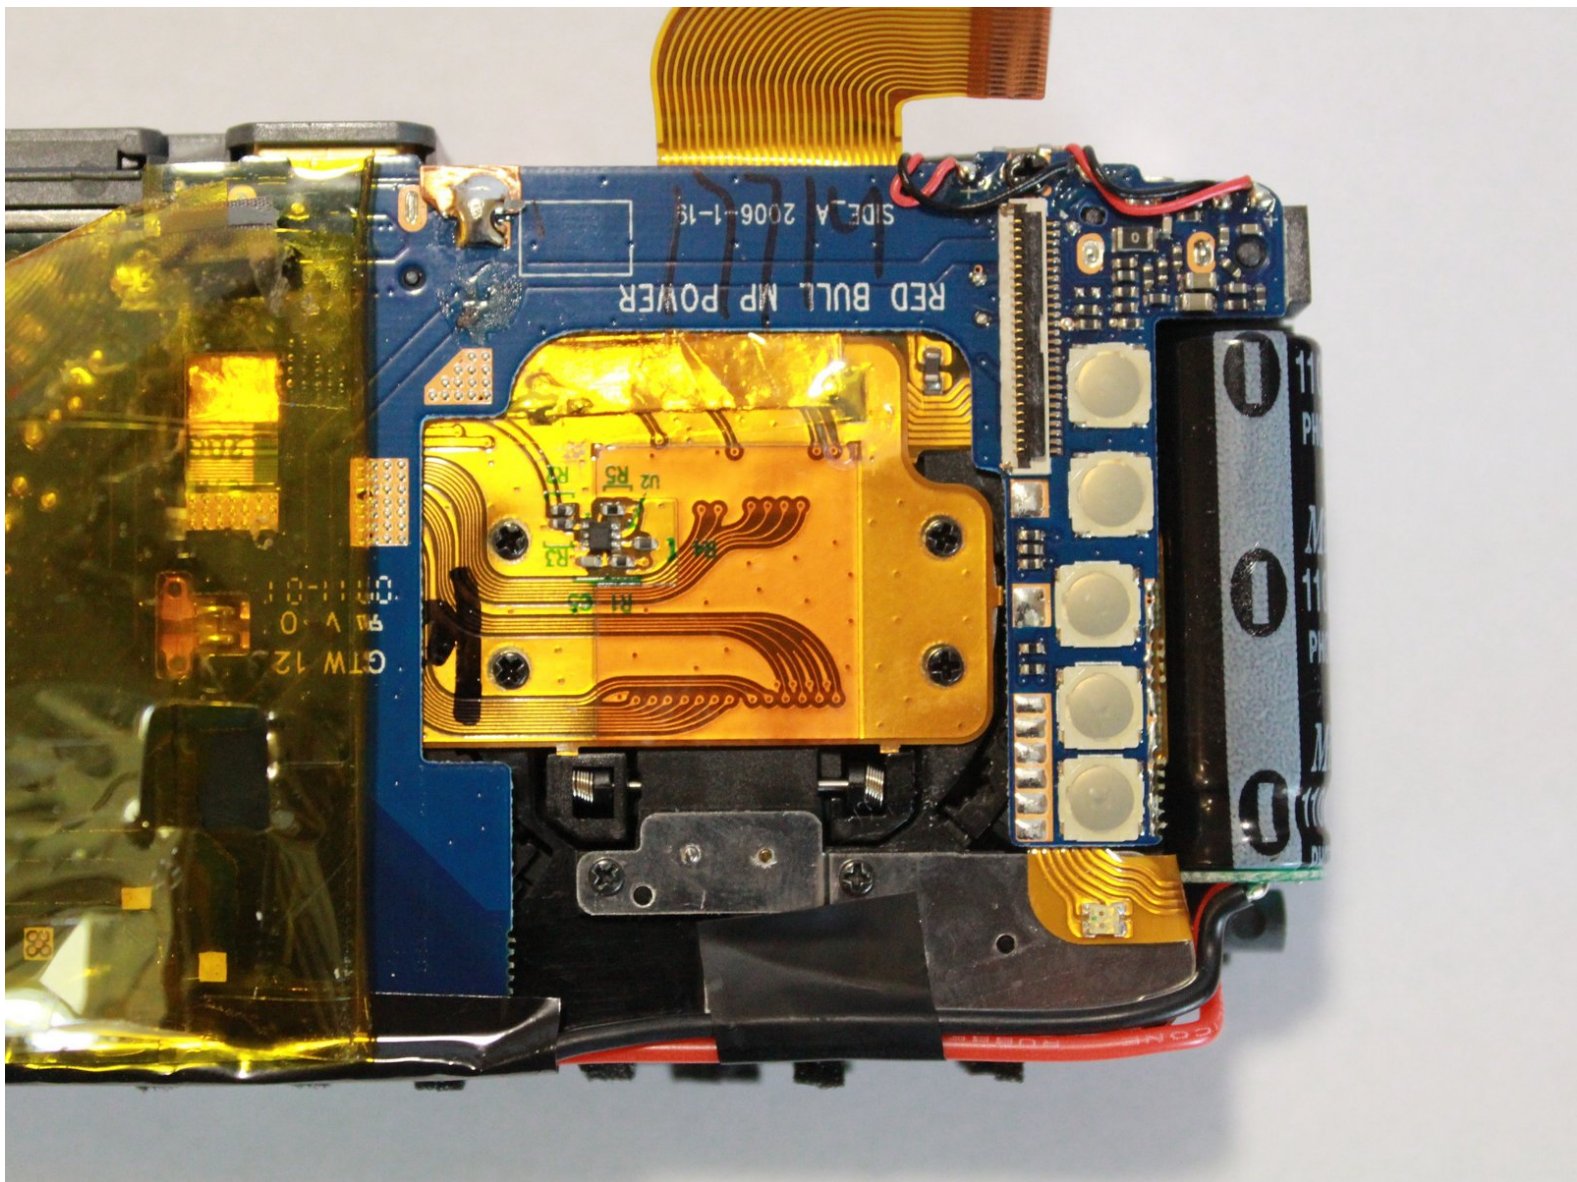

---

## INTRODUCTION

This guide provides step-by-step instructions for removing and replacing the camera lens. There are two tools required and no safety precautions needed.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [JIS Driver Set](#) (1)
-

## Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera.

## Step 2



- Position camera with the bottom facing up.



## Step 3



- With your finger, slide the battery cover in the direction of the open arrow.

## Step 4



- Lift the battery cover up gently.

## Step 5



- Gently push the battery down until a click is heard. Battery should release and be lifted out of slot.


## Step 6 — Lens



- Use a J00 screwdriver to remove the five exterior screws.





## Step 7

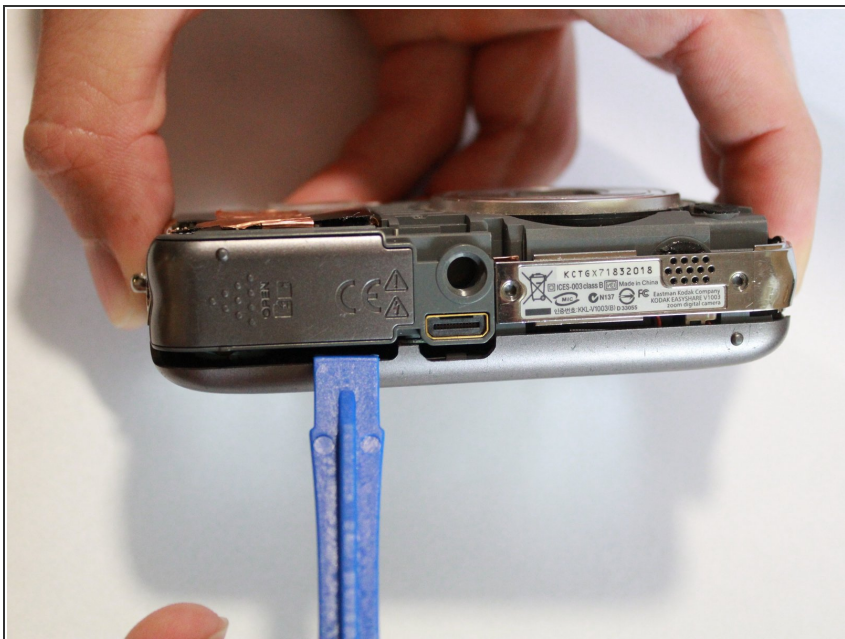


- Pull the outer case off using the plastic opening tool.

## Step 8

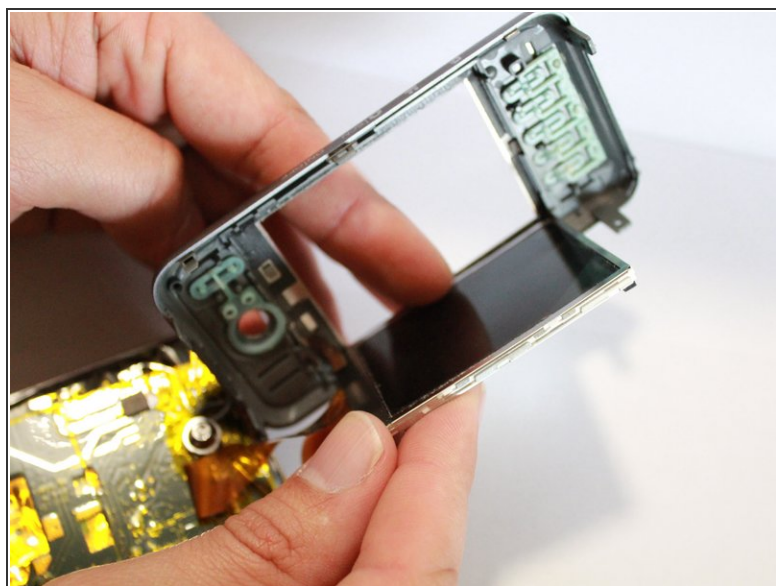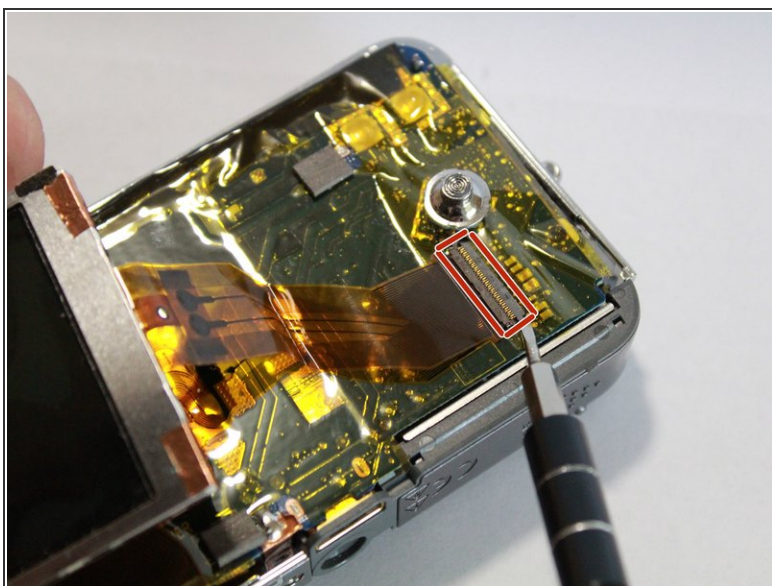


- Remove the LCD display by unplugging the connector
- Take apart the LCD display from the back case

## Step 9

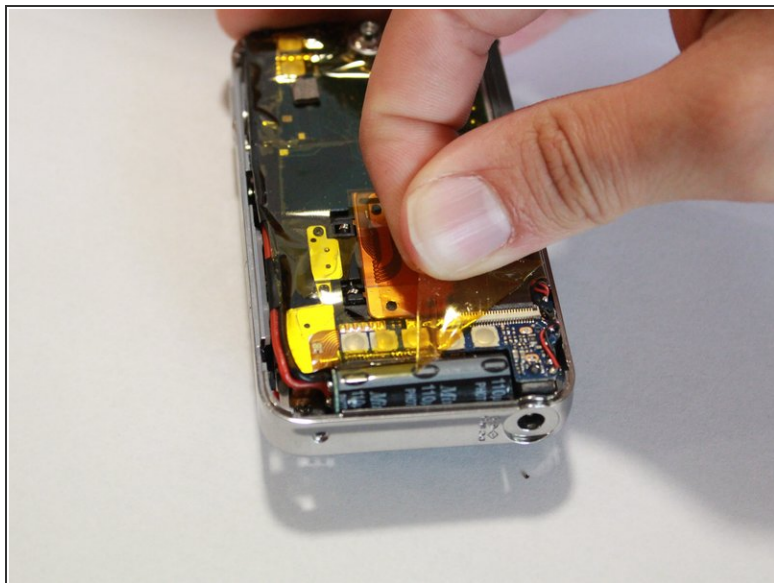

- Peel off the yellow film.
- Peel off the black tape holding the wires.


## Step 10

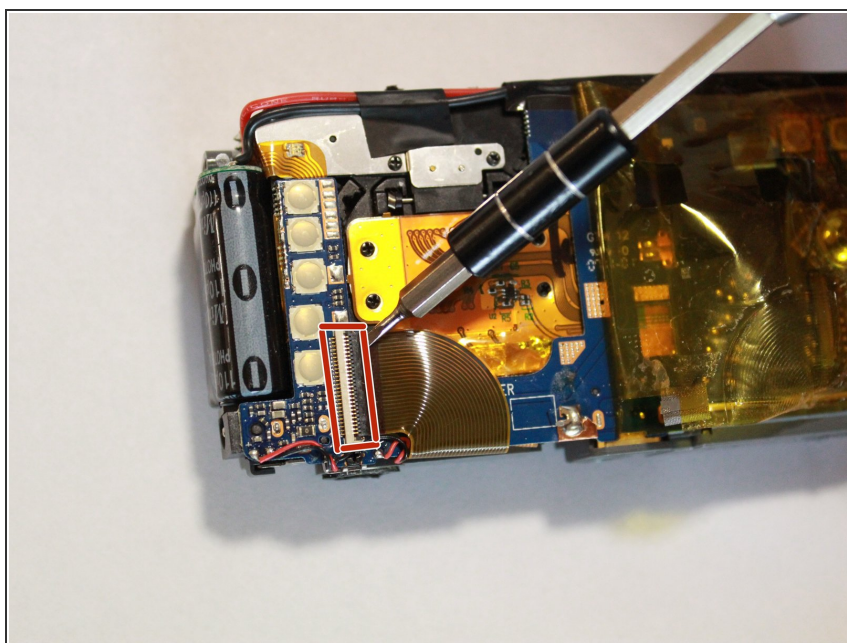

- Unplug the connector by lifting the little lock holding it in place.




## Step 11

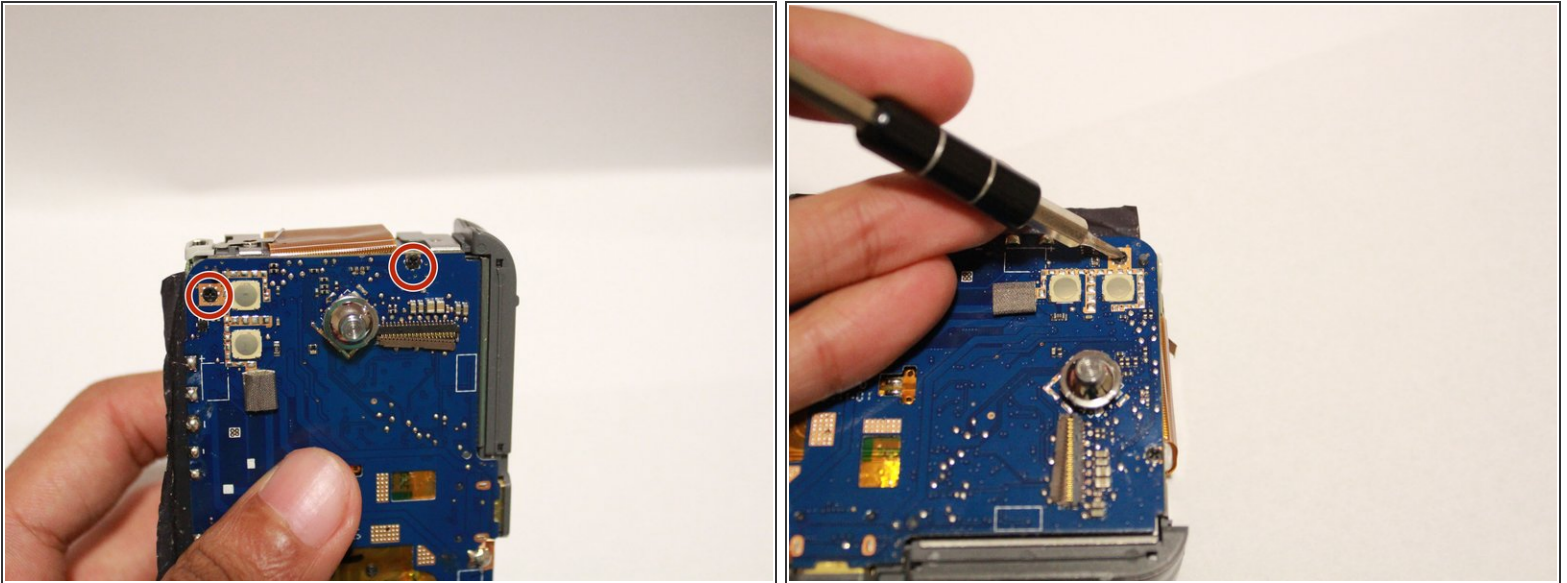

- Use a J00 screwdriver to remove two screws located on the far right, near to the main button.

## Step 12

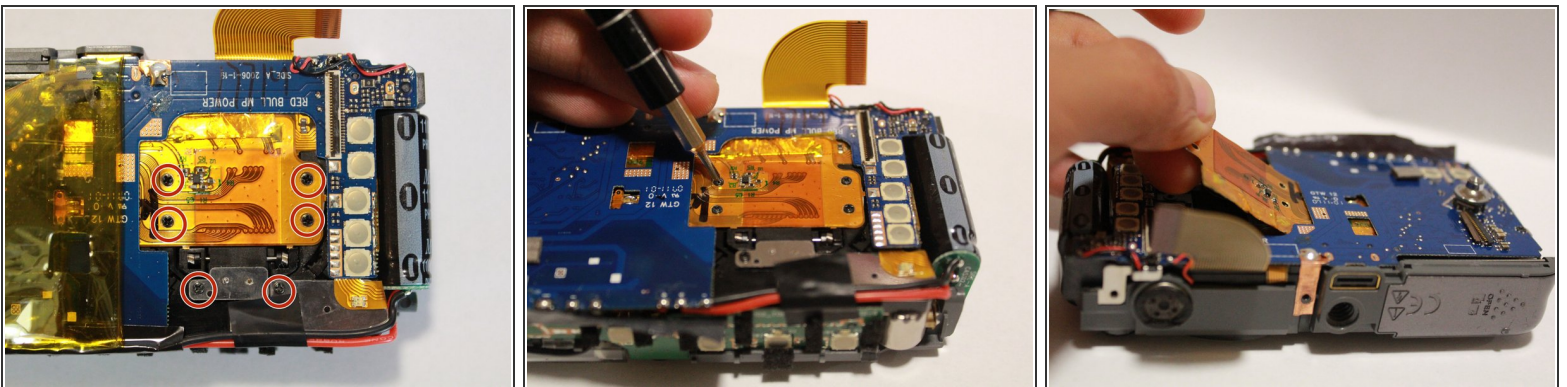

- Use a J00 screwdriver to remove 6 screws located at the center of the back panel.
- Gently pull out the lens using you finger tips or pincers.

To reassemble your device, follow these instructions in reverse order.