



# 1999-2003 Acura TL Oil and Oil Filter Replacement

A video tutorial on how to change the engine oil and oil filter on 1999-2003 Acura TL 3.2L.

Written By: eCuration



## INTRODUCTION

This video guide will show you how to replace the engine oil and filter on a 1999-2003 Acura TL 3.2L.



### TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Wheel Chocks](#) (1)
- [Oil Filter Wrench](#) (1)
- [Oil Drain Pan](#) (1)
- [Long Neck Funnel](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [Paper Towels](#) (1)
- [Aerosol Brake Cleaner](#) (1)
- [Socket 17mm](#) (1)



### PARTS:

- [5W-30 Motor Oil](#) (5)
- [Oil Filter](#) (1)

To reassemble your device, follow these instructions in reverse order.