



Asus A52F Hard Drive Replacement

This guide is for the purpose of demonstrating...

Written By: Roman Justice



INTRODUCTION

This guide is for the purpose of demonstrating how to replace an Asus A52F hard drive. Like any laptop, the hard drive is a vulnerable part and over time can become damaged or corrupted, which can lead to data loss or even a complete system crash. There are no safety hazards for this fix, and the difficulty level is moderate. It's an easy, fast fix with no specific experience or knowledge aside from screws.

TOOLS:

Flat head Screwdriver (1)

Phillips #0 Screwdriver (1)

Spudger (1)

Step 1 — Battery




- Place the laptop face down with the battery facing away from you.
- Locate the two buttons next to the battery.
- Slide the right slider to the unlocked (red) position.

Step 2



- Hold the left button to the left.
- Slide the battery with your other hand away from you and it should disconnect.

Step 3 — Lower Case

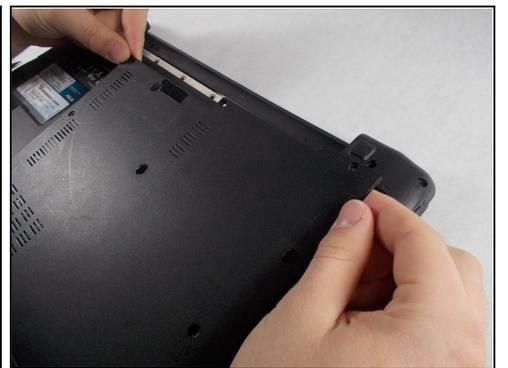

- Remove the five Phillips # 0 screws from the back panel.
- Using your finger or a plastic spudger start to carefully pry up the back panel.

Step 4



- Slide the back panel away and remove the panel.

Step 5 — Hard Drive



- Remove the four Phillips #0 screws holding the hard drive case to the laptop.
- Lift the hard drive upwards by the two arms in order to remove the hard drive case from the laptop.

Step 6



- Using a Phillips #0 screwdriver, remove the cage screws on the side of the hard drive.

Step 7



- Next, slide the case off of the broken hard drive.
- Slide the working hard drive into the case and screw it on.

To reassemble your device, follow these instructions in reverse order.