



Kenwood KDC-BT565U Volume Knob Replacement

This guide shows you how to replace the volume knob on the Kenwood KDC-BT565U.

Written By: Connor Finley



INTRODUCTION

If the volume knob in your Kenwood KDC-BT565U is not working properly or is loose/sticky, then it may need to be replaced. This guide shows you how.



PARTS:

- [Kenwood KDC-BT565U Replacement Volume Knob](#) (1)
-

Step 1 — Volume Knob



- Grip the volume knob on the front of the device.
- Pull the knob off. Some force may be required.

To reassemble your device, follow these instructions in reverse order. You will need to line up the shapes on the volume knob and the unit's axle to reattach.