



HP Mini 210-1199DX RAM Replacement

The need to replace system ram for the HP 210-1199DX.

Written By: Phillip Winston



INTRODUCTION

By using this guide a user will be able to effectively remove the RAM portion of the HP Mini 210-199DX for either replacement or installation of a new RAM card.



TOOLS:

- [Spudger](#) (1)
-

Step 1 — Battery




- Unplug the netbook.
- Secure the netbook in a upright position.
- Slide the plastic battery latch that secures it into the netbook.
- Keep thumb secure on the right tab as you begin to remove the battery.

Step 2



- Remove the battery from the device.

Step 3 — Bottom Cover

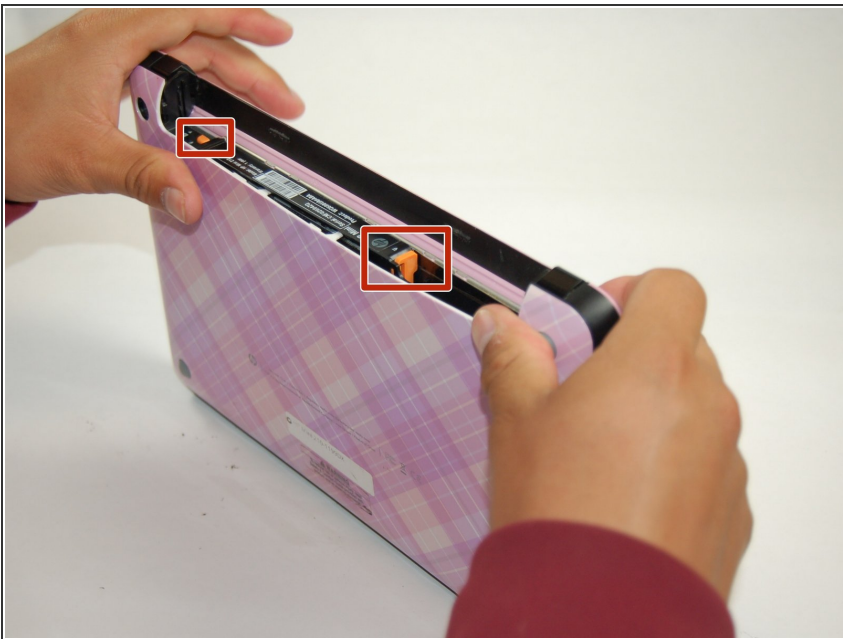


- Press down on the two orange buttons to release.
- If the case does not pop off, begin to use Spudger to pry the case off the back.

Step 4



- Place the spudger on corners and openings in order to begin removal of the back.
- Continue this on all corner until the case comes fully off of the back.

Step 5

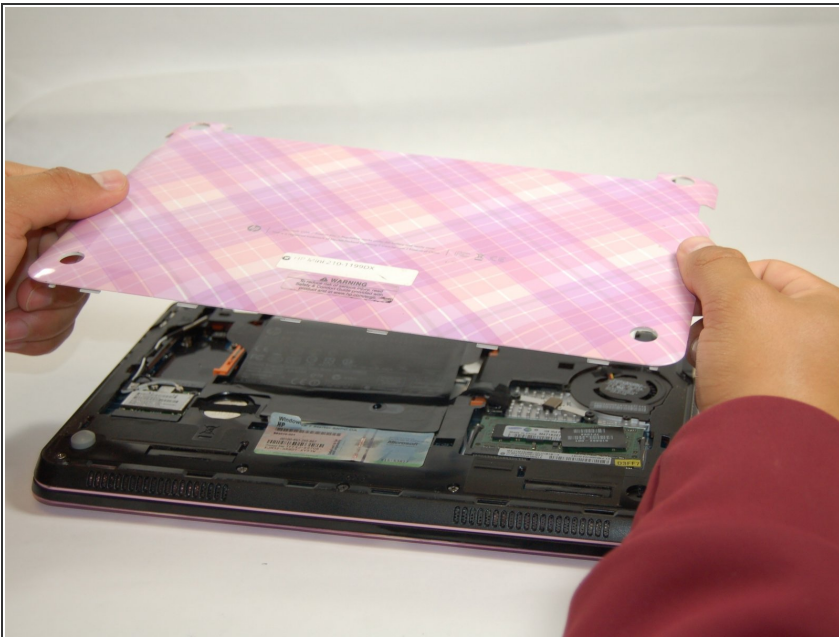


- Pull the case off of the device

Step 6 — RAM



- Locate RAM systems.

Step 7

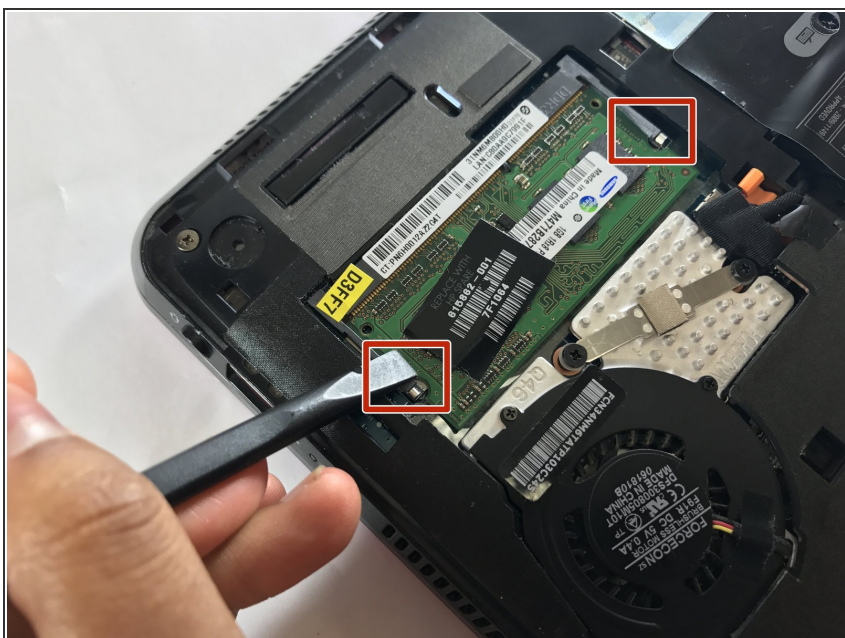

- Use spudger to carefully pull the holding devices back.
- ⓘ RAM should pop out once this is completed.

Step 8



- Carefully pull the RAM card out.

To reassemble your device, follow these instructions in reverse order.