



Lenovo IdeaPad U430 Touch Speaker Replacement

How to replace the speakers of a Lenovo IdeaPad U430 Touch.


Written By: Patrick Ripkey



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Bottom Cover

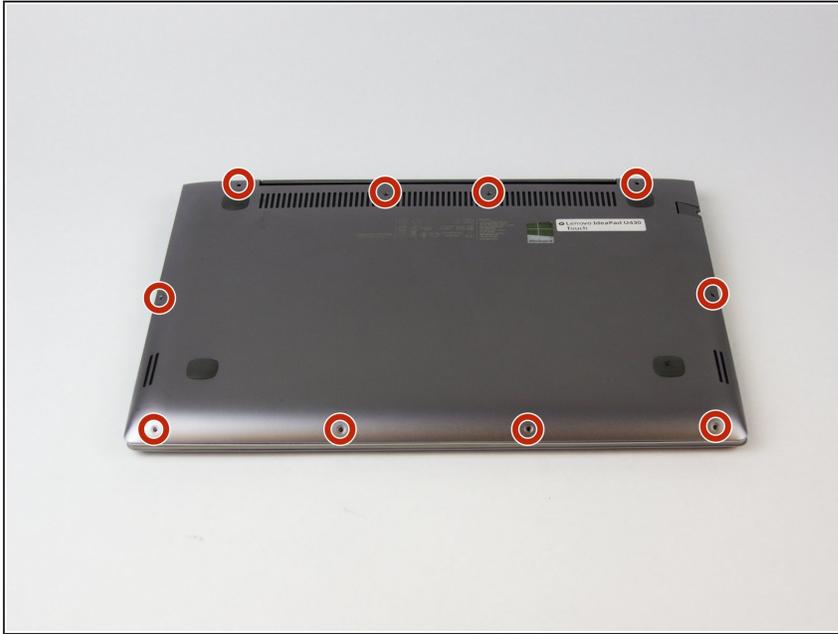

- Power off your computer before you begin.
- Find and remove the 10 Phillips style body screws on the bottom of the laptop case.

Step 2

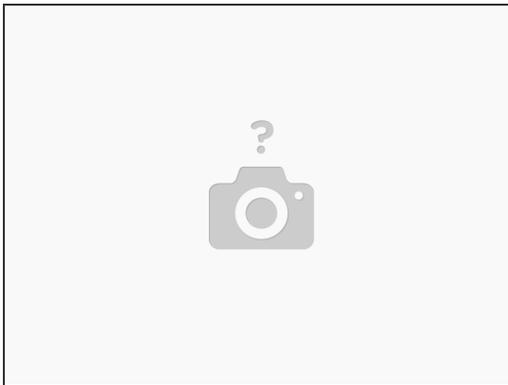


- Remove 2 screws, 1 located on the left hinge cover and one located on the right hinge cover.

Step 3




- Starting from the front, use a plastic opening tool to separate the bottom of the case from the body of the laptop.

Step 4 — Speaker

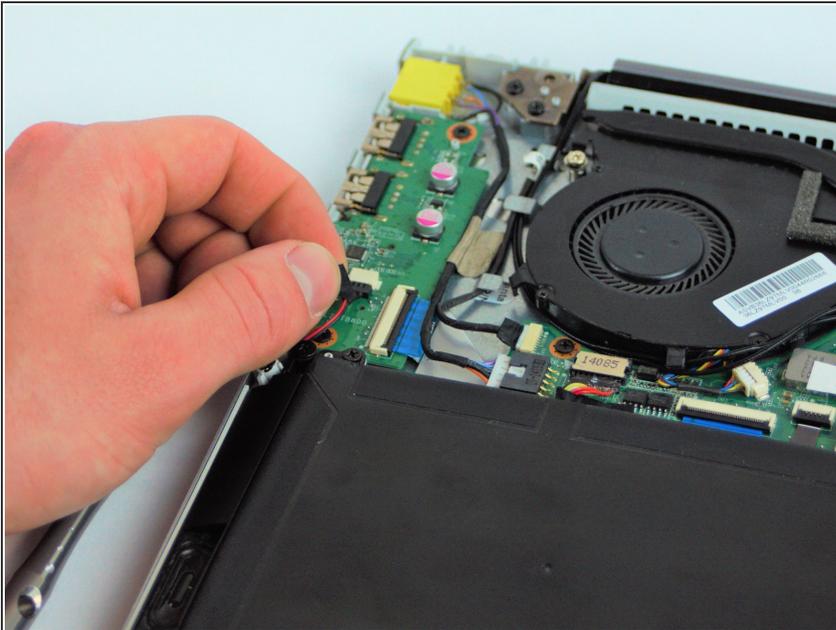


- Disconnect the speaker cable connectors from the motherboard and/or USB board.

Step 5

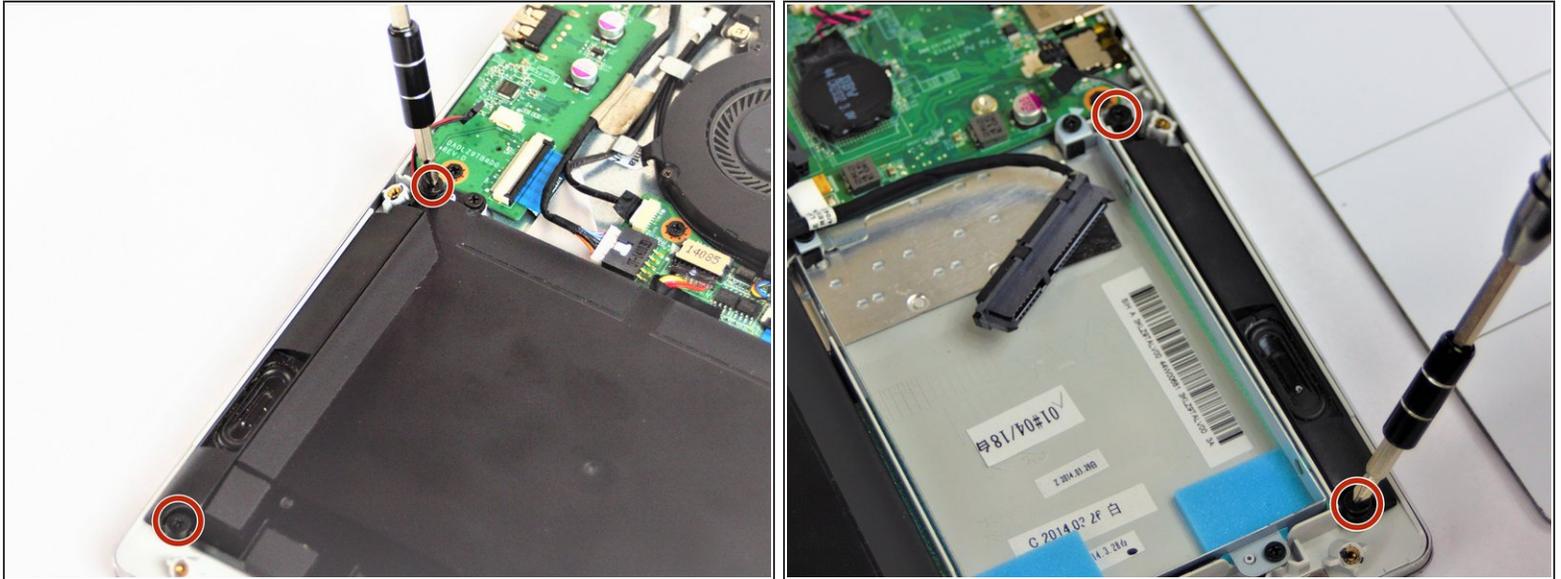

- Unscrew the two 6.5mm screws from each speaker with a PH1 Phillips head screwdriver.

Step 6

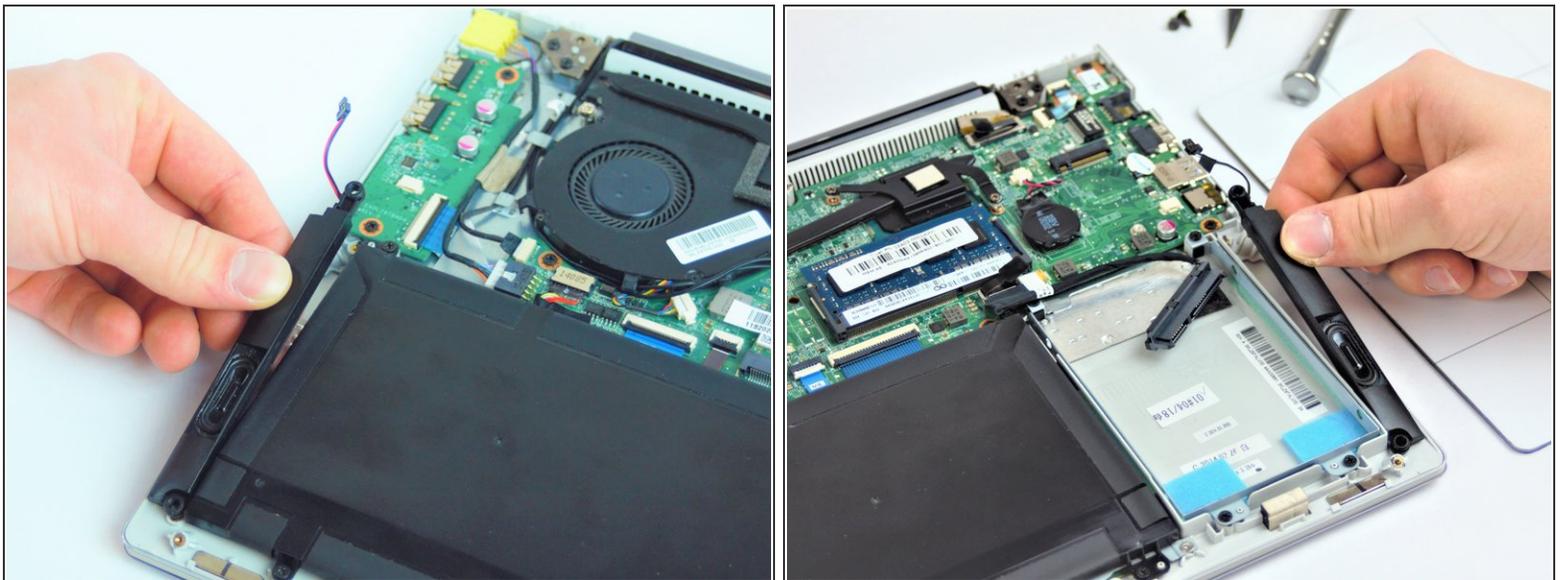

- Remove and replace the speaker.

To reassemble your device, follow these instructions in reverse order.