



Lenovo G780 RAM Replacement

If you wish to upgrade or replace RAM on the...

Written By: Robert Bishop




INTRODUCTION

If you wish to upgrade or replace RAM on the Lenovo G780, follow this guide.

TOOLS:

Phillips #0 Screwdriver (1)

Step 1 — Battery

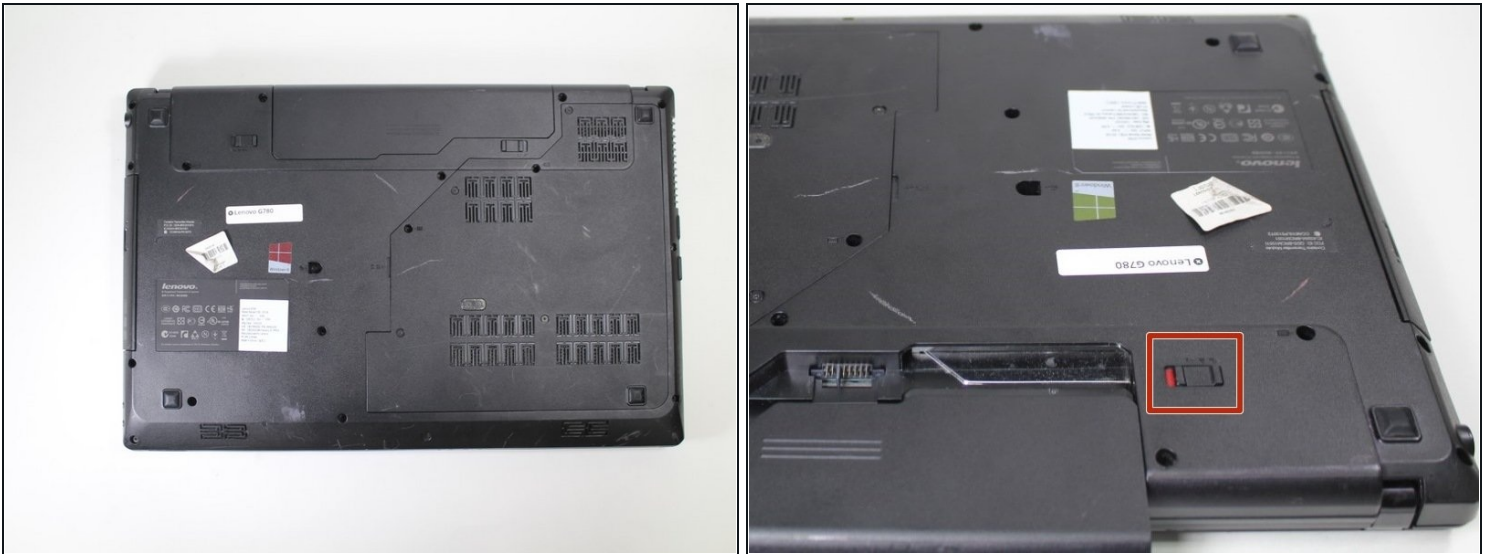


- Turn off the computer.
- Slide the battery-lock switch on the bottom of the laptop to the unlocked position.

Step 2



- Hold the battery release switch in the unlocked position and remove the battery.

Step 3 — Back Panel

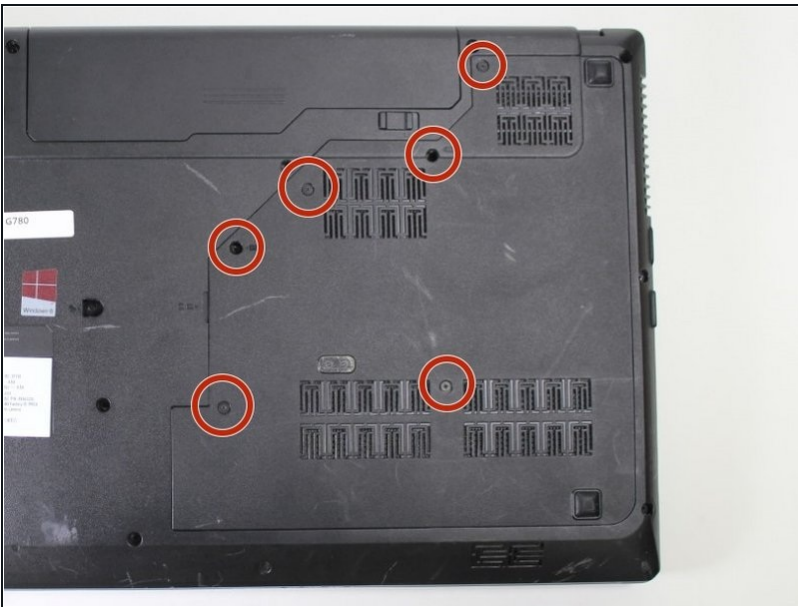



- Using a #0 Phillips screwdriver, remove the six 9mm panel screws from the bottom of the device.

Step 4



- Remove the back panel.

Step 5 — RAM

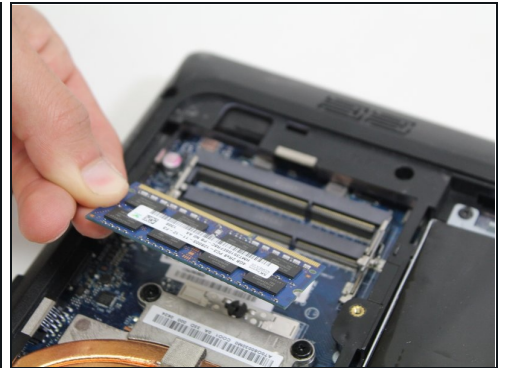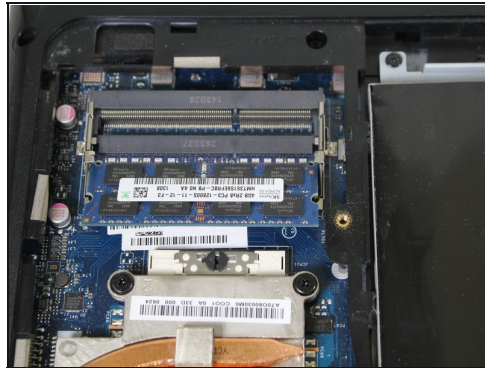

- Push the two locks outwards to release the RAM.
- Carefully pull the RAM module from its socket.

To reassemble your device, follow these instructions in reverse order.