 




Lenovo G780 Battery Replacement

This guide describes the steps to removing and...

Written By: Whitney Hurd

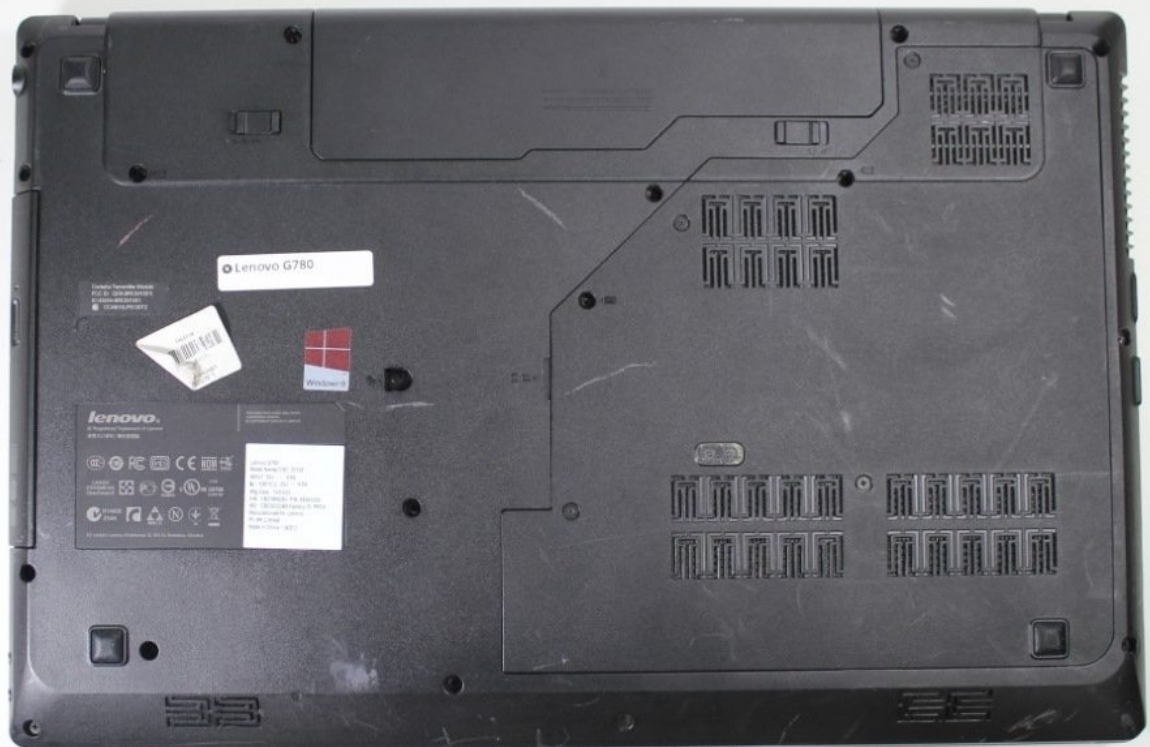


INTRODUCTION

This guide describes the steps to removing and replacing the Lenovo G780 battery that may be due to no longer holding charge, faulty charger or a faulty battery. The battery for replacement is a 6 Cell Li-ion type with 11.1 volts.

PARTS:

- [121500043 - Lenovo IdeaPad Battery](#) (1)
- [121500040 - Lenovo IdeaPad Battery](#) (1)
- [121500042 - Lenovo IdeaPad Battery](#) (1)
- [121500041 - Lenovo IdeaPad Battery](#) (1)
- [121001091 - Lenovo IdeaPad Battery](#) (1)
- [121001089 - Lenovo IdeaPad Battery](#) (1)
- [121001056 - Lenovo IdeaPad Battery](#) (1)
- [121001094 - Lenovo IdeaPad Battery](#) (1)

Step 1 — Battery

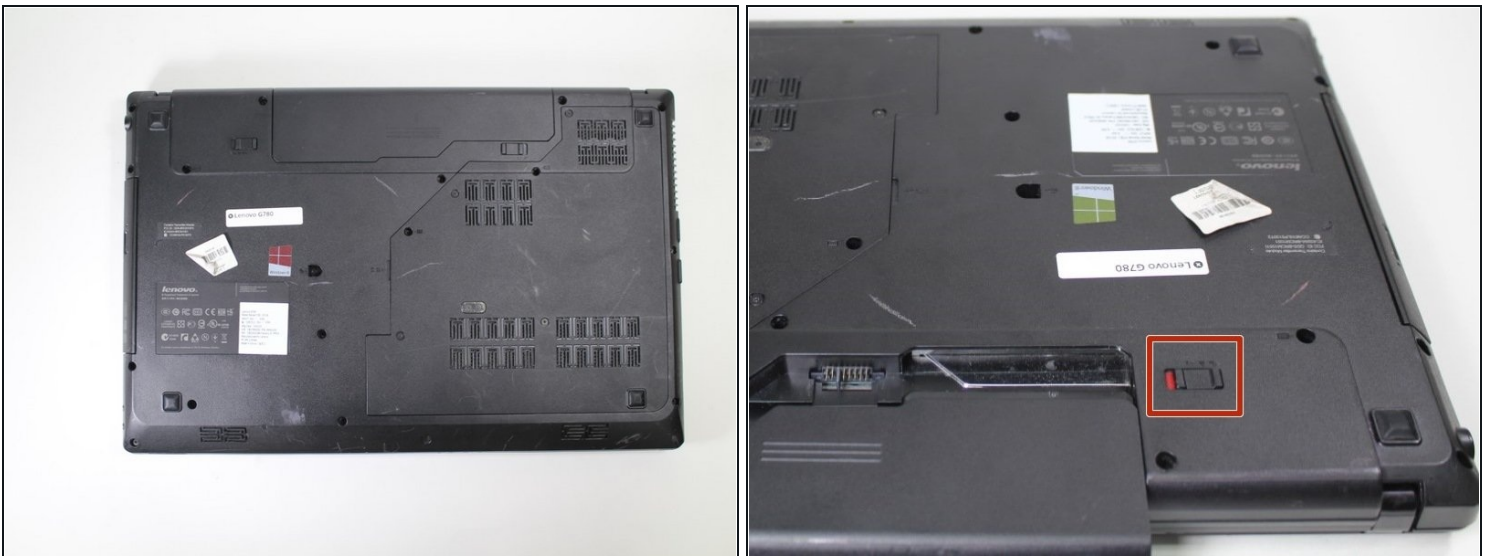

- Turn off the computer.
- Slide the battery-lock switch on the bottom of the laptop to the unlocked position.

Step 2



- Hold the battery release switch in the unlocked position and remove the battery.

To reassemble your device, follow these instructions in reverse order.