



LG VX5500 Screen Replacement

This guide outlines the procedure for replacing the Primary LCD in the LG VX5500 phone.

Written By: Henry



INTRODUCTION

This guide gives step-by-step instructions on how to remove the Primary LCD in the LG VX5500 cell phone. To complete the task you will need a #00 Phillip's head screwdriver and prying tool.

TOOLS:

- [iSesamo Opening Tool](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Remove the battery cover by placing your thumb on the small ridge near the top of the phone back and push downward, exposing the battery.
- ⓘ Our device did not come with a battery cover so it is not shown here.
- Remove the battery using your finger to pry it out of the battery housing.

Step 2 — Screen



- Carefully pry off the black plastic screen cover using the iSesamo tool or another thin, flat tool.
- ⓘ The screen cover is adhered to the phone and may take some effort to pry off. If it is too difficult to remove, heat the screen with a hair dryer on low for 30 seconds to soften the adhesive.

Step 3





- Unscrew the (4) 3.6mm screws near each corner of the phone's display panel by using a #00 Phillips head screwdriver.
- ⓘ The bottom two screws may have small rubber covers that you can remove using tweezers.

Step 4





- Pry off the front panel of the phone using a Plastic Opening Tool.
 - Push the tool into the crack along the side of the phone.
 - Slide the tool along the crack to detach the tabs holding the backing on the phone.

Step 5

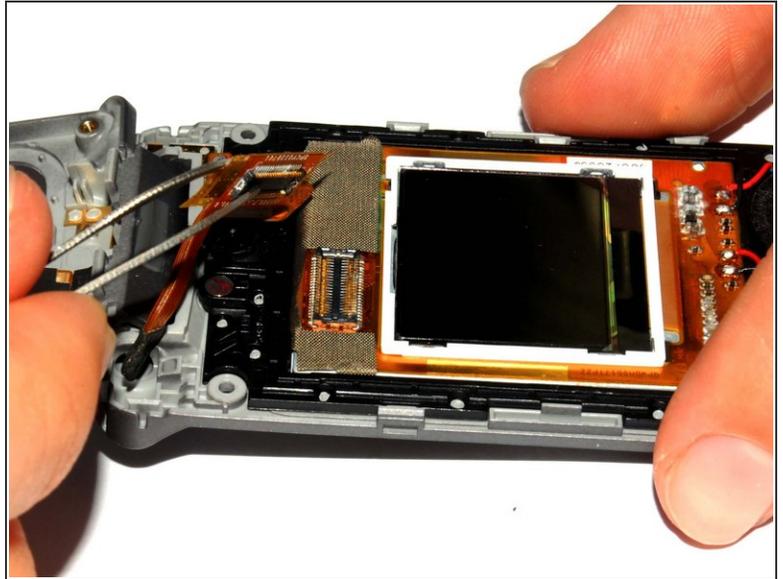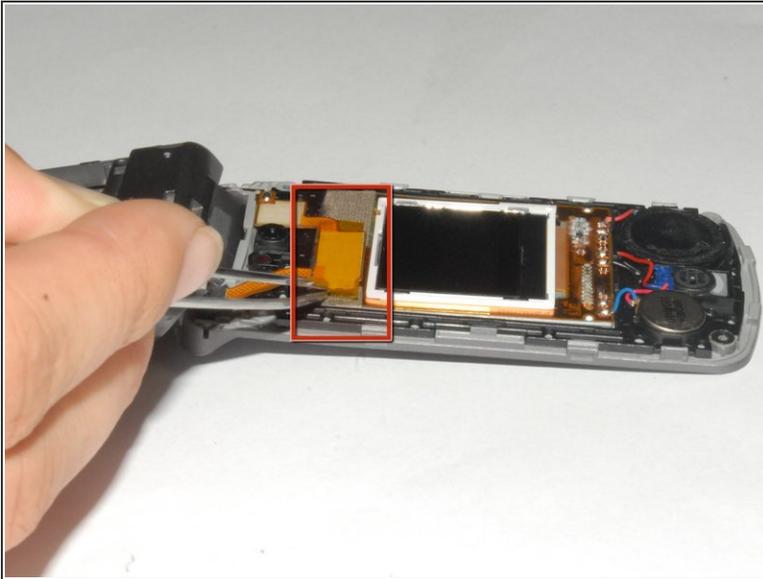



- Use the tweezers to lift the display adapter off the screen component.

Step 6

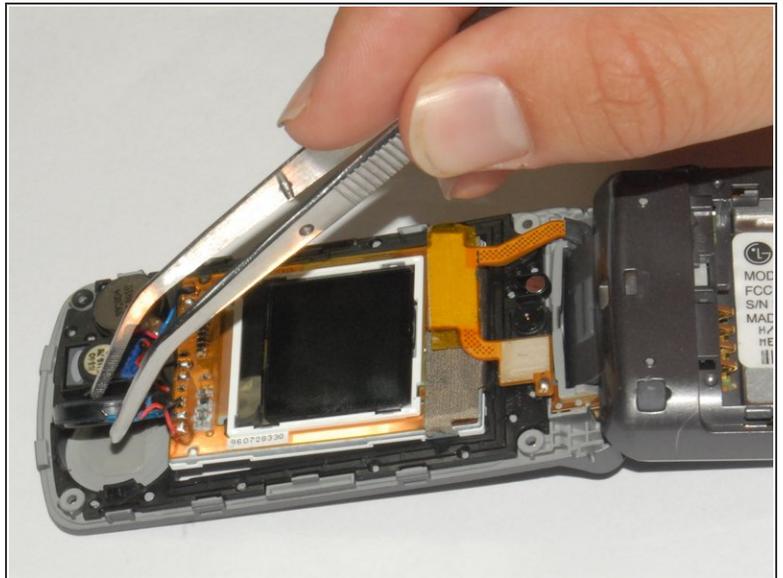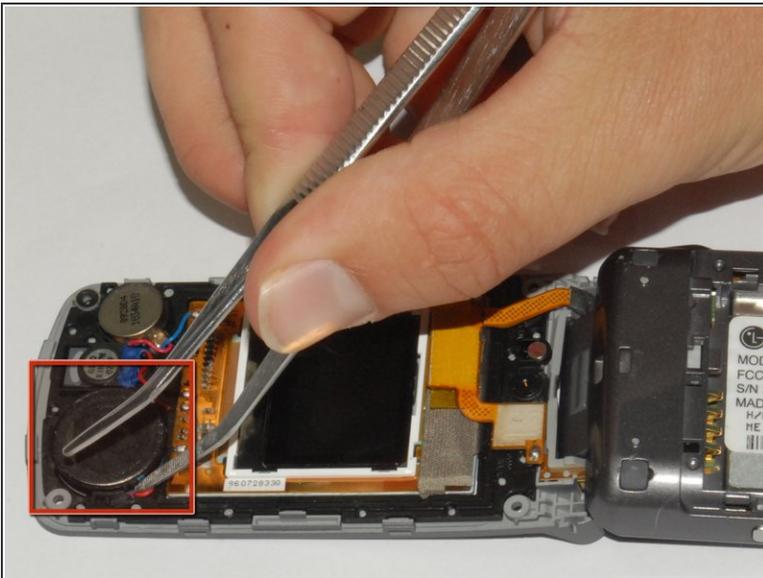



- Using tweezers remove the speaker from its casing.
- ⓘ The speaker is adhered to the phone casing so it will take a small amount of force to remove it.

Step 7

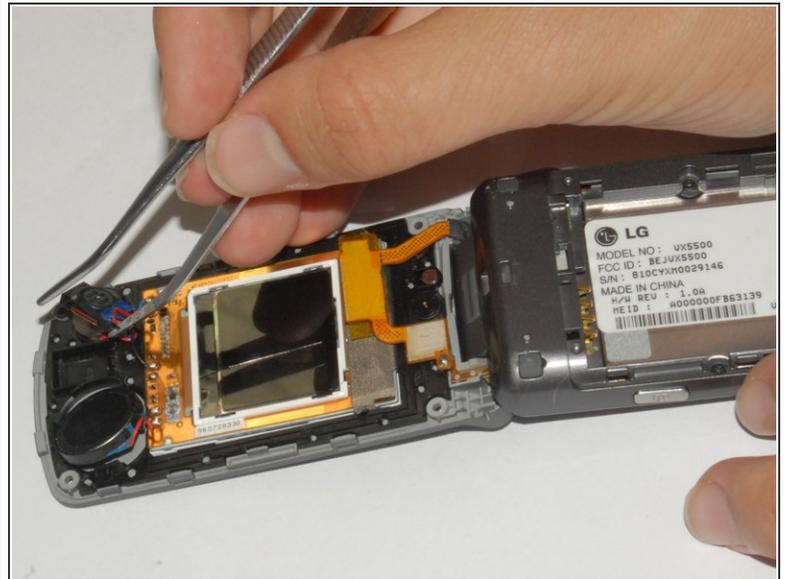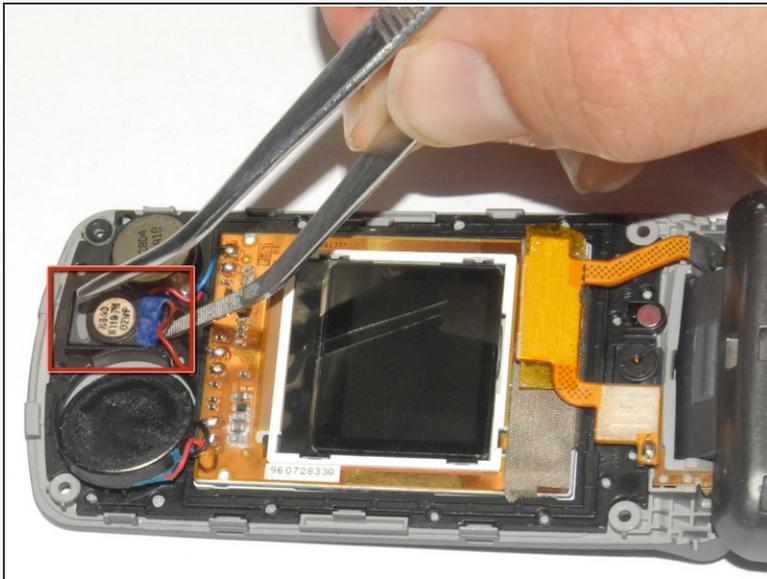


- Remove the earpiece by lifting it out of the phone casing using tweezers.
- ⓘ The earpiece is adhered to the phone casing so it will take a small amount of force to remove it.

Step 8

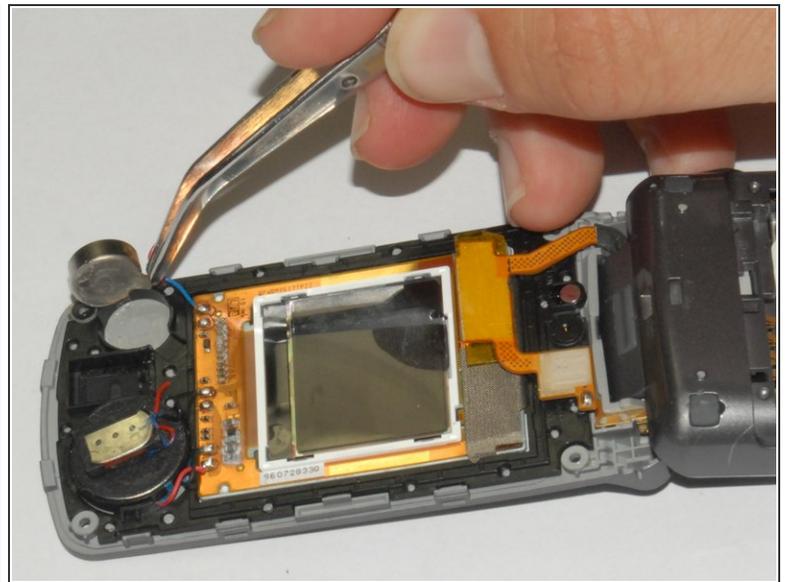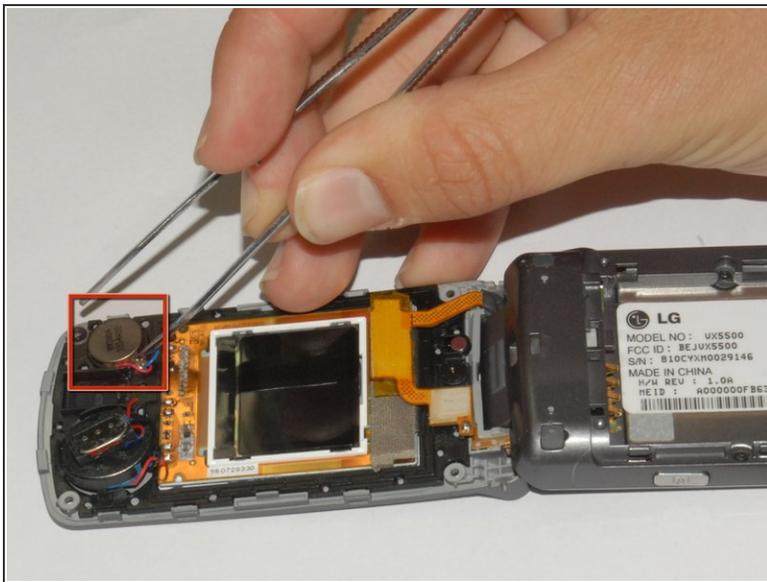

- Remove the vibration motor by lifting it out of the phone casing using tweezers.
- The motor is adhered to the phone casing so it will take a small amount of force to remove it.

Step 9

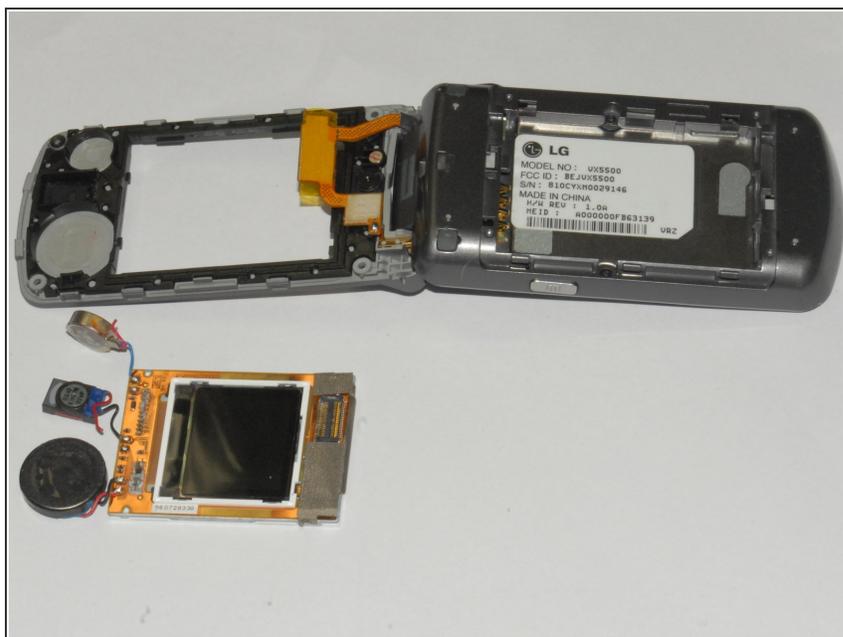

- Lift the screen components out of the phone.

To reassemble your device, follow these instructions in reverse order.